

SYSTEM/MODEL: TD-H/B

MODIFICATION: Eliminate pre-tone when paging is activated

DIFFICULTY LEVEL: 3 - Moderate - Removal or replacement of internal components.

COMPONENTS REQUIRED: N/A

INSTR/OPERATIONS: 1. Remove R47 from PC-978 inside PD-1.

REFERENCE DRAWING #: 1298-1066, 978-1066

**Aiphone's product warranty applies to products properly modified using these instructions.
However, if a unit is damaged as a result of improper modification, the warranty does not apply.**

PD-1 Schematic Diagram

ELIMINATE PRE-TONE WHILE PAGING

