

This operation guide describes the basic functions of your GT Series Tenant Station

For a complete operation manual (1.59 MB), scan QR code to download it from the manufacturer's website: www.aiphone.com/gt-1c-op-man




Power Source

This tenant station is powered by the system and will always remain on. Contact the building manager if the tenant station in this residence is not working.

Speaker

LCD Screen

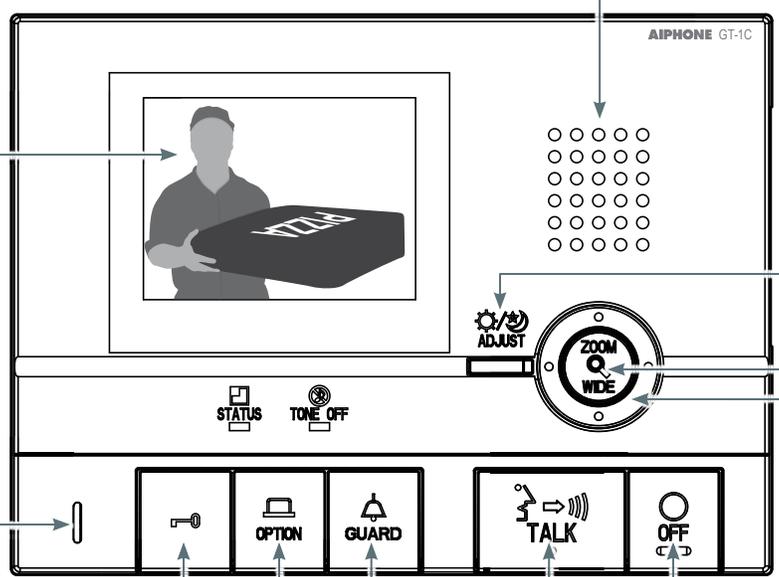

Microphone

Door Release Button

Push the Door Release Button to unlock the entrance during a call.

OPTION Button

Push the OPTION button to activate an external device, such as a garage opener (if included).

GUARD Button

Push the GUARD button to call all guard and/or concierge stations connected to the system (if included). While in conversation, push the GUARD button to view the visitor on a CCTV camera (if enabled).

OFF Button

Push the OFF button to "hang up" the conversation (this does not turn off the device).

TALK Button

Push the TALK button to answer an incoming call. Once answered, conversation becomes hands-free.

LCD Screen Brightness Control

Use the dial to adjust the LCD screen brightness levels (0~10).

Volume Control

Use the dial to adjust the communication volume (0~10).

Chime Volume Control

Use the dial to adjust the chime volume (0~10). The TONE OFF light blinks slowly when the chime is muted.

ADJUST Button

Push the ADJUST Button to compensate for low or bright backlight conditions when viewing video from a door station.

ZOOM/WIDE Button

Push the ZOOM/WIDE button to change the screen view or to make a menu selection.

Camera/Cursor Control Button

Push Δ , ∇ , \triangleleft , or \triangleright to change the camera view (zoom-view only). When making menu selections, push Δ or ∇ to change the cursor position.