

This operation guide describes the basic functions of your GT Series Tenant Station

For a complete operation manual (3.71 MB), scan QR code to download it from the manufacturer's website: www.aiphone.com/gt-2c-op-man



AIPHONE®



GT-2C Tenant Station

Operation Buttons

Push **REC/PLAY** to view recorded images. The **STATUS** light blinks to indicate new recordings.

Push **MONITOR** to see and hear activity in the hallway (personal tenant door station required) or at the main entrance (if enabled).

Push **CALL** to talk between rooms or to call all stations within the apartment (two or more tenant stations required).

Push **MENU** to view settings. When a symbol appears on screen, push the operation button beneath that symbol to activate the function (see chart below).

Power Supply

This tenant station has a dedicated power supply and will always remain on. Contact the building manager if the tenant station in this residence is not working. If power is lost for over 30 minutes, the blinking **STATUS** light indicates the date/time needs to be reset.

LCD Screen

Speaker

LCD Screen Brightness Control


Use the dial to adjust the LCD screen brightness levels (0~10).

Volume Control

Use the dial to adjust the communication volume (0~10).

Chime Volume Control

Use the dial to adjust the chime volume (0~10). The **TONE OFF** light blinks slowly when the chime is muted.

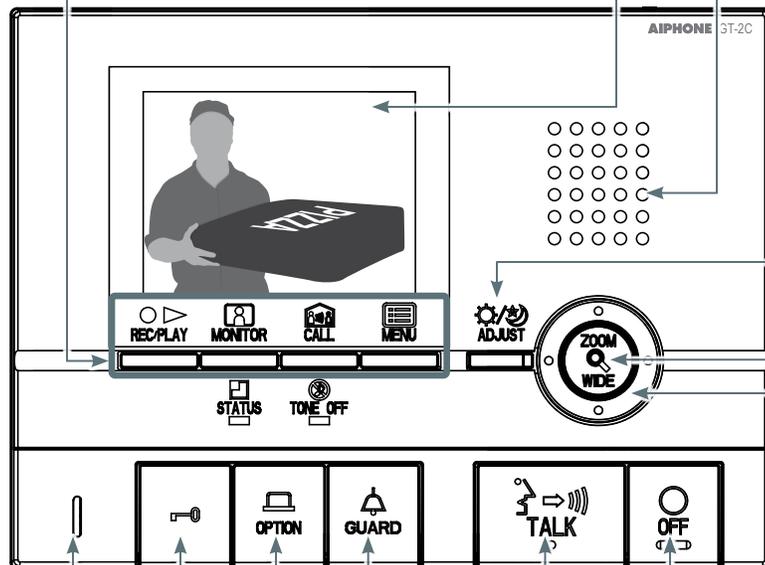

Mic

Door Release Button

Push the **Door Release Button** to unlock the entrance during a call.

OFF Button

Push the **OFF** button to "hang up" the conversation (this does not turn off the device).

OPTION Button

Push the **OPTION** button to activate an external device, such as a garage opener (if included).

GUARD Button

Push the **GUARD** button to call all guard and/or concierge stations connected to the system (if included). While in conversation, push the **GUARD** button to view the visitor on a CCTV camera (if enabled).

TALK Button

Push the **TALK** button to answer an incoming call. Once answered, conversation becomes hands-free.

ADJUST Button

Push the **ADJUST** Button to compensate for low or bright backlight conditions when viewing video from a door station.

ZOOM/WIDE Button

Push the **ZOOM/WIDE** button to change the screen view or to make a menu selection.

Camera/Cursor Control Button

Push Δ , ∇ , \triangleleft , or \triangleright to change the camera view (zoom-view only). When making menu selections, push Δ or ∇ to change the cursor position.

Symbol	Function
	Manually records
	Return to previous screen
	Play recordings
	Display previous recording
	Display next recording
	Open save/erase options
	Save a recording
	Erase a recording
	Fast-forward recordings
	Pause recordings
	Fast-forward frame by frame
	Reverse frame by frame
	Hide the display symbols
	Monitor entrance (if enabled)
	Communicate room to room
	Select function/setting