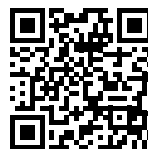 


# This operation guide describes the basic functions of your GT Series Tenant Station

For a complete operation manual (3.71 MB), scan QR code to download it from the manufacturer's website: [www.aiphone.com/gt-2h-op-man](http://www.aiphone.com/gt-2h-op-man)



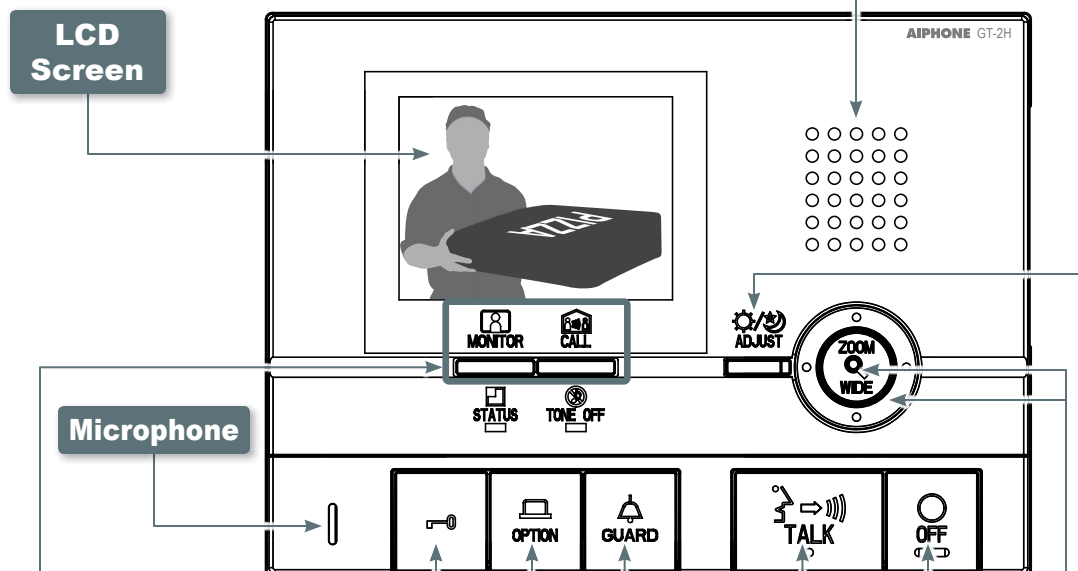 
**AIPHONE®**



**GT-2H Tenant Sub Station**

## Power Source

This tenant sub station is powered by the main tenant station (GT-2C) and will always remain on. Contact the building manager if the tenant sub station in this residence is not working.




**LCD Screen**

**Speaker**

 
**Microphone**

## Operation Buttons

 
 Push **MONITOR** to see and hear activity in the hallway (personal tenant door station required) or at the main entrance (if enabled).

 Push **CALL** to talk between rooms or to call all stations within the apartment (two or more tenant stations required).

 
## Door Release Button

 Push the Door Release Button to unlock the entrance during a call.

 
## OPTION Button

 Push the **OPTION** button to activate an external device, such as a garage opener (if included).

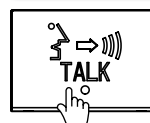 
## GUARD Button

 Push the **GUARD** button to call all guard and/or concierge stations connected to the system (if included) While in conversation, push the **GUARD** button to view the visitor on a CCTV camera (if enabled).


## OFF Button

 Push the **OFF** button to "hang up" the conversation (this does not turn off the device).


## TALK Button

 Push the **TALK** button to answer an incoming call. Once answered, conversation becomes hands-free.


## LCD Screen Brightness Control

 Use the dial to adjust the LCD screen brightness levels (0~10).


## Volume Control

 Use the dial to adjust the communication volume (0~10).


## Chime Volume Control

 Use the dial to adjust the chime volume (0~10). The **TONE OFF** light blinks slowly when the chime is muted.

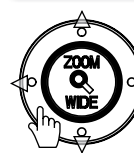 
## ADJUST Button

 Push the **ADJUST** Button to compensate for low or bright backlight conditions when viewing video from a door station.

## ZOOM/WIDE Button

 Push the **ZOOM/WIDE** button to change the screen view or to make a menu selection.

## Camera/Cursor Control Button

 Push  $\Delta$ ,  $\nabla$ ,  $\triangleleft$ , or  $\triangleright$  to change the camera view (zoom-view only). When making menu selections, push  $\Delta$  or  $\nabla$  to change the cursor position.