

AX-DV External Switch Modification

Connecting an external switch to the AX-DV

Use with:
AX Series


- INSTRUCTIONS -

Add two wires to unit to allow an external switch to activate the call in circuit.

DIAGRAM:



- 1) Remove front cover of AX-DV by removing security screw on bottom of unit.
- 2) Remove back cover by removing single screw on back of unit.

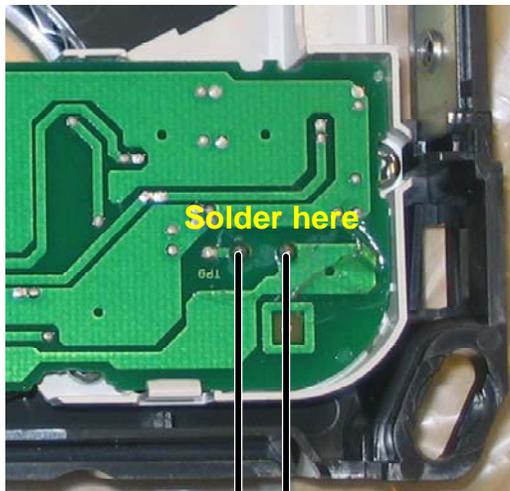

- 3) Solder two wires to back of switch as indicated by diagram.
- 4) Replace back cover and install unit.

