

SYSTEM/MODEL: LEM

MODIFICATION: Eliminate call tone on the LEM-1DL

DIFFICULTY LEVEL: 1 - Easy - Wire connection only.

COMPONENTS REQUIRED: None

INSTR/OPERATIONS: 1. Remove brass jumper between the "E" and "-" on the door/sub station.

REFERENCE DRAWING #:

**Aiphone's product warranty applies to products properly modified using these instructions.
However, if a unit is damaged as a result of improper modification, the warranty does not apply.**

MODIFICATION DIAGRAM

ELIMINATING CALL TONE ON LEM-1DL

