

IX Series

Registering and Assigning a Sound File

Custom sound files can be loaded to the IX Series door stations and master stations. These sound files can be used for status tones (door release, busy, and error) at the door station, ringback tones on the door station, and ring tones on the master station. Each IX Series station will allow for 100 custom sound files (200 seconds) to be loaded. The sound file must be in the following format: .wav, 16 bits, 8kHz, mono.

Registering a Sound File

Identification				System Information			
				Custom Sound Registry			
#	Number	Name	Type	Sound Name	Browse for .wav file	Sound Name	Browse for .wav file
001	101	Front Door	Video Door Station		Browse		Browse
002	102	Back Door	Audio Only Door Station		Browse		Browse
003	201	Master 1	Master Station		Browse		Browse
004	202	Master 2	Master Station		Browse		Browse


- 1) Select **Custom Sound Registry** from the menu on the left under **System Information**.
- 2) Click the **Browse** button and navigate to the sound file on your PC.
- 3) Select the sound file.
- 4) Click **Open**.
- 5) Repeat to upload multiple sound files, or to upload to a different station.
Each station is limited to 100 sound files (200 sec).
- 6) Click to save changes.

Assigning a Door Release Operating Tone

Identification				Function Settings				
				Door Release Settings				
#	Number	Name	Type	Door Release Tone	Door Release Authorization	Door Release Output Settings (same as Contact / Audio Output Settings)		
				Door Release Operating Tone	Authentication Key	Output Time [msec / sec]	Usage	
				Range	Range	200-2000 msec	3-300 s	
001	101	Front Door	Video Door Station	None	****	200-2000 msec	400	Door Release
002	102	Back Door	Audio Only Door Station	Call pattern 1	****	200-2000 msec	400	Door Release
003	201	Master 1	Master Station	Call pattern 2	****	200-2000 msec	400	Door Release
004	202	Master 2	Master Station	Call pattern 3	****	200-2000 msec	400	Door Release


- 1) Select **Door Release Settings** from the menu on the left under **Function Settings**.
- 2) Open the drop down for the **Door Release Operating Tone** for the door station and select the desired sound. Custom sounds will appear at the bottom of the list.
- 3) Repeat the process for each door station.
- 4) Click to save changes.
- 5) From the **File(F)** drop-down menu, select **Upload Settings to Station**.
- 6) Select the desired stations from the **Station List** and then click **Start Upload**. The status of the upload will be displayed for each station in the **Status** column displaying either **Success** or **Failed**.

Assigning a Door Station Ringback Tone

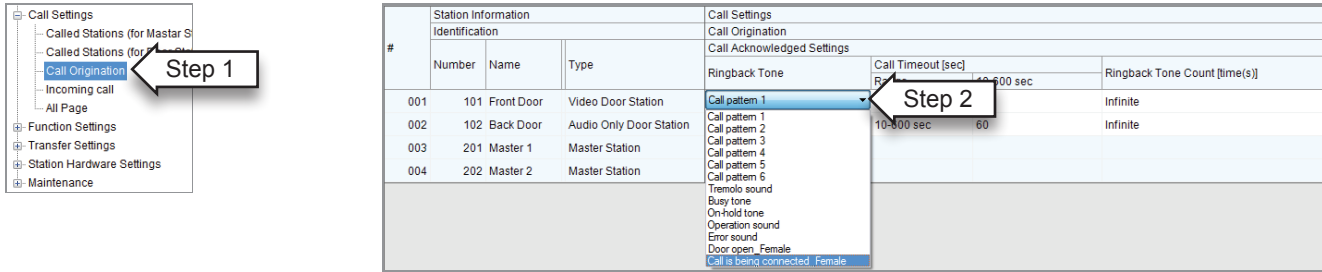

- 1) Select **Call Origination** from the menu on the left under **Call Settings**.
- 2) Open the drop down for the **Ringback Tone** for the door station and select the desired sound. Custom sounds will appear at the bottom of the list.
- 3) Repeat the process for each door station.
- 4) Click to save changes.
- 5) From the **File(F)** drop-down menu, select **Upload Settings to Station**.
- 6) Select the desired stations from the **Station List** and then click **Start Upload**. The status of the upload will be displayed for each station in the **Status** column displaying either **Success** or **Failed**.

Assigning a Master Station Ringtone

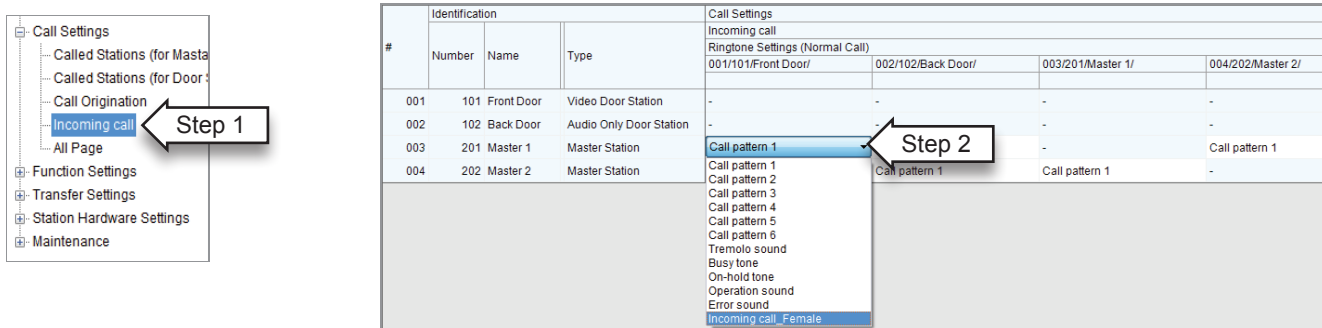

- 1) Select **Incoming call** from the menu on the left under **Call Settings**.
- 2) Open the drop down for the **Ringtone Settings** for the door station and select the desired sound. Custom sounds will appear at the bottom of the list.
- 3) Repeat the process for each door station and master station.
- 4) Click to save changes.
- 5) From the **File(F)** drop-down menu, select **Upload Settings to Station**.
- 6) Select the desired stations from the **Station List** and then click **Start Upload**. The status of the upload will be displayed for each station in the **Status** column displaying either **Success** or **Failed**.