

IXG System

IP network-compatible intercom

IXG Support Tool Setting Manual: Administrator Mode

Software version: 1.0.0.0 or later

Important

- Before configuring and using the system, read Setting Manual (this document) and Operation Manual carefully.
- For the installation and connection of each device, refer to "Installation Manual."
- Begin installation after reading and understanding the procedures for system configuration.
- The setting file is required for post-installation maintenance and service. Write the setting file to a CD-R or other media and be sure to give it to the customer.
- The illustrations and images in this manual may vary from the actual ones.
- Configure each function according to regulations, laws, and policies related to personal information in the applicable country and municipality.

Table of contents

Introduction

1. Notational symbols in this manual	7
2. Device type	8
3. Product manuals	9
4. Station description	10
4.1 Tenant Station (IXG-2C7(-*))	10
4.2 Master Station (IX-MV7-*)	11
4.3 Guard Station (IXG-MK)	13
4.4 Entrance Station (IXG-DM7(-*))	15
4.5 Video Door Station (IX-EA, IX-EAU)/Door Station (IX-FA)	16
4.6 Video Door Station (IX-DA)/Door Stations (IX-BA)	18
4.7 Video Door Station (IX-DV, IX-DVF(-*)) /Door Stations (IX-SSA(-*))	20
4.8 Lift Control Adaptor (IXGW-LC)	25
4.9 Gateway Adaptor (IXGW-GW)	27
5. Configuring the system	29
6. Flowcharts for configuring the system	30
6.1 For static IPv4 Address	32
6.2 For IPv4 address with DHCP	40
6.3 For static IPv6 Address	49
6.4 For stateless IPv6 address	58
6.5 For IPv6 address with DHCP	67
7. Flowcharts for Mobile App Integration	76
7.1 Registering the Mobile App	76
7.2 Adding a Mobile App to Each Unit	78
7.3 When the type of mobile device registered to a Residential unit was replaced	79
7.4 When the type of mobile device registered to a Guard or a Commercial unit was replaced	82

Startup and Configuration

1. System requirements	84
2. Installing IXG Support Tool	85
3. Login and registration of the station	86
4. How to Configure	89
4.1 Settings window	89
4.2 How to Configure	90
5. System settings list	92

Menu bar

1. File	101
1.1 Create new system/import setting data	101
1.2 Select Existing System	105
1.3 Delete Existing System	105
1.4 Restore System Settings	106

1.5	Exporting the IXG Support Tool System Configuration	108
1.6	Outputting IXG Supervision Tool Data	109
1.7	IXG Support Tool Settings	110
1.8	Exit	113
2.	Connection	114
2.1	Station Search	114
2.2	Association Settings	115
2.3	Download Settings	117
2.4	Upload Settings	119
2.5	Upload SSL certificate	122
2.6	Download Log File	123
2.7	Station Replacement	124
3.	App Integration	126
3.1	Create a New Administrator ID	126
3.2	Activation	128
3.3	Upload Settings to IXG Cloud Server	130
3.4	Applying QR Code for App Registration to a station	135
3.5	Export QR Code for App Registration	136
3.6	Site List / Property Manager Account Settings	137
3.7	Administrator Account Settings	139
3.8	Manual IXG Cloud Server and Gateway Sync	143
4.	View	144
5.	Language	145
6.	Help	146
6.1	About	146

System Settings

1.	Site Information	148
1.1	Site Information	148
1.2	Building Information	150
1.3	Units / Stations	151
1.4	Gateway Registration	155
1.5	Gateway Selection	156
2.	Station Information	157
2.1	Identification	157
2.2	ID / Password	159
2.3	Time	161
3.	Network Settings	164
3.1	IP Address	164
3.2	DNS	169
3.3	Multicast Address	171
3.4	Video	173
3.5	Audio	180
3.6	Packet Priority	182
3.7	NTP	184
4.	System Information	187
4.1	Station List	187

4.2	Mobile App List	190
4.3	Network Camera List	192
4.4	Group	196
4.5	Custom Sound Registry	199
5.	Call Settings	202
5.1	Called Stations (Door/Sub Stations)	202
5.2	Call Origination	205
5.3	Guard Button (IXG-2C7)	209
6.	Option Input / Relay Output Settings	210
6.1	Option Input	210
6.2	Relay Output	212
7.	Paging Settings	216
7.1	All Page	216
8.	Function Settings	218
8.1	Door Release	218
8.2	Network Camera Integration	222
8.3	Email	227
8.4	Recording	233
8.5	CSR	236
8.6	SSL Certificate	238
8.7	Display Mode	241
9.	Transfer Settings	243
9.1	Absent Transfer	243
9.2	Delay Transfer	245
9.3	Schedule Transfer	247
10.	Station Settings	253
10.1	Speed Dials	253
10.2	Volume	256
10.3	Communication	258
10.4	Monitoring	259
10.5	Camera	261
11.	Entrance Station Settings	264
11.1	Display	264
11.2	Welcome Screen	268
11.3	Direct Call List	270
11.4	Access Code	271
11.5	Misc.	275
12.	Lift Control Settings	276
12.1	Registration	276
12.2	Pick Up Floor	277
12.3	Arrival Floor	278
12.4	Building Exit	279
13.	Maintenance	281
13.1	Firmware Update	281
13.2	Initialization	283
13.3	syslog	285

Additional Settings

1. Confirming Station Information	287
1.1 Confirming Station Information on the Entrance Station	287

Introduction

This manual describes IXG Support Tool in detail.

The IXG System offers a separate manual for Installation, Settings, and Operations. Refer to the relevant manual.

1. Notational symbols in this manual

The following symbols identify important information concerning operational procedures.

	Indicates that users may require caution (including warning / caution).
	Alerts users to prohibited actions.
	Restricts user actions / provides instructions.
	Tips and additional information for operation.

- Terms displayed on master station and PC screens are indicated as **[XXXX]**.
- Page reference are shown as "[Title \(→ page XX\)](#)," [\(→ page XX\)](#), or [page XX](#).

2. Device type

The stations are shown as below.


	Device Type	Example Model Name
Tenant Stations	IXG-2C7(-*)	IXG-2C7, IXG-2C7-L
Master Stations	IX-MV7-*	IX-MV7-HW, IX-MV7-W, IX-MV7-HB, IX-MV7-B
Guard Stations	IXG-MK	IXG-MK※1
Video Entrance Stations	IXG-DM7(-*)	IXG-DM7, IXG-DM7-HID
Video Stations	IX-DV, IX-DVF(-*)	IX-DV, IX-DVF, IX-DVF-P, IX-DVF-L, IX-DVF-2RA, IX-DVF-RA
	IX-DA	IX-DA
Audio Stations	IX-SSA(-*)	IX-SSA, IX-SSA-2RA, IX-SSA-RA
	IX-BA	IX-BA
	IX-FA	IX-FA※2
Lift Control Adaptor	IXGW-LC	IXGW-LC
Gateway Adaptor	IXGW-GW	IXGW-GW
Intercom Application (AIPHONE IXG)	Intercom App	ASP-IXGI, ASP-IXGA

※1 Scheduled for release in the 3rd quarter of 2020.

※2 Japan only

3. Product manuals


Read the "Installation Manual," "Setting Manual," and "Operation Manual" as needed. Have the person who installs or configures the product refer to the relevant manuals.

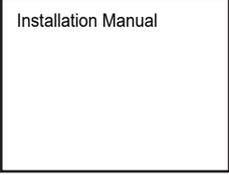 <p>Installation Manual</p>	<p>Installation Manual (comes with each station.) Refer to when installing and connecting each station. (For installers)</p>
<p>The manuals listed to the right can be found on our Web site at "https://www.aiphone.net/product/support/" for download and reference. Download and refer to these manuals as necessary.</p>	<p>IXG Support Tool Setting Manual (Electronic format (PDF file).) Describes how to configure and maintain the system using IXG Support Tool. (For system administrator)</p>
	<p>Monitoring Software (IXG Supervision Tool) Operation Manual (Electronic format (PDF file).) Describes how to use the IXG Supervision Tool. (For system administrator)</p>
	<p>Operation Manual (Electronic format (PDF file).) Describes how to use each station. (For user)</p>
	<p>Installation Manual (Electronic format (PDF file).) Describes how to install each station. (For installers)</p>

4. Station description

4.1 Tenant Station (IXG-2C7(-*))

■ Part names

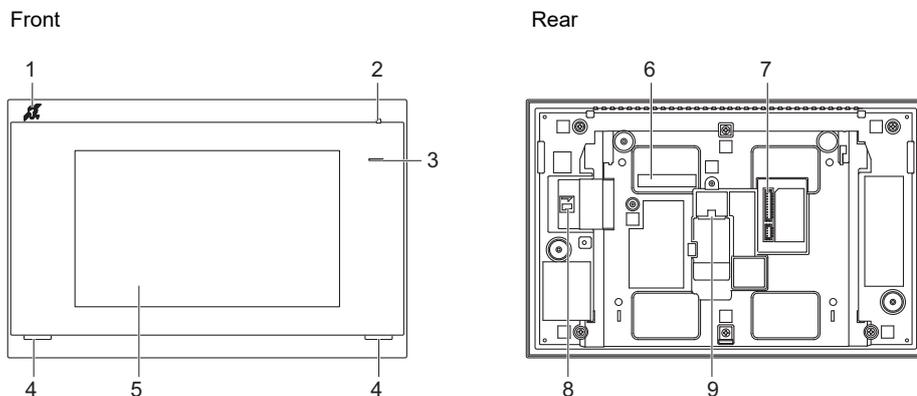

1	Hearing aid T-mode compatibility symbol (IXG-2C7-L only)	6	MAC address
2	Microphone	7	Option connector terminal
3	Status indicator (Blue)	8	microSD card slot
4	Speaker	9	LAN (PoE) port
5	Touchscreen LCD		

■ Indicators

☀: ON, □: OFF


Name	Status (pattern)	Description
Status indicator	Blue flashing 	Booting
		Communication failure
		Firmware version updating
	Blue light 	Operating normally (may not light up when in standby depending on setting)

💡 Note

- For a status other than those noted here, refer to "Operation Manual."
- The display language is English by default.

4.2 Master Station (IX-MV7-*)

■ Part names

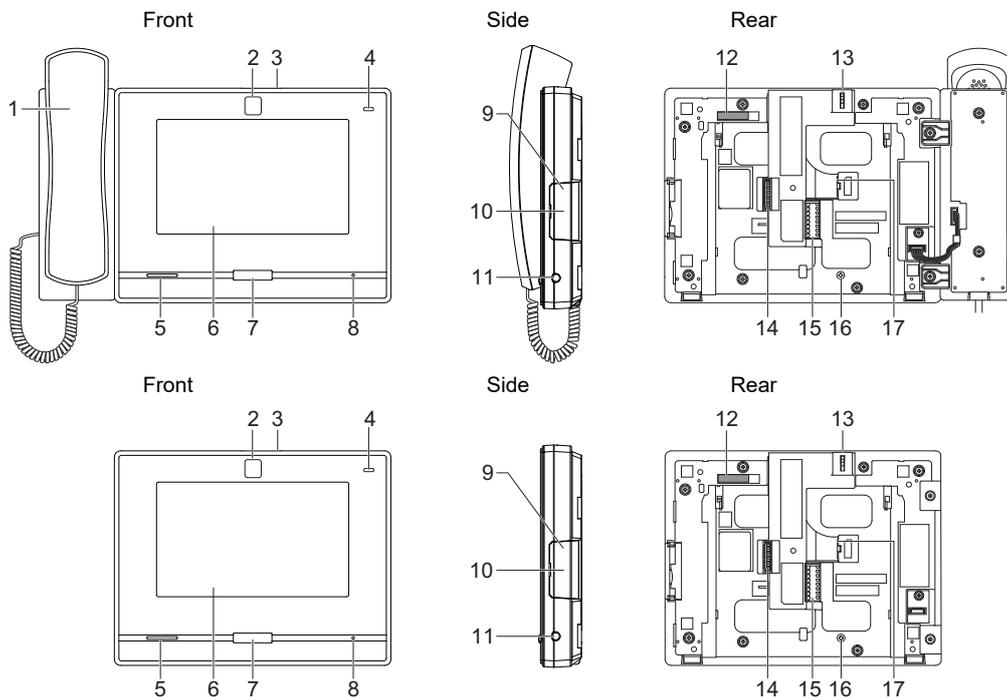





1	Handset	10	microSD card slot*1
2	Camera	11	3.5 mm jack
3	Camera privacy cover lever (on top)	12	MAC address
4	Status indicator (Orange/Blue)	13	Camera angle adjustment lever
5	Speaker	14	Option connector terminal
6	Touchscreen LCD	15	Low-voltage connection terminal
7	Home button	16	Desktop-stand fastening screw hole
8	Microphone	17	LAN port
9	Reset button*1*2		

*1 Found by opening cover.

*2 Press and hold the reset button for at least 1 second (less than 5 seconds), then release to restart (reset).

■ Indicators

: ON,  : OFF

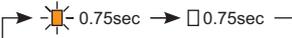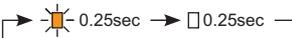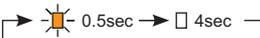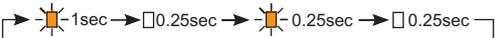Name	Status (pattern)	Description
Status indicator		Booting
		Device error, Startup error
		Communication failure Line supervision and device check error
		Firmware version updating
		Initializing
	Blue light	




Note

- For a status other than those noted here, refer to "Operation Manual."
- The display language is English by default.

4.3 Guard Station (IXG-MK)

■ Part names

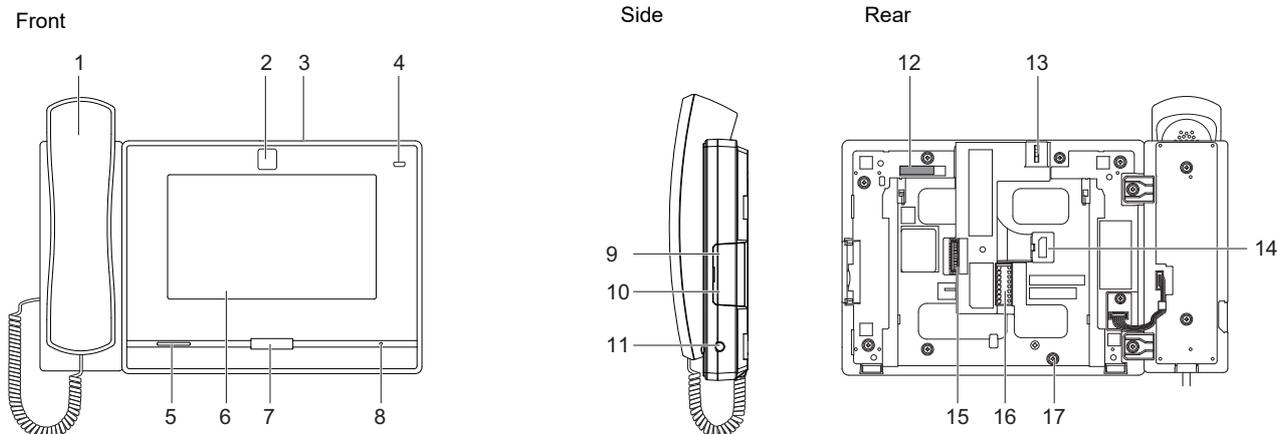

1	Handset	10	microSD card slot*1
2	Camera	11	3.5 mm jack
3	Camera privacy cover lever (on top)	12	MAC address
4	Status indicator (Orange/Blue)	13	Camera angle adjustment lever
5	Speaker	14	LAN (PoE) port
6	Touchscreen LCD	15	Option connector terminal
7	Home button	16	Low-voltage connection terminal
8	Microphone	17	Desktop-stand fastening screw hole
9	Reset button*1*2		



*1 Found by opening cover.

*2 Press and hold the reset button for 1 - 4 seconds, then release to restart station.

*3 Scheduled for release in the 3rd quarter of 2020.

■ Indicators

: ON,  : OFF

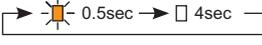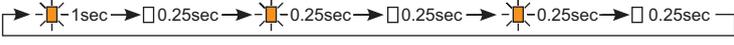Name	Status (pattern)		Description
Status indicator	Orange flashing		Booting
			Communication failure
			Firmware version updating
			Initializing
	Blue light		Operating normally (may not light up when in standby depending on setting)




Note

- For a status other than those noted here, refer to "Operation Manual."
- The display language is English by default.

4.4 Entrance Station (IXG-DM7(-*))

Part names

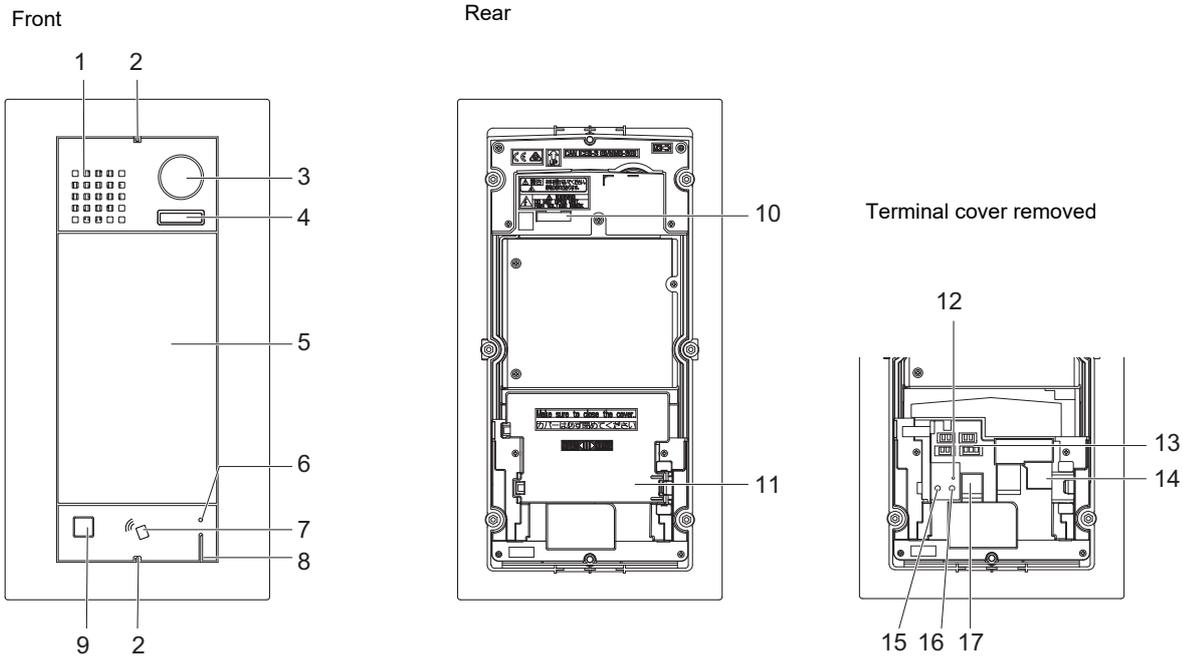

1	Speaker	10	MAC address
2	Special screw	11	Terminal cover
3	Camera	12	microSD card indicator (Red)* ³
4	LED for night illumination* ¹	13	Connectors* ³
5	Touchscreen LCD	14	LAN (PoE) port* ³
6	Card reader indicator (Red/Green)* ² (IXG-DM7-HID only)	15	Reset button* ³ * ⁴
7	Card reader (IXG-DM7-HID only)	16	microSD card release button* ³
8	Microphone	17	microSD card slot* ³
9	Sensor		

*1 Lights ON when rebooting.

Flashes when the station is booting or during ID/password initialization.

*2 Always lit ON red. If the proximity key is authenticated, it will light ON (green) for approximately 3 seconds.

*3 Found by opening terminal cover.


*4 Press and hold the reset button for 1 - 4 seconds, then release to restart station.

Note

- The display language is English by default.

4.5 Video Door Station (IX-EA, IX-EAU)/Door Station (IX-FA)

Part names

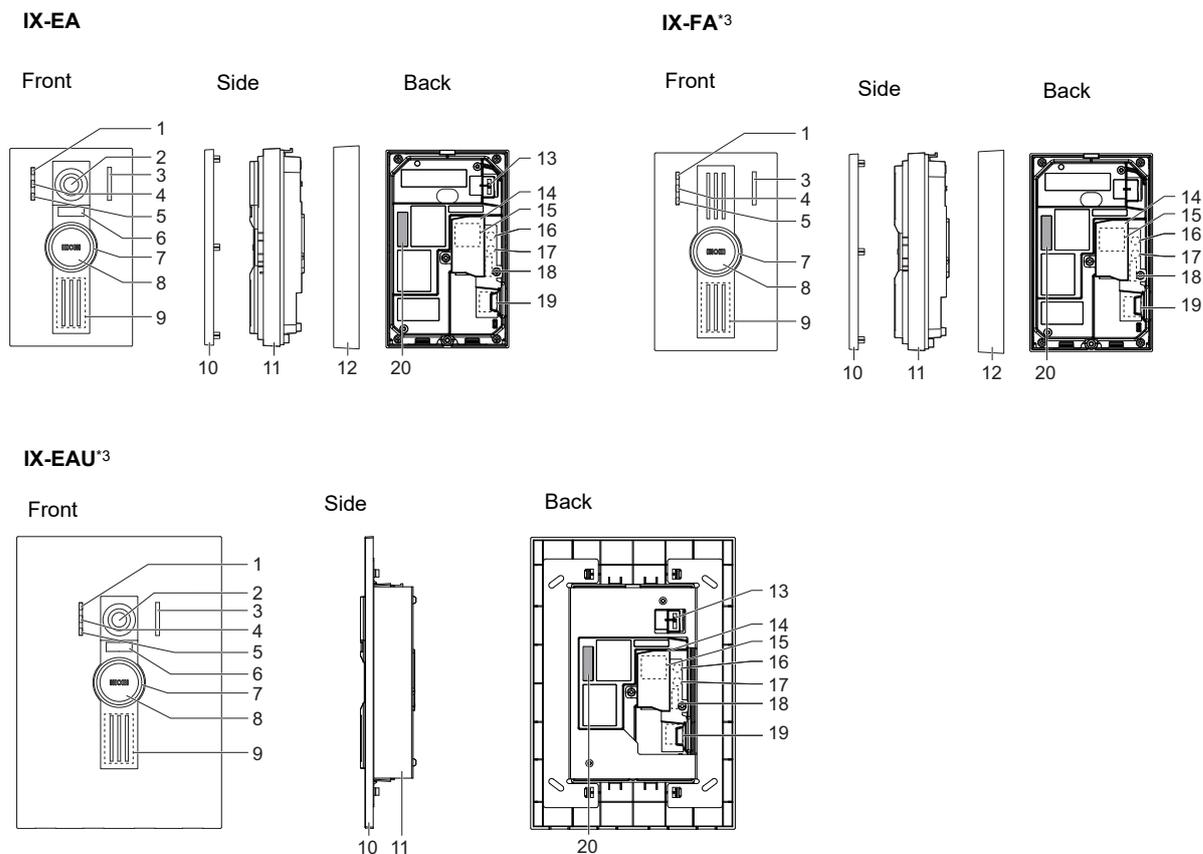

1	Call indicator (Green)	11	Main unit
2	Camera	12	Mount
3	Microphone	13	Camera angle adjustment lever
4	Communication indicator (Orange)	14	Terminal cover
5	Door release indicator (Green)	15	LAN port*1
6	LED for night illumination	16	Reset button*1*2
7	Status indicator (Orange/Blue) The ring around the button will illuminate.	17	microSD card release button*1
8	Call Button	18	Option connector terminal*1
9	Speaker	19	microSD card slot*1
10	Panel	20	MAC address






*1 Accessible when terminal cover is opened.

*2 Press and hold the reset button for 1 - 4 seconds, then release to restart station.

*3 Japan only

■ Indicators

: ON, : OFF

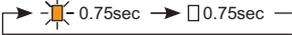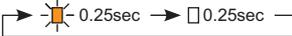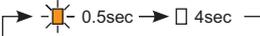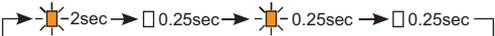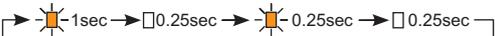Name	Status (pattern)	Description
Status indicator	Orange flashing 	Booting
		Device error, Startup error
		Communication failure
		Firmware version updating
		Mounting/unmounting microSD card
		Initializing
Blue light		Standby




Note

- For a status other than those noted here, refer to "Operation Manual."

4.6 Video Door Station (IX-DA)/Door Stations (IX-BA)

■ Part names

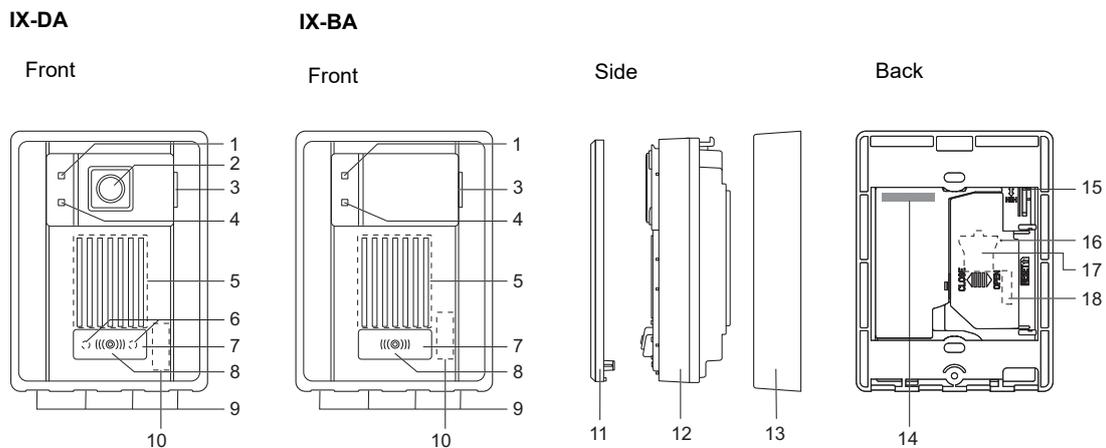

1	Call indicator (Orange)	10	MAC address (beneath the panel)
2	Camera	11	Panel
3	Microphone	12	Main unit
4	Communication indicator (Green)	13	Mounting frame
5	Speaker	14	MAC address
6	LED for night illumination	15	Camera angle adjustment lever (IX-DA only)
7	Call Button	16	Reset button ^{*1*2}
8	Status indicator (Red)	17	LAN port ^{*1}
9	Drain holes (4)	18	Connectors ^{*1}

*1 Found by opening terminal cover.

*2 Press and hold the reset button for 1 - 4 seconds, then release to restart station.

■ Indicators

☀: ON, □ : OFF

Name	Status (pattern)	Description
Status indicator	Red flashing ☀ 0.75sec → □ 0.75sec	Booting
	☀ 0.25sec → □ 0.25sec	Device error
	☀ 0.5sec → □ 4sec	Communication failure
	☀ 1sec → □ 0.25sec → ☀ 0.25sec → □ 0.25sec → ☀ 0.25sec → □ 0.25sec	Firmware version updating
	☀ 1sec → □ 0.25sec → ☀ 0.25sec → □ 0.25sec	Initializing
	Red light ☀	Standby



Note


- For a status other than those noted here, refer to "Operation Manual."

4.7 Video Door Station (IX-DV, IX-DVF(-*)) /Door Stations (IX-SSA(-*))


■ Part names

IX-DV

Front

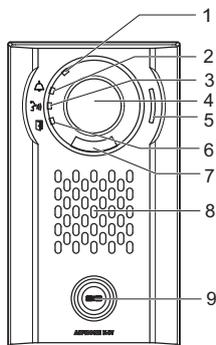


Back

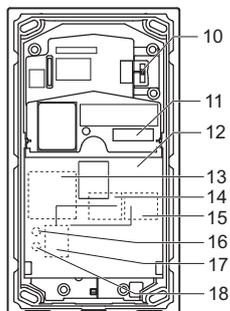


IX-DVF

Front

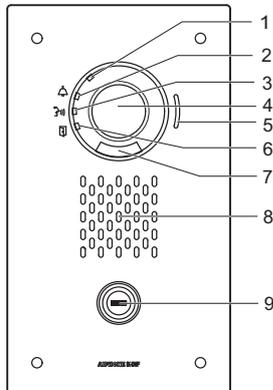

Back


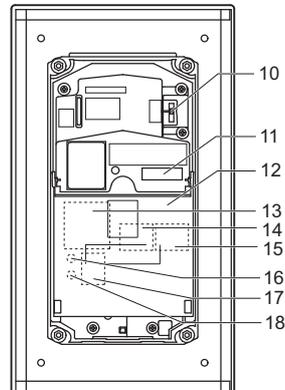


1	Status indicator (Orange/Blue)	10	Camera angle adjustment lever
2	Call indicator (Green)	11	MAC address
3	Communication indicator (Orange)	12	Terminal cover
4	Camera	13	Option connector terminal*1
5	Microphone	14	LAN2 terminal (PoE/PSE)*1
6	Door release indicator (Green)	15	LAN1 terminal (PoE/PD)*1
7	LED for night illumination	16	Reset button*1*2
8	Speaker	17	microSD card slot*1
9	Call Button Surrounding area is lit up with blue light.	18	microSD card release button*1



*1 Accessible when terminal cover is opened.

*2 Press and hold the reset button for 1 - 4 seconds, then release to restart station.

IX-DVF-2RA

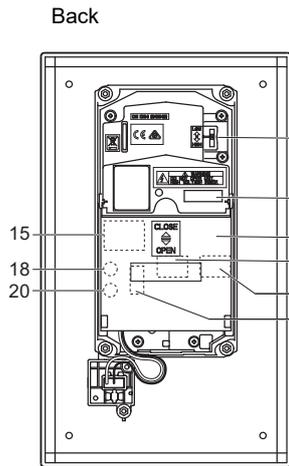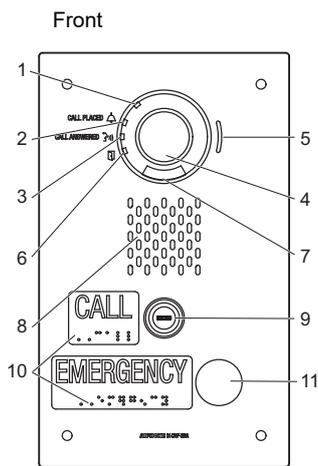

IX-DVF-RA

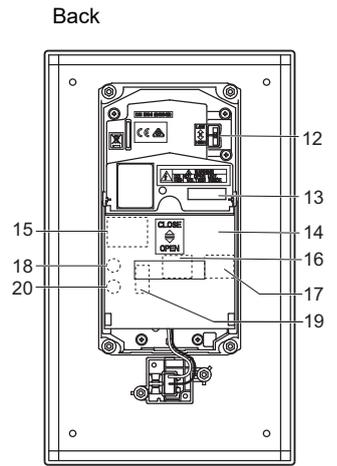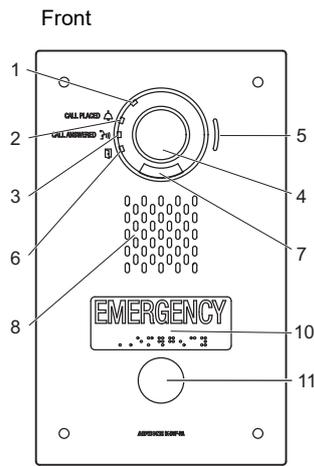


1	Status indicator (Orange/Blue)	11	Urgent call button
2	Call indicator (Green)	12	Camera angle adjustment lever
3	Communication indicator (Orange)	13	MAC address
4	Camera	14	Terminal cover
5	Microphone	15	Option connector terminal*1
6	Door release indicator (Green)	16	LAN2 terminal (PoE/PSE)*1
7	LED for night illumination	17	LAN1 terminal (PoE/PD)*1
8	Speaker	18	Reset button*1*2
9	Call Button Surrounding area is lit up with blue light.	19	microSD card slot*1
10	Braille	20	microSD card release button*1

*1 Found by opening terminal cover.


*2 Press and hold the reset button for 1 - 4 seconds, then release to restart station.

IX-DVF-P

Front

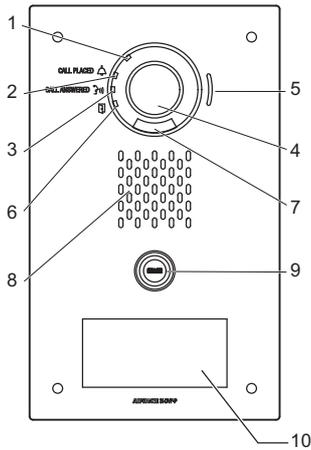


Back

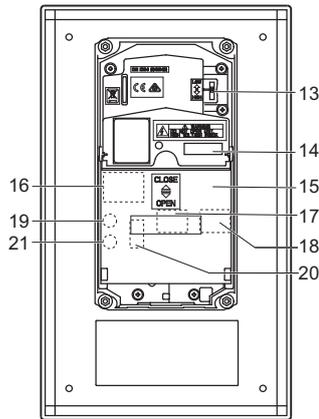


IX-DVF-L

Front

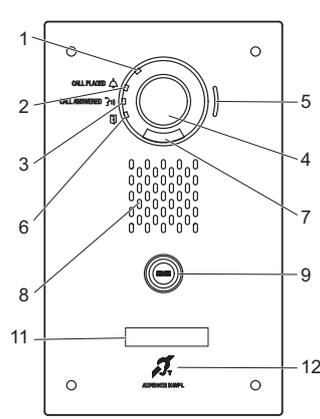

Back

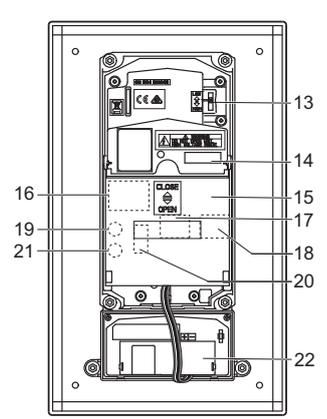


1	Status indicator (Orange/Blue)	12	Hearing aid (T mode) compatible microphone
2	Call indicator (Green)	13	Camera angle adjustment lever
3	Communication indicator (Orange)	14	MAC address
4	Camera	15	Terminal cover
5	Microphone	16	Option connector terminal*1
6	Door release indicator (Green)	17	LAN2 terminal (PoE/PSE)*1
7	LED for night illumination	18	LAN1 terminal (PoE/PD)*1
8	Speaker	19	Reset button*1*2
9	Call Button Surrounding area is lit up with blue light.	20	microSD card slot*1
10	HID reader	21	microSD card release button*1
11	Nameplate (with backlight)	22	Hearing aid unit


*1 Found by opening terminal cover.

*2 Press and hold the reset button for 1 - 4 seconds, then release to restart station.


IX-SSA

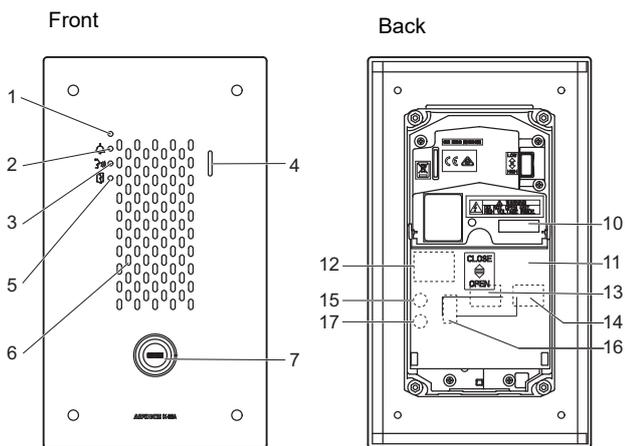

IX-SSA-2RA

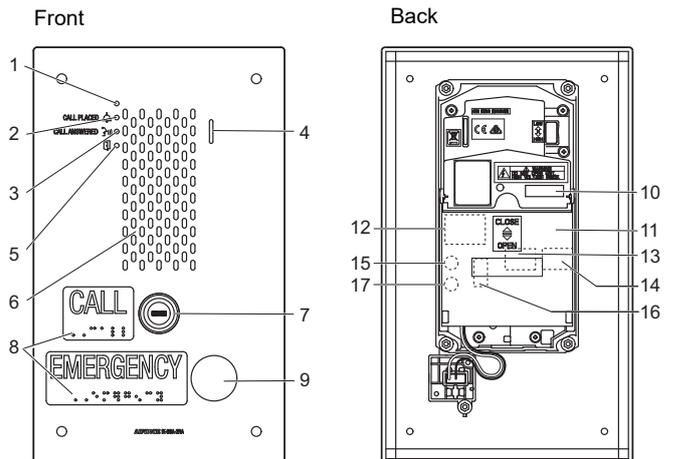

IX-SSA-RA

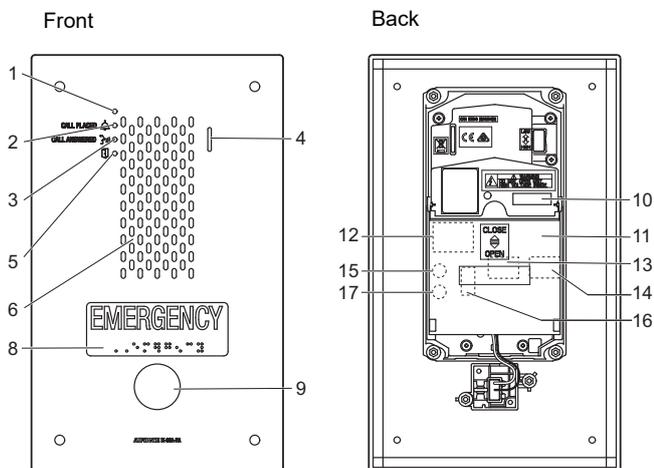


1	Status indicator (Orange/Blue)	10	MAC address
2	Call indicator (Green)	11	Terminal cover
3	Communication indicator (Orange)	12	Option connector terminal*1
4	Microphone	13	LAN2 terminal (PoE/PSE)*1
5	Door release indicator (Green)	14	LAN1 terminal (PoE/PD)*1
6	Speaker	15	Reset button*1*2
7	Call Button Surrounding area is lit up with blue light.	16	microSD card slot*1
8	Braille	17	microSD card release button*1
9	Urgent call button		

*1 Found by opening terminal cover.

*2 Press and hold the reset button for 1 - 4 seconds, then release to restart station.

■ Indicators

: ON, : OFF

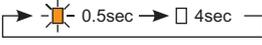Name	Status (pattern)		Description
Status indicator	Orange flashing		Booting
			Device error, Startup error
			Communication failure
			Firmware version updating
			Mounting/unmounting microSD card
			Initializing
	Blue light		Standby




Note

- For a status other than those noted here, refer to "Operation Manual."

4.8 Lift Control Adaptor (IXGW-LC)

■ Part names

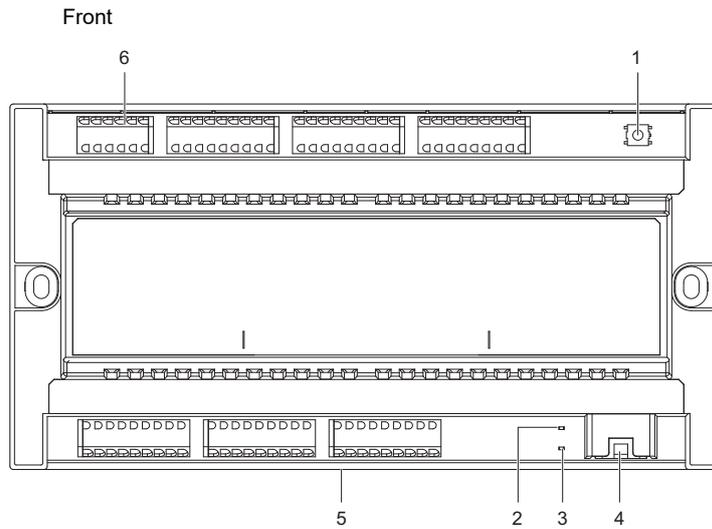


1	Reset button*1	4	LAN (PoE) port
2	Status indicator (Orange)	5	Lock release lever (Back)
3	Status indicator (Green)	6	Low-voltage connection terminal

*1 Press and hold the reset button for 1 - 4 seconds, then release to restart station.

*2 The MAC address is found on the back on the device.


■ Indicators

☀: ON, □ : OFF

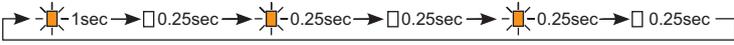Name	Status (pattern)		Description
Status indicator	Orange flashing		Booting
			Firmware version updating
			Initializing
	Green light		Standby

4.9 Gateway Adaptor (IXGW-GW)

■ Part names

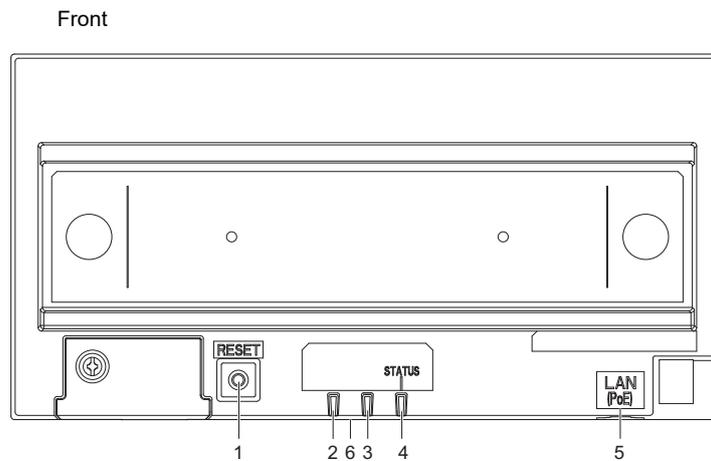

1	Reset button	4	Status indicator (Orange/Green)
2	Not used	5	LAN (PoE) port
3	Not used	6	Lock release lever (Back)

*1 Press and hold the reset button for 1 - 4 seconds, then release to restart station.




*2 The MAC address is found on the back on the device.

! Important

- Due to the features and services provided by the Gateway Adaptor and the AIPHONE IXG app, future required changes to device functionality, network communication, security, etc. may require firmware updates unavailable to the Gateway Adaptor. In this situation, the Gateway Adaptor would need to be replaced at the cost of the responsible party.

■ Indicators

☀: ON, □ : OFF

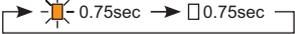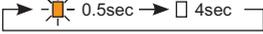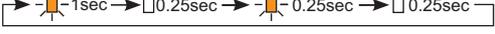Name	Status (pattern)		Description
Status indicator	Orange light		IXG Cloud Server authentication error
	Orange flashing		Booting
			Communication failure
			Firmware version updating
			Initializing
Green light		Standby	

5. Configuring the system

After installing and connecting all stations, configure the system based on how it will be used. Configure the system prior to using it.

The IXG System can be configured using the following methods.

- Configure the system using the "IXG Support Tool" application.
 - Install the application on a PC and use to create the configuration for all stations.
 - Search for IXG system stations on the network; assign and upload the setting file for the system.

There are two configuration modes for IXG Support Tool.

- Administrator mode: Configure all settings.
- Property Manager mode: Configure only the following settings.

Move-in Settings

- Units / Stations
- Identification
- Station List
- Mobile App List
- Network Camera List
- Group
- Called Stations (Door/Sub Stations)
- Guard Button (IXG-2C7)

Move-out Settings

- Resident Move-out
- Delete Unit Information

Misc.

- Access Code
- Welcome Screen
- Absent Transfer
- Delay Transfer
- Schedule Transfer

This document explains how to configure using Administrator mode. Refer to the separate "IXG Support Tool Setting Manual: Property Manager Mode" document for information on the Property Manager mode.

and Administrator: "Basic" and "Advanced."

- Advanced: Configure all settings.
- Basic: Configure only the following settings.
 - Site Information
 - Building Information
 - Units / Stations
 - Gateway Registration
 - Gateway Selection
 - Identification
 - ID / Password
 - IP Address
 - DNS
 - NTP

Basic


is displayed next to the titles of "Basic" items in this document.

Important

- Be sure to store the setting file that was created. If the setting file is lost, you may be charged a separate setting fee during maintenance or post-installation maintenance and service.

6. Flowcharts for configuring the system

When configuring the system using IXG Support Tool, follow the flowchart that fits the application. Save the settings after configuring the system. Otherwise, it may become impossible to restore the settings after maintenance or after-sales servicing.

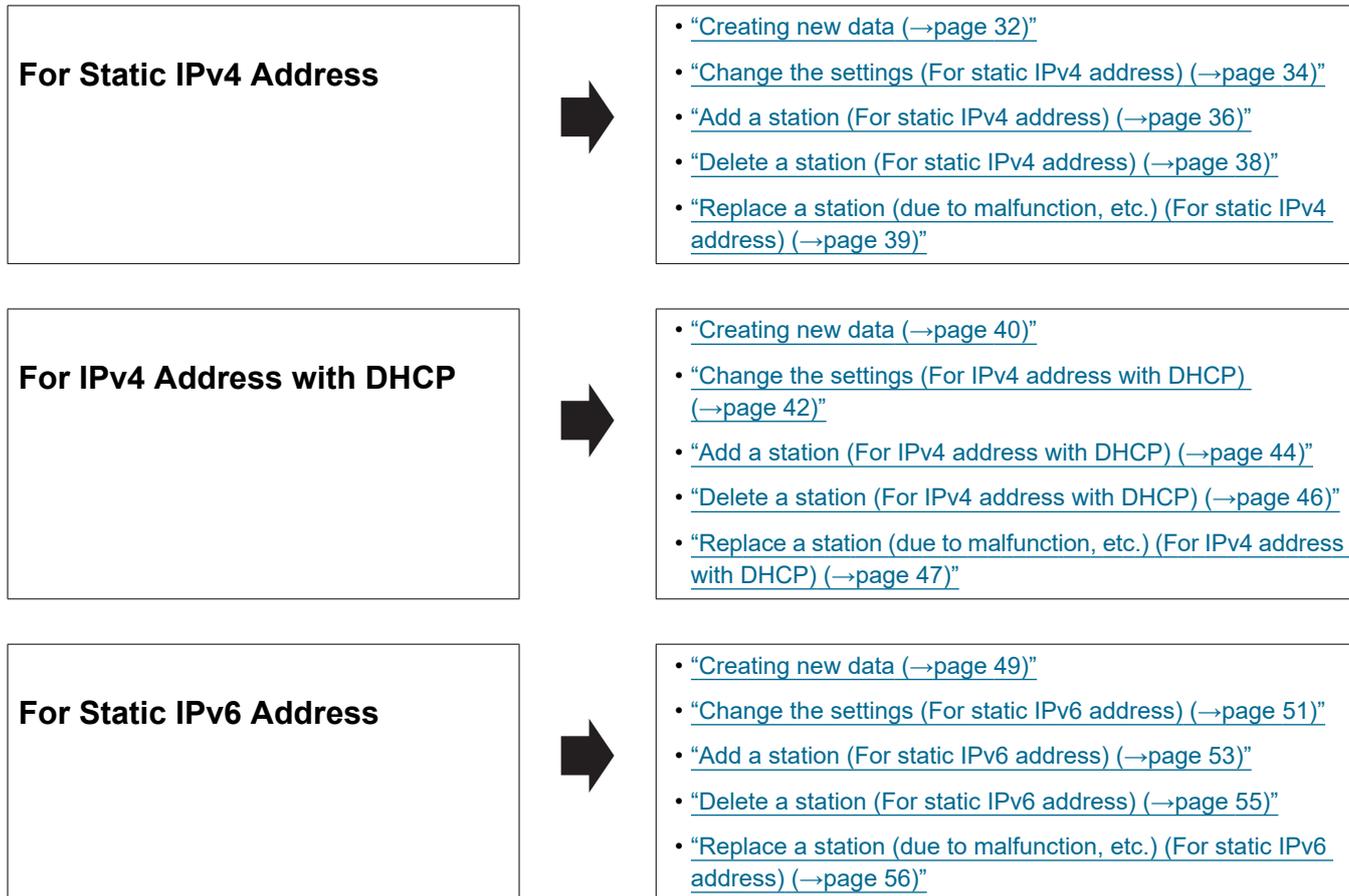

For stateless IPv6 Address



- [“Creating new data \(→page 58\)”](#)
- [“Change the settings \(For stateless IPv6 address\) \(→page 60\)”](#)
- [“Add a station \(For stateless IPv6 address\) \(→page 62\)”](#)
- [“Delete a station \(For stateless IPv6 address\) \(→page 64\)”](#)
- [“Replace a station \(due to malfunction, etc.\) \(For stateless IPv6 address\) \(→page 65\)”](#)

For IPv6 Address with DHCP



- [“Creating new data \(→page 67\)”](#)
- [“Change the settings \(For IPv6 address with DHCP\) \(→page 69\)”](#)
- [“Add a station \(For IPv6 address with DHCP\) \(→page 71\)”](#)
- [“Delete a station \(For IPv6 address with DHCP\) \(→page 73\)”](#)
- [“Replace a station \(due to malfunction, etc.\) \(For IPv6 address with DHCP\) \(→page 74\)”](#)

6.1 For static IPv4 Address

! Important

- Be sure to store the setting file that was created. Refer to [“Exporting the IXG Support Tool System Configuration \(→page 108\)”](#) for information on how to save the setting file.
If the setting file is not saved, it may be impossible to restore if post-installation maintenance and service is required.

6.1.1 Creating new data

Use flowchart to create new configuration, e.g., when installing a new system.

1. Set the language.

[“Language \(→page 145\)”](#)



2. "Create New System."

[“Create new system/import setting data \(→page 101\)”](#)



3. Configure.

Follow the instructions for each setting item and perform setup. [“System Settings \(→page 147\)”](#)



4. Install all stations.

Note the MAC addresses of all the stations.



5. Associate the created setting data to the station.

[“Association Settings \(→page 115\)”](#)



6. Upload the setting data to all stations.

[“Upload Settings \(→page 119\)”](#)



7. Set the time for all stations.

[“Time \(→page 161\)”](#)





8. Set the display language for each station (IX-MV7-*, IXG-2C7(-*), IXG-MK)

Refer to each station's Operation Manual.



9. If registering a Mobile App, configure app integration.

[“Registering the Mobile App \(→page 76\)”](#)



10. Complete

6.1.2 Change the settings (For static IPv4 address)

Use this flowchart when changing the settings.

1. Set the language.

["Language \(→page 145\)"](#)



2. Retrieve the setting data for all the stations.

["Download Settings \(→page 117\)"](#)



3. Perform setup.

Follow the instructions for each setting item and perform setup.

["System Settings \(→page 147\)"](#)

If using app integration, configure settings following the detailed explanation in "App Integration Flowchart."

["Flowcharts for Mobile App Integration \(→page 76\)"](#)



Has the "Building Use," "Building Name," "Building Number," "Unit Number," "Unit Type," "Station Number," "Station Name," "IP Address," "Camera Name," "Gateway Adaptor Use," or "Lift Control Adaptor Use" been changed?

YES



NO



Was "IP Address" changed from among these options?

YES



NO



4. Upload the setting data to the station whose settings were changed.

["Upload Settings \(→page 119\)"](#)



4. Because the setting data for the station whose IP address was changed is no longer associated, re-associate the data.

["Association Settings \(→page 115\)"](#)

The station will be restarted, and the changed "IP Address" will be reflected in the station.



4. Upload the setting data to all stations.

["Upload Settings \(→page 119\)"](#)



5. Complete



5. Upload the setting data to all stations.

["Upload Settings \(→page 119\)"](#)



5. Complete



6. Complete

6.1.3 Add a station (For static IPv4 address)

Use flowchart to add a station.

1. Set the language.

[“Language \(→page 145\)”](#)



2. Retrieve the setting data for all the stations.

[“Download Settings \(→page 117\)”](#)



3. Add the setting data.

[“System Settings \(→page 147\)”](#)

First, add the station data to [“Units / Stations \(→page 151\)”](#).



4. Install the additional station.



5. Associate the setting data with the additional station.

[“Association Settings \(→page 115\)”](#)



6. Upload the setting data to all stations.

[“Upload Settings \(→page 119\)”](#)



7. Set the time for the additional station.

[“Time \(→page 161\)”](#)





8. Set the display language of the station to add (IX-MV7-*, IXG-2C7(-*), IXG-MK).

Refer to each station's Operation Manual.



9. If using app integration, apply the changes to IXG Cloud Server.

[“Uploading an existing site to the IXG Cloud Server \(→page 132\)”](#)



10. Complete

6.1.4 Delete a station (For static IPv4 address)

Use flowchart to delete a station.

Important

- Be sure to delete the data for stations that do not exist in the system. If a page is placed without deleting, the operation may be delayed.

1. Set the language.

["Language \(→page 145\)"](#)



2. Retrieve the setting data for all the stations.

["Download Settings \(→page 117\)"](#)



3. From the setting data, delete the data of the station to be deleted.

["Units / Stations \(→page 151\)"](#)



4. Upload the setting data to all stations.

["Upload Settings \(→page 119\)"](#)



5. If using app integration, apply the changes to IXG Cloud Server.

["Uploading an existing site to the IXG Cloud Server \(→page 132\)"](#)



6. Complete

6.1.5 Replace a station (due to malfunction, etc.) (For static IPv4 address)

Use flowchart to replace a station.

1. Set the language.

["Language \(→page 145\)"](#)



Can the setting data of the station to be replaced be retrieved?

YES



2. Retrieve the setting data from the station to be replaced.

["Download Settings \(→page 117\)"](#)



3. Replace the station.

Note the MAC address of the station to be replaced.



4. Replace the setting data.

["Station Replacement \(→page 124\)"](#)



5. Set the display language of the replaced station (IX-MV7-*, IXG-2C7(-*), IXG-MK).

Refer to each station's Operation Manual.



6. Complete

NO



2. Replace the station.

Note the MAC address of the station to be replaced.



3. Replace the setting data.

*If the settings were changed with the station, they cannot be reflected.

["Station Replacement \(→page 124\)"](#)



4. Set the display language of the replaced station (IX-MV7-*, IXG-2C7(-*), IXG-MK).

Refer to each station's Operation Manual.



5. Complete

6.2 For IPv4 address with DHCP

! Important

- Configure so that a static IP address is assigned to the station by the DHCP server. Refer to the DHCP server's manual for information on how to configure.
- Be sure to store the setting file that was created. Refer to ["Exporting the IXG Support Tool System Configuration \(→page 108\)"](#) for information on how to save the setting file.
If the setting file is not saved, it may be impossible to restore if post-installation maintenance and service is required.

6.2.1 Creating new data

Use flowchart to create new configuration, e.g., when installing a new system.

1. Set up the DHCP server.



2. Set the language.

["Language \(→page 145\)"](#)



3. "Create New System."

["Create new system/import setting data \(→page 101\)"](#)



4. Configure.

Follow the instructions for each setting item and perform setup. ["System Settings \(→page 147\)"](#)



5. Install all stations.

Note the MAC addresses of all the stations.



6. Associate the created setting data to the station.

["Association Settings \(→page 115\)"](#)

Each station is restarted and the IP address assigned by DHCP server will be assigned.

If an IP address cannot be assigned, it will default to "192.168.1.160." If this happens, cycle power to the station. An IP address will be assigned again. Afterwards, perform association again.





7. Upload the setting data to all stations.

[“Upload Settings \(→page 119\)”](#)



8. Set the time for all stations.

[“Time \(→page 161\)”](#)



9. Set the display language for each station (IX-MV7-*, IXG-2C7(-*), IXG-MK)

Refer to each station's Operation Manual.



10. If registering a Mobile App, configure app integration.


[“Registering the Mobile App \(→page 76\)”](#)



11. Complete

6.2.2 Change the settings (For IPv4 address with DHCP)

Use this flowchart when changing the settings.

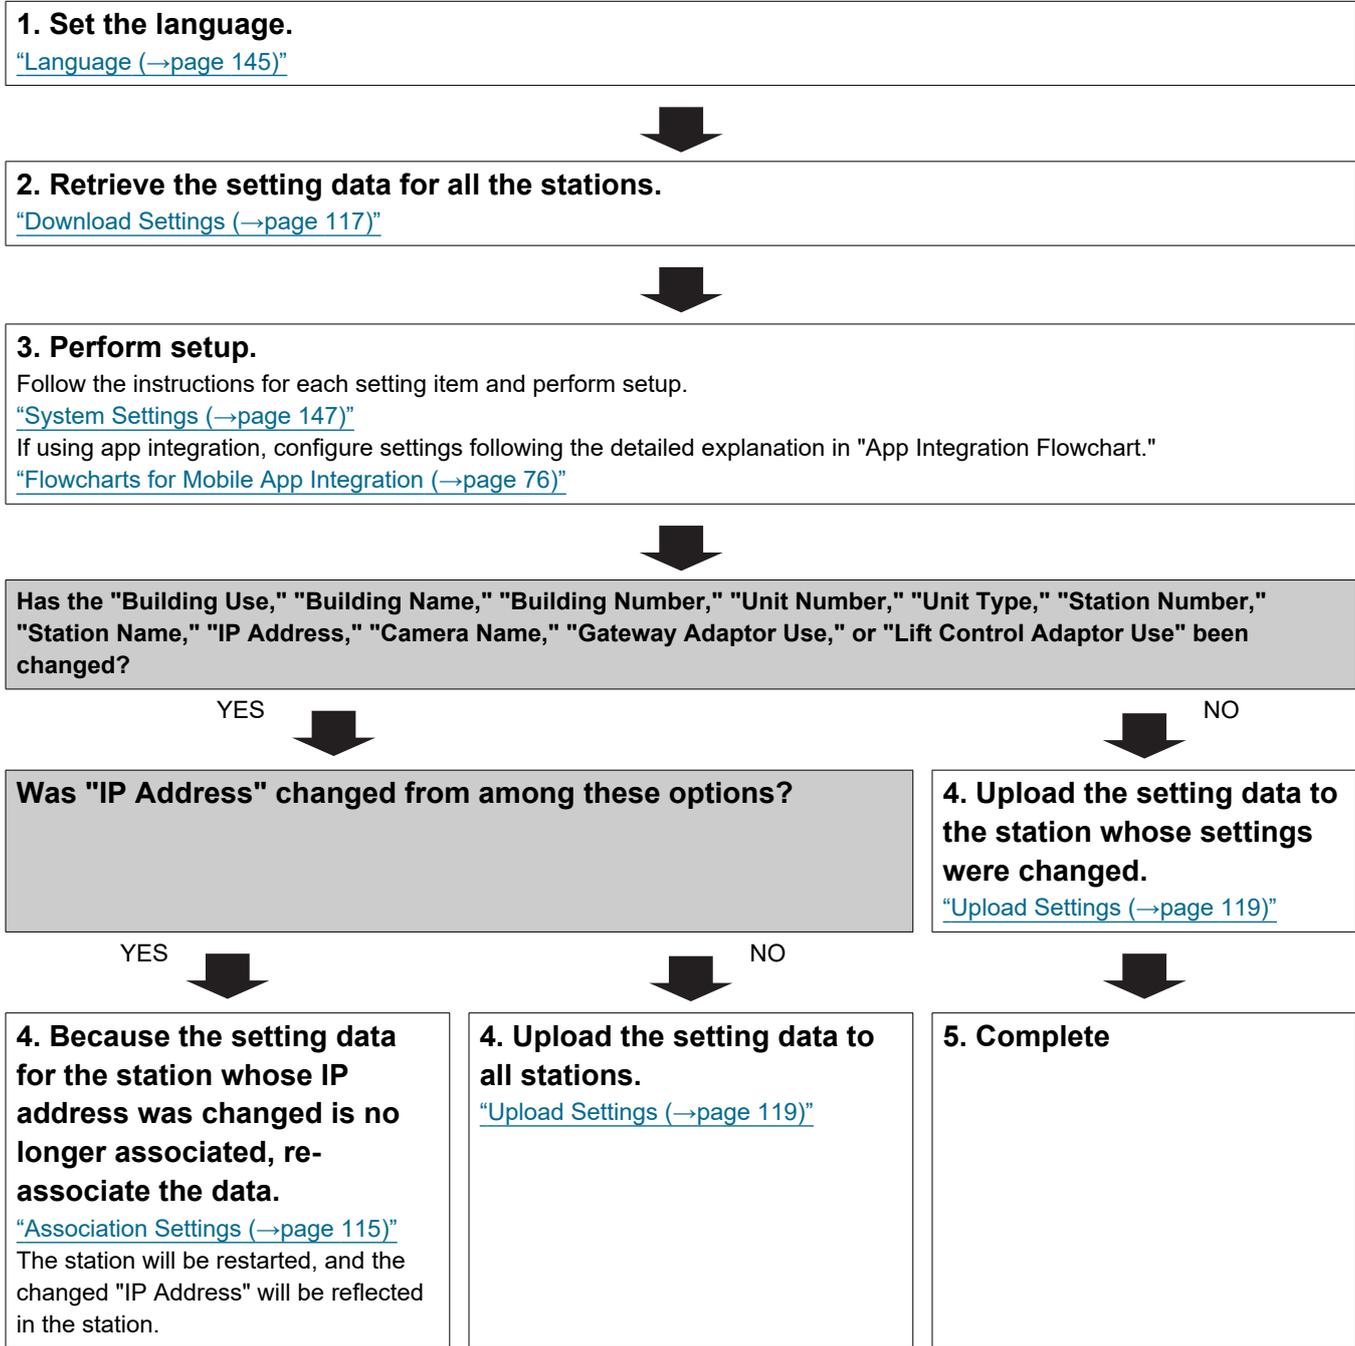



5. Upload the setting data to all stations.

["Upload Settings \(→page 119\)"](#)

5. Complete



6. Complete

6.2.3 Add a station (For IPv4 address with DHCP)

Use flowchart to add a station.

1. Configure so that the IP address for the station to be added to the DHCP server is assigned as a static address.

For information on DHCP server setting methods, refer to the DHCP server manual.



2. Set the language.

["Language \(→page 145\)"](#)



3. Retrieve the setting data for all the stations.

["Download Settings \(→page 117\)"](#)



4. Add the setting data.

["System Settings \(→page 147\)"](#)

First, add the station data to ["Units / Stations \(→page 151\)"](#).



5. Install the additional station.



6. Associate the setting data with the additional station.

["Association Settings \(→page 115\)"](#)

The station is restarted and the IP address assigned by DHCP server will be assigned.

If an IP address cannot be assigned, it will default to "192.168.1.160." If this happens, cycle power to the station. An IP address will be assigned again. Afterwards, perform association again.



7. Upload the setting data to all stations.

["Upload Settings \(→page 119\)"](#)





8. Set the time for the additional station.

[“Time \(→page 161\)”](#)



9. Set the display language of the station to add (IX-MV7-*, IXG-2C7(-*), IXG-MK).

Refer to each station's Operation Manual.



10. If using app integration, apply the changes to IXG Cloud Server.

[“Uploading an existing site to the IXG Cloud Server \(→page 132\)”](#)



11. Complete

6.2.4 Delete a station (For IPv4 address with DHCP)

Use flowchart to delete a station.

Important

- Be sure to delete the data for stations that do not exist in the system. If a page is placed without deleting, the operation may be delayed.

1. Set the language.

[“Language \(→page 145\)”](#)



2. Retrieve the setting data for all the stations.

[“Download Settings \(→page 117\)”](#)



3. From the setting data, delete the data of the station to be deleted.

[“Units / Stations \(→page 151\)”](#)



4. Upload the setting data to all stations.

[“Upload Settings \(→page 119\)”](#)



5. If using app integration, apply the changes to IXG Cloud Server.


[“Uploading an existing site to the IXG Cloud Server \(→page 132\)”](#)



6. Complete

6.2.5 Replace a station (due to malfunction, etc.) (For IPv4 address with DHCP)

Use flowchart to replace a station.

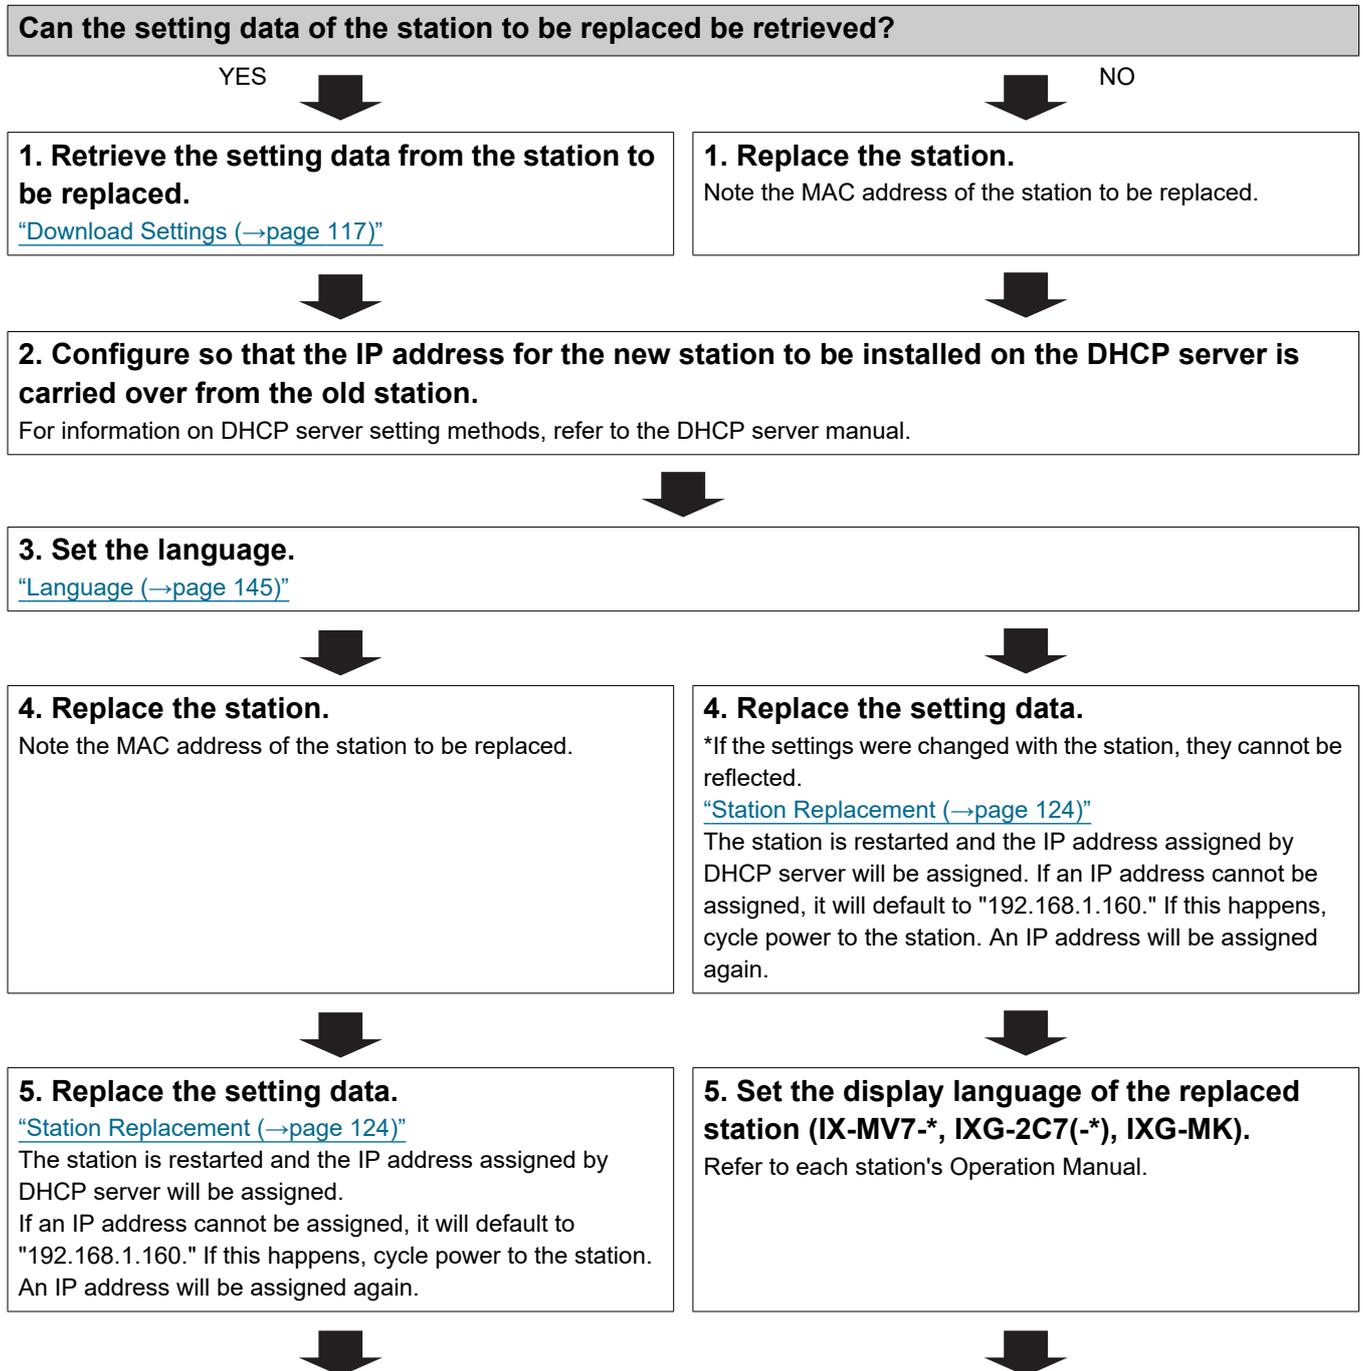



6. Set the display language of the replaced station (IX-MV7-*, IXG-2C7(-*), IXG-MK).
Refer to each station's Operation Manual.



6. Complete



7. Complete

6.3 For static IPv6 Address

Important

- Be sure to store the setting file that was created. Refer to [“Exporting the IXG Support Tool System Configuration \(→page 108\)”](#) for information on how to save the setting file.
If the setting file is not saved, it may be impossible to restore if post-installation maintenance and service is required.

6.3.1 Creating new data

Use flowchart to create new configuration, e.g., when installing a new system.

1. Set the language.

[“Language \(→page 145\)”](#)



2. "Create New System."

[“Create new system/import setting data \(→page 101\)”](#)



3. Configure.

Follow the instructions for each setting item and perform setup. [“System Settings \(→page 147\)”](#)



4. Install all stations.

Note the MAC addresses of all the stations.



5. Associate the created setting data to the station.

[“Association Settings \(→page 115\)”](#)



6. Choose "IPv6" for the IP version of IXG Support Tool.

[“IXG Support Tool Settings \(→page 110\)”](#)





7. Upload the setting data to all stations.

[“Upload Settings \(→page 119\)”](#)



8. Set the time for all stations.

[“Time \(→page 161\)”](#)



9. Set the display language for each station (IX-MV7-*, IXG-2C7(-*), IXG-MK)

Refer to each station's Operation Manual.



10. If registering a Mobile App, configure app integration.

[“Registering the Mobile App \(→page 76\)”](#)



11. Complete

6.3.2 Change the settings (For static IPv6 address)

Use this flowchart when changing the settings.

1. Set the language.

["Language \(→page 145\)"](#)



2. Retrieve the setting data for all the stations.

["Download Settings \(→page 117\)"](#)



3. Perform setup.

Follow the instructions for each setting item and perform setup.

["System Settings \(→page 147\)"](#)

If using app integration, configure settings following the detailed explanation in "App Integration Flowchart."

["Flowcharts for Mobile App Integration \(→page 76\)"](#)



Has the "Building Use," "Building Name," "Building Number," "Unit Number," "Unit Type," "Station Number," "Station Name," "IP Address," "Camera Name," "Gateway Adaptor Use," or "Lift Control Adaptor Use" been changed?

YES



NO



Was "IP Address" changed from among these options?

YES



NO



4. Upload the setting data to the station whose settings were changed.

["Upload Settings \(→page 119\)"](#)



4. Because the setting data for the station whose IP address was changed is no longer associated, re-associate the data.

["Association Settings \(→page 115\)"](#)

The station will be restarted, and the changed "IP Address" will be reflected in the station.



4. Upload the setting data to all stations.

["Upload Settings \(→page 119\)"](#)



5. Complete



5. Upload the setting data to all stations.

["Upload Settings \(→page 119\)"](#)



5. Complete



6. Complete

6.3.3 Add a station (For static IPv6 address)

Use flowchart to add a station.

1. Set the language.

["Language \(→page 145\)"](#)



2. Retrieve the setting data for all the stations.

["Download Settings \(→page 117\)"](#)



3. Choose "IPv4" for the IP version of IXG Support Tool.

["IXG Support Tool Settings \(→page 110\)"](#)



4. Add the setting data.

["System Settings \(→page 147\)"](#)

First, add the station data to ["Units / Stations \(→page 151\)"](#).



5. Install the additional station.

Note the MAC addresses of all the stations.



6. Associate the setting data with the additional station.

["Association Settings \(→page 115\)"](#)



7. Choose "IPv6" for the IP version of IXG Support Tool.

["IXG Support Tool Settings \(→page 110\)"](#)



8. Upload the setting data to all stations.

["Upload Settings \(→page 119\)"](#)





9. Set the time for the additional station.

[“Time \(→page 161\)”](#)



10. Set the display language of the station to add (IX-MV7-*, IXG-2C7(-*), IXG-MK).

Refer to each station's Operation Manual.



11. If using app integration, apply the changes to IXG Cloud Server.

[“Uploading an existing site to the IXG Cloud Server \(→page 132\)”](#)



12. Complete

6.3.4 Delete a station (For static IPv6 address)

Use flowchart to delete a station.

Important

- Be sure to delete the data for stations that do not exist in the system. If a page is placed without deleting, the operation may be delayed.

1. Set the language.

[“Language \(→page 145\)”](#)



2. Retrieve the setting data for all the stations.

[“Download Settings \(→page 117\)”](#)



3. From the setting data, delete the data of the station to be deleted.

[“Units / Stations \(→page 151\)”](#)



4. Upload the setting data to all stations.

[“Upload Settings \(→page 119\)”](#)



5. If using app integration, apply the changes to IXG Cloud Server.


[“Uploading an existing site to the IXG Cloud Server \(→page 132\)”](#)



6. Complete

6.3.5 Replace a station (due to malfunction, etc.) (For static IPv6 address)

Use flowchart to replace a station.

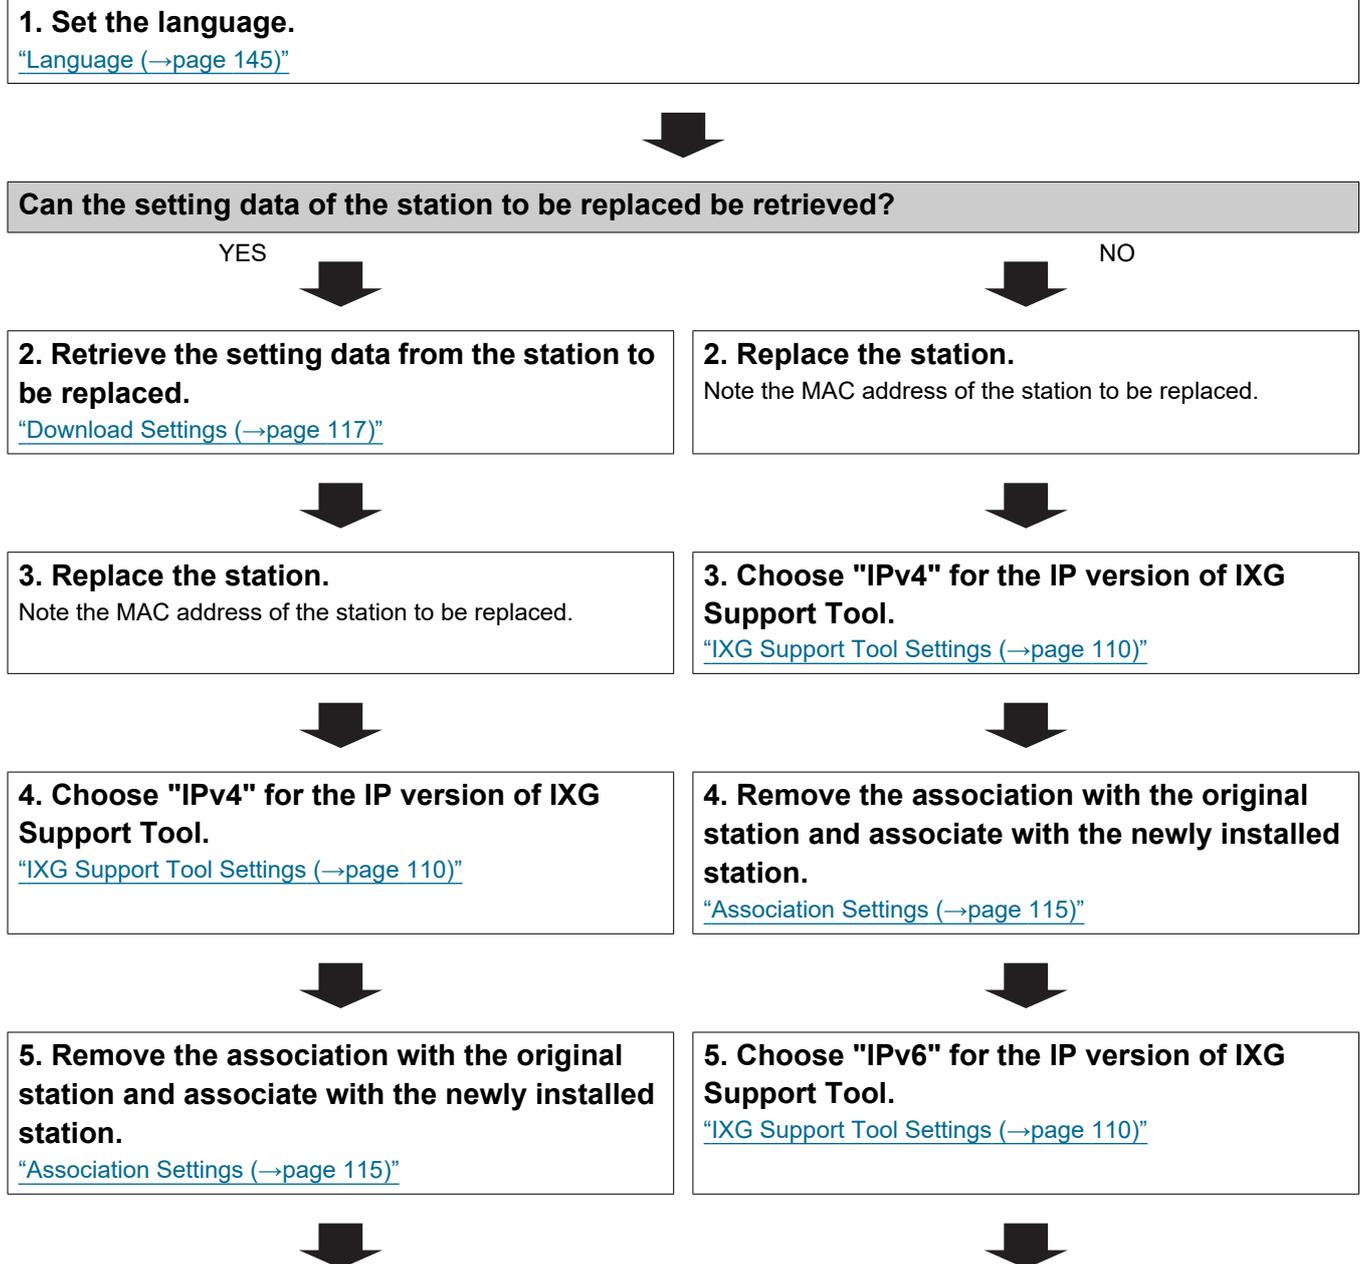



6. Choose "IPv6" for the IP version of IXG Support Tool.

["IXG Support Tool Settings \(→page 110\)"](#)



6. Replace the setting data.

*If the settings were changed with the station, they cannot be reflected.

["Upload Settings \(→page 119\)"](#)



7. Replace the setting data.

["Upload Settings \(→page 119\)"](#)



7. Set the display language of the replaced station (IX-MV7-*, IXG-2C7(-*), IXG-MK).

Refer to each station's Operation Manual.



8. Set the display language of the replaced station (IX-MV7-*, IXG-2C7(-*), IXG-MK).

Refer to each station's Operation Manual.



8. Complete



9. Complete

6.4 For stateless IPv6 address

! Important

- Be sure to store the setting file that was created. Refer to [“Exporting the IXG Support Tool System Configuration \(→page 108\)”](#) for information on how to save the setting file.
If the setting file is not saved, it may be impossible to restore if post-installation maintenance and service is required.

6.4.1 Creating new data

Use flowchart to create new configuration, e.g., when installing a new system.

1. Install a device (router, etc.) that can transmit Router Advertisement (RA) (that can perform stateless auto-configuration).

Do not change the prefix of the device that can transmit Router Advertisement (RA). Refer to the manual of the device that can transmit RA for information on how to configure it.



2. Set the language.

[“Language \(→page 145\)”](#)



3. "Create New System."

[“Create new system/import setting data \(→page 101\)”](#)



4. Configure.

Follow the instructions for each setting item and perform setup. [“System Settings \(→page 147\)”](#)



5. Install all stations.

Note the MAC addresses of all the stations.





6. Associate the created setting data to the station.

["Association Settings \(→page 115\)"](#)

Each station is restarted and IPv6 Address will be automatically configured.

If an IP address cannot be automatically configured, it will default to "FDC2::7000." If this happens, cycle power to the station. An IP address will be automatically configured again.



7. Choose "IPv6" for the IP version of IXG Support Tool.

["IXG Support Tool Settings \(→page 110\)"](#)



8. Upload the setting data to all stations.

["Upload Settings \(→page 119\)"](#)



9. Set the time for all stations.

["Time \(→page 161\)"](#)



10. Set the display language for each station (IX-MV7-*, IXG-2C7(-*), IXG-MK)

Refer to each station's Operation Manual.



11. If registering a Mobile App, configure app integration.


["Registering the Mobile App \(→page 76\)"](#)



12. Complete

6.4.2 Change the settings (For stateless IPv6 address)

Use this flowchart when changing the settings.

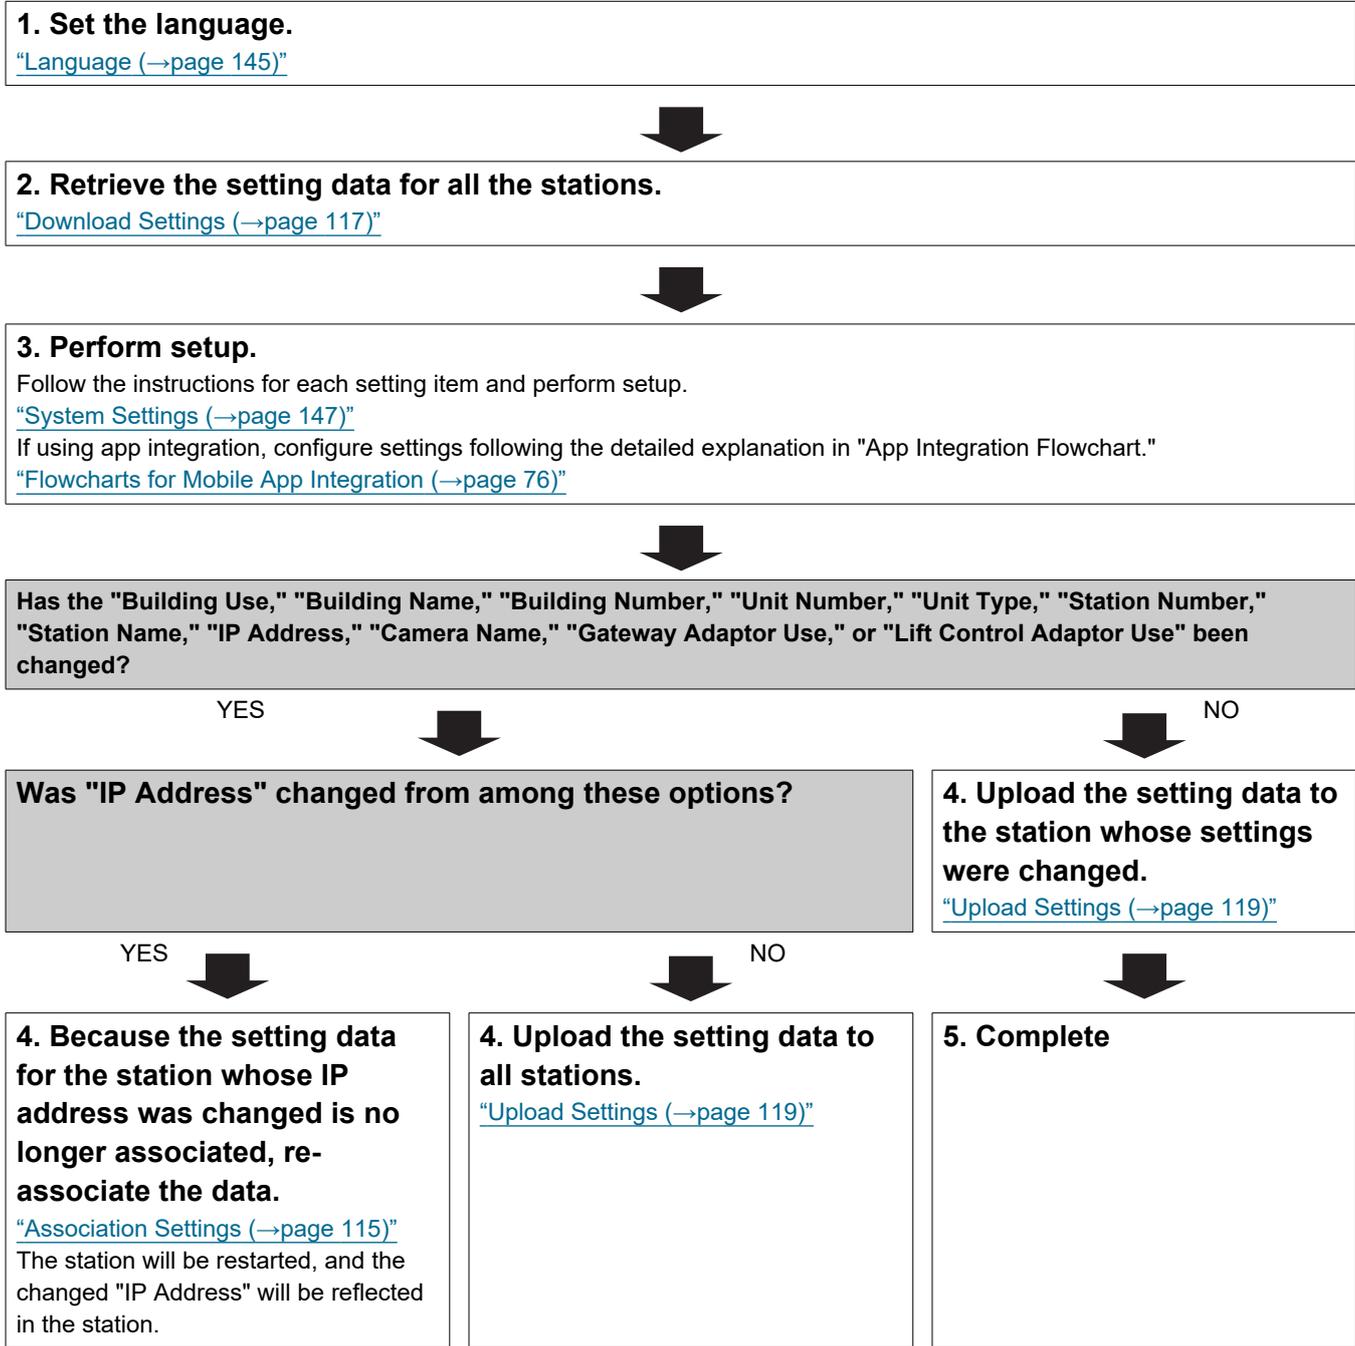



5. Upload the setting data to all stations.

[“Upload Settings \(→page 119\)”](#)



5. Complete



6. Complete

6.4.3 Add a station (For stateless IPv6 address)

Use flowchart to add a station.

1. Set the language.

["Language \(→page 145\)"](#)



2. Retrieve the setting data for all the stations.

["Download Settings \(→page 117\)"](#)



3. Add the setting data.

["System Settings \(→page 147\)"](#)

First, add the station data to ["Units / Stations \(→page 151\)"](#).



4. Install the additional station.



5. Choose "IPv4" for the IP version of IXG Support Tool.

["IXG Support Tool Settings \(→page 110\)"](#)



6. Associate the setting data with the additional station.

["Association Settings \(→page 115\)"](#)

The station is restarted and IPv6 Address will be automatically configured.

If an IP address cannot be automatically configured, it will default to "FDC2::7000." If this happens, cycle power to the station. An IP address will be automatically configured again.



7. Choose "IPv6" for the IP version of IXG Support Tool.

["IXG Support Tool Settings \(→page 110\)"](#)





8. Upload the setting data to all stations.

[“Upload Settings \(→page 119\)”](#)



9. Set the time for the additional station.

[“Time \(→page 161\)”](#)



10. Set the display language of the station to add (IX-MV7-*, IXG-2C7(-*), IXG-MK).

Refer to each station's Operation Manual.



11. If using app integration, apply the changes to IXG Cloud Server.

[“Uploading an existing site to the IXG Cloud Server \(→page 132\)”](#)



12. Complete

6.4.4 Delete a station (For stateless IPv6 address)

Use flowchart to delete a station.

Important

- Be sure to delete the data for stations that do not exist in the system. If a page is placed without deleting, the operation may be delayed.

1. Set the language.

[“Language \(→page 145\)”](#)



2. Retrieve the setting data for all the stations.

[“Download Settings \(→page 117\)”](#)



3. From the setting data, delete the data of the station to be deleted.

[“Units / Stations \(→page 151\)”](#)



4. Upload the setting data to all stations.

[“Upload Settings \(→page 119\)”](#)



5. If using app integration, apply the changes to IXG Cloud Server.

[“Uploading an existing site to the IXG Cloud Server \(→page 132\)”](#)



6. Complete

6.4.5 Replace a station (due to malfunction, etc.) (For stateless IPv6 address)

Use flowchart to replace a station.

1. Set the language.

["Language \(→page 145\)"](#)



Can the setting data of the station to be replaced be retrieved?

YES



2. Retrieve the setting data from the station to be replaced.

["Download Settings \(→page 117\)"](#)



3. Replace the station.

Note the MAC address of the station to be replaced.



4. Choose "IPv4" for the IP version of IXG Support Tool.

["IXG Support Tool Settings \(→page 110\)"](#)



5. Remove the association with the original station and associate with the newly installed station.

["Association Settings \(→page 115\)"](#)



NO



2. Replace the station.

Note the MAC address of the station to be replaced.



3. Choose "IPv4" for the IP version of IXG Support Tool.

["IXG Support Tool Settings \(→page 110\)"](#)



4. Remove the association with the original station and associate with the newly installed station.


["Association Settings \(→page 115\)"](#)



5. Choose "IPv6" for the IP version of IXG Support Tool.

["IXG Support Tool Settings \(→page 110\)"](#)



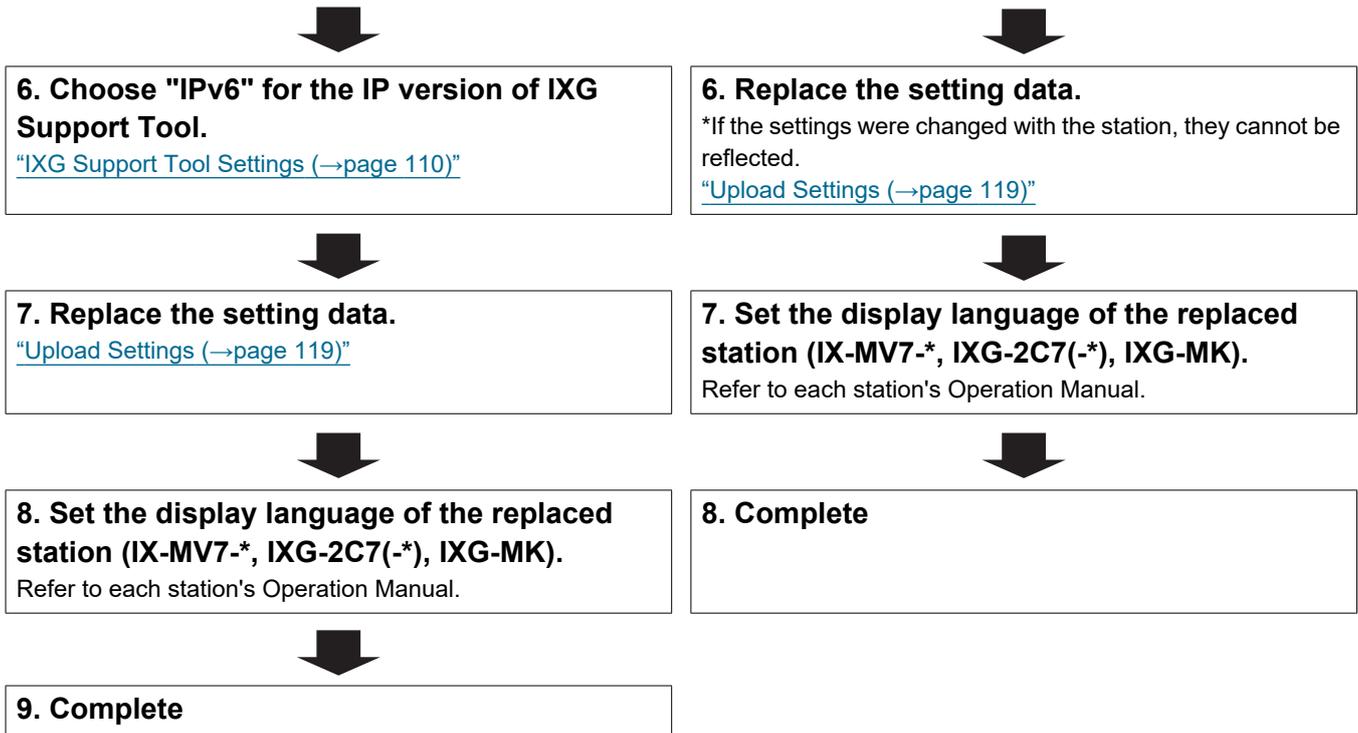

6.5 For IPv6 address with DHCP

! Important

- Be sure to store the setting file that was created. Refer to [“Exporting the IXG Support Tool System Configuration \(→page 108\)”](#) for information on how to save the setting file.
If the setting file is not saved, it may be impossible to restore if post-installation maintenance and service is required.

6.5.1 Creating new data

Use flowchart to create new configuration, e.g., when installing a new system.

1. Set up the DHCP server.

Configure so that a static IP address is assigned to the station by the DHCP server.
DUID of the station is "00030001 + MAC address."
For information on DHCP server setting methods, refer to the DHCP server manual.



2. Set the language.

[“Language \(→page 145\)”](#)



3. "Create New System."

[“Create new system/import setting data \(→page 101\)”](#)



4. Configure.

Follow the instructions for each setting item and perform setup. [“System Settings \(→page 147\)”](#)



5. Install all stations.

Note the MAC addresses of all the stations.





6. Associate the created setting data to the station.

[“Association Settings \(→page 115\)”](#)

The station is restarted and the IPv6 Address assigned by DHCP server beforehand will be assigned. If an IP address cannot be assigned, it will default to "FDC2::7000." If this happens, cycle power to the station. An IP address will be assigned again.



7. Choose "IPv6" for the IP version of IXG Support Tool.

[“IXG Support Tool Settings \(→page 110\)”](#)



8. Upload the setting data to all stations.

[“Upload Settings \(→page 119\)”](#)



9. Set the time for all stations.

[“Time \(→page 161\)”](#)



10. Set the display language for each station (IX-MV7-*, IXG-2C7(-*), IXG-MK)

Refer to each station's Operation Manual.



11. If registering a Mobile App, configure app integration.

[“Registering the Mobile App \(→page 76\)”](#)



12. Complete

6.5.2 Change the settings (For IPv6 address with DHCP)

Use this flowchart when changing the settings.

1. Set the language.

["Language \(→page 145\)"](#)



2. Retrieve the setting data for all the stations.

["Download Settings \(→page 117\)"](#)



3. Perform setup.

Follow the instructions for each setting item and perform setup.

["System Settings \(→page 147\)"](#)

If using app integration, configure settings following the detailed explanation in "App Integration Flowchart."

["Flowcharts for Mobile App Integration \(→page 76\)"](#)



Has the "Building Use," "Building Name," "Building Number," "Unit Number," "Unit Type," "Station Number," "Station Name," "IP Address," "Camera Name," "Gateway Adaptor Use," or "Lift Control Adaptor Use" been changed?

YES



NO



Was "IP Address" changed from among these options?

YES



NO



4. Upload the setting data to the station whose settings were changed.

["Upload Settings \(→page 119\)"](#)



4. Cancel the association for the setting data for the station whose IP address was changed, then re-associate the data.

["Association Settings \(→page 115\)"](#)

The station will be restarted, and the changed "IP Address" will be reflected in the station.



4. Upload the setting data to all stations.

["Upload Settings \(→page 119\)"](#)



5. Complete



5. Upload the setting data to all stations.

[“Upload Settings \(→page 119\)”](#)



5. Complete



6. Complete

6.5.3 Add a station (For IPv6 address with DHCP)

Use flowchart to add a station.

1. Configure so that the IP address for the station to be added to the DHCP server is assigned as a static address.

For information on DHCP server setting methods, refer to the DHCP server manual.



2. Set the language.

["Language \(→page 145\)"](#)



3. Retrieve the setting data for all the stations.

["Download Settings \(→page 117\)"](#)



4. Add the setting data.

["System Settings \(→page 147\)"](#)

First, add the station data to ["Units / Stations \(→page 151\)"](#).



5. Install the additional station.



6. Choose "IPv4" for the IP version of IXG Support Tool.

["IXG Support Tool Settings \(→page 110\)"](#)



7. Associate the setting data with the additional station.

["Association Settings \(→page 115\)"](#)

The station is restarted and the IPv6 Address assigned by DHCP server beforehand will be assigned.

If an IP address cannot be assigned, it will default to "FDC2::7000." If this happens, cycle power to the station. An IP address will be assigned again.





8. Choose "IPv6" for the IP version of IXG Support Tool.

["IXG Support Tool Settings \(→page 110\)"](#)



9. Upload the setting data to all stations.

["Upload Settings \(→page 119\)"](#)



10. Set the time for the additional station.

["Time \(→page 161\)"](#)



11. Set the display language of the station to add (IX-MV7-*, IXG-2C7(-*), IXG-MK).

Refer to each station's Operation Manual.



12. If using app integration, apply the changes to IXG Cloud Server.

["Uploading an existing site to the IXG Cloud Server \(→page 132\)"](#)



13. Complete

6.5.4 Delete a station (For IPv6 address with DHCP)

Use flowchart to delete a station.

Important

- Be sure to delete the data for stations that do not exist in the system. If a page is placed without deleting, the operation may be delayed.

1. Set the language.

["Language \(→page 145\)"](#)



2. Retrieve the setting data for all the stations.

["Download Settings \(→page 117\)"](#)



3. From the setting data, delete the data of the station to be deleted.

["Units / Stations \(→page 151\)"](#)



4. Upload the setting data to all stations.

["Upload Settings \(→page 119\)"](#)



5. If using app integration, apply the changes to IXG Cloud Server.

["Uploading an existing site to the IXG Cloud Server \(→page 132\)"](#)




6. Complete

6.5.5 Replace a station (due to malfunction, etc.) (For IPv6 address with DHCP)

Use flowchart to replace a station.



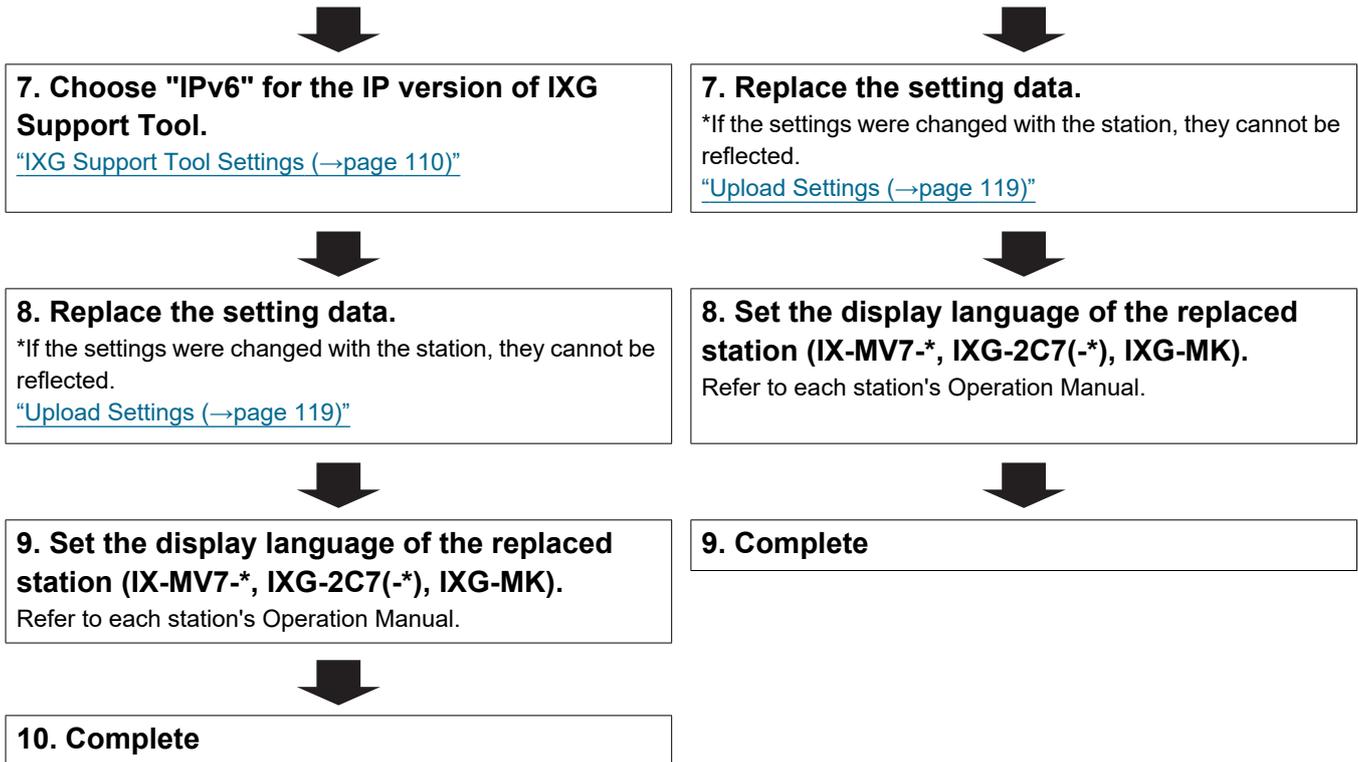

7. Flowcharts for Mobile App Integration

! Important

- Due to the features and services provided by the Gateway Adaptor and the AIPHONE IXG app, future required changes to device functionality, network communication, security, etc. may require firmware updates unavailable to the Gateway Adaptor. In this situation, the Gateway Adaptor would need to be replaced at the cost of the responsible party.
- QR code is a registered trademark of Denso Wave Incorporated.

7.1 Registering the Mobile App

The flowchart below describes the process of registering a Mobile App with a new or existing site.

1. Register the App in [“Units / Stations \(→page 151\)”](#).



2. Configure the following settings.

- Gateway Registration* ([→page 155](#))
- Gateway Selection ([→page 156](#))
- IXG Support Tool Settings* [“IXG Support Tool Settings \(→page 110\)”](#)
- Create new administrator account on the IXG Cloud Server* [“Create a New Administrator ID \(→page 126\)”](#)
- Site Information, Installer Information, Property Management Company Information* [“Site Information \(→page 148\)”](#)
- Building Name* [“Building Information \(→page 150\)”](#)
- Unit Name* [“Units / Stations \(→page 151\)”](#)
- Station Name [“Identification \(→page 157\)”](#)
- Open Station List [“Station List \(→page 187\)”](#)
- Create mobile app list [“Mobile App List \(→page 190\)”](#)

* Configuration is not required if it is already registered.



3. Creating a New Site on the IXG Cloud Server.

[“Uploading a new site to the IXG Cloud Server \(→page 130\)”](#)

3. Updating the Settings to an Existing Site on the IXG Cloud Server.

[“Uploading an existing site to the IXG Cloud Server \(→page 132\)”](#)



4. Generate PDF of QR Code for App Registration.

[“Export QR Code for App Registration \(→page 136\)”](#)

* If there is already a Tenant Station in the unit, send the QR Code to the Tenant Station.

[“Applying QR Code for App Registration to a station \(→page 135\)”](#)





5. Upload the setting file to the station.

[“Upload Settings \(→page 119\)”](#)



6. Register the Mobile App by scanning the QR code.

7.2 Adding a Mobile App to Each Unit

The flowchart below describes the process of registering a Mobile App with a unit that is already connected to the IXG Cloud Server.

! Important

- Refer to [“Registering the Mobile App \(→page 76\)”](#) for information on registering the first Mobile App in each unit.

1. Add the "App" in [“Units / Stations \(→page 151\)”](#).



2. Configure the following settings.

- Station Name [“Identification \(→page 157\)”](#)
- Open Station List [“Station List \(→page 187\)”](#)



3. Updating the Settings to an Existing Site on the IXG Cloud Server.

[“Uploading an existing site to the IXG Cloud Server \(→page 132\)”](#)



4. Generate PDF of QR Code for App Registration.

[“Export QR Code for App Registration \(→page 136\)”](#)



5. Upload the setting file to the station.

[“Upload Settings \(→page 119\)”](#)



6. Register the Mobile App by scanning QR code.

* For a residential Mobile App where a Tenant Station is installed in the residence, touch **[SETTINGS] - [Register Apps]** on the Home Screen of the Tenant Station to display the QR code.

7.3 When the type of mobile device registered to a Residential unit was replaced

The flowchart below describes the process of replacing a Mobile App.

Note

- In order to make the following settings, it is necessary to complete the "Property manager Account Settings" of the IXG cloud server in the Property Manager Mode. Refer to the separate "IXG Support Tool Setting Manual: Property Manager Mode" document for more information.

Is the resident the same?

YES



NO



Are you able to operate the old Mobile App?

YES



NO



1. Display "Property Manager Settings."

["View \(→page 144\)"](#)



1. Tap [Disconnect] in "Mobile App Configuration" on the registered mobile device.

1. Generate PDF of QR Code for App Registration.

["Export QR Code for App Registration \(→page 136\)"](#)


*For a Mobile App that is registered in Residential Unit and a Tenant Station is already installed, tap **[SETTINGS]** - **[Register Apps]** on the Home Screen of the Tenant Station to display the QR code.

2. Select the unit with the replaced resident on the "Move-out Settings" - "Resident Move-out" settings screen, click [Resident Move-out] and login to the IXG Cloud Server using the Property Manager account

The following processes are performed.

- The Tenant Station user settings are initialized.
- The previous resident is prevented from using the Mobile App.
- A new QR code is sent to the Tenant Station.



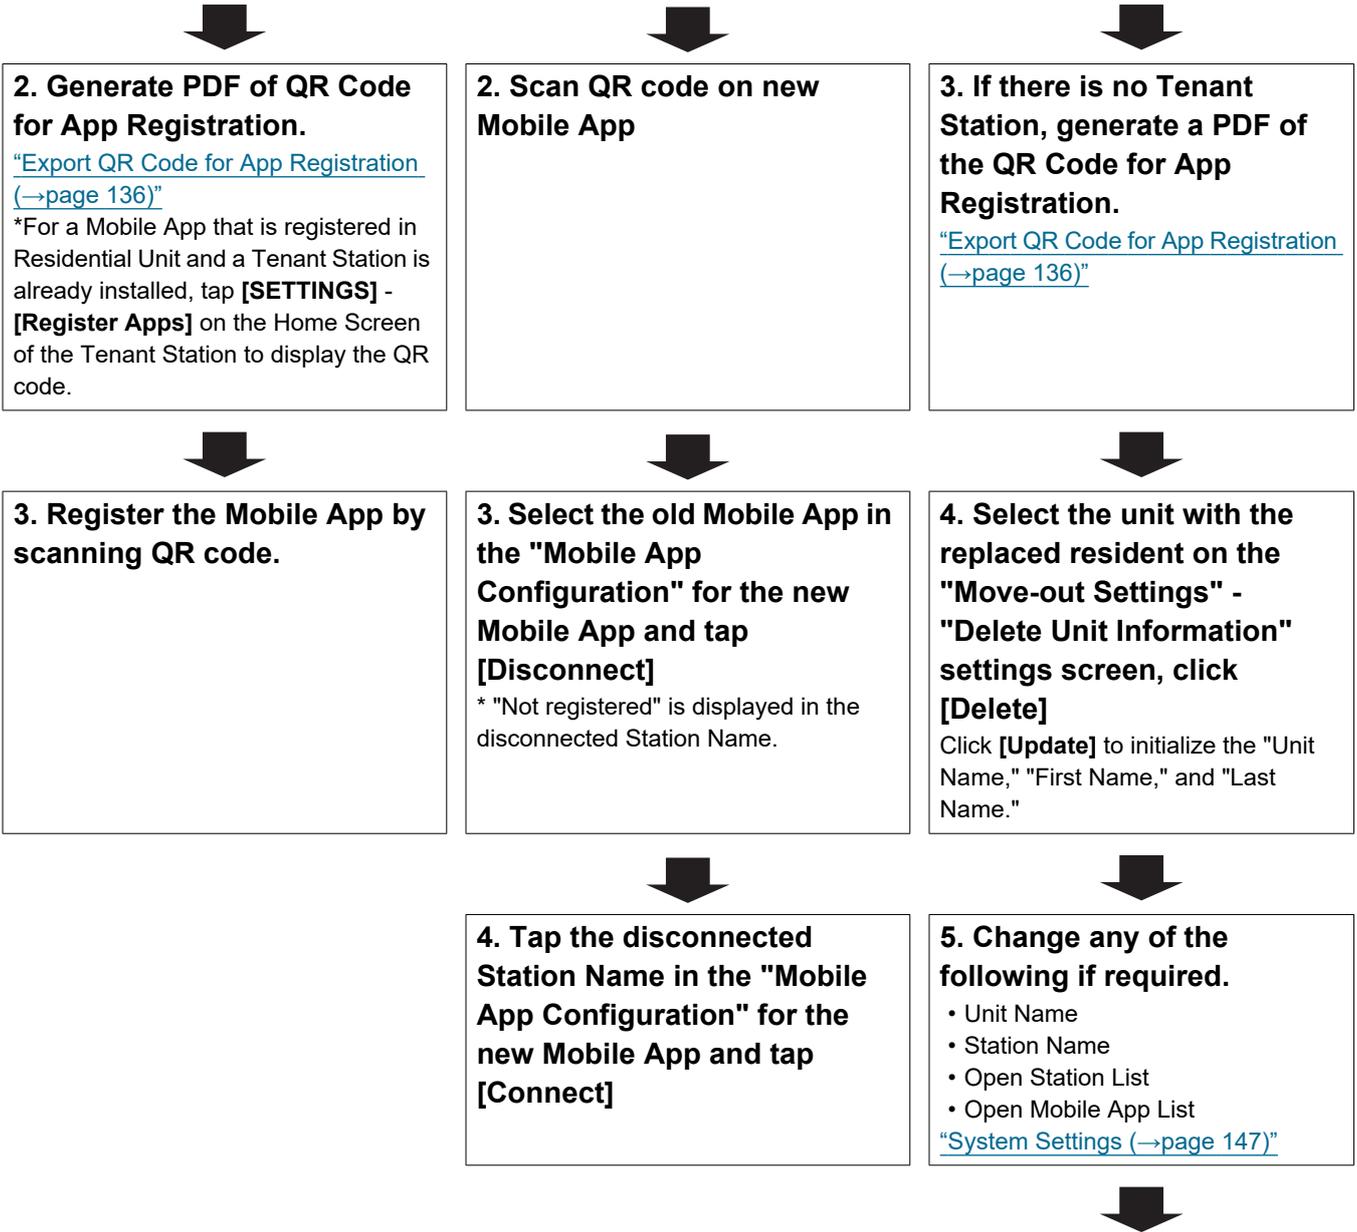



6. Upload the settings to the IXG Cloud Server.

[“Uploading an existing site to the IXG Cloud Server \(→page 132\)”](#)



7. Upload the setting file to the station.


[“Upload Settings \(→page 119\)”](#)




8. Register the new Mobile App by scanning the QR code.

7.4 When the type of mobile device registered to a Guard or a Commercial unit was replaced

The flowchart below describes the process of replacing a Mobile App.

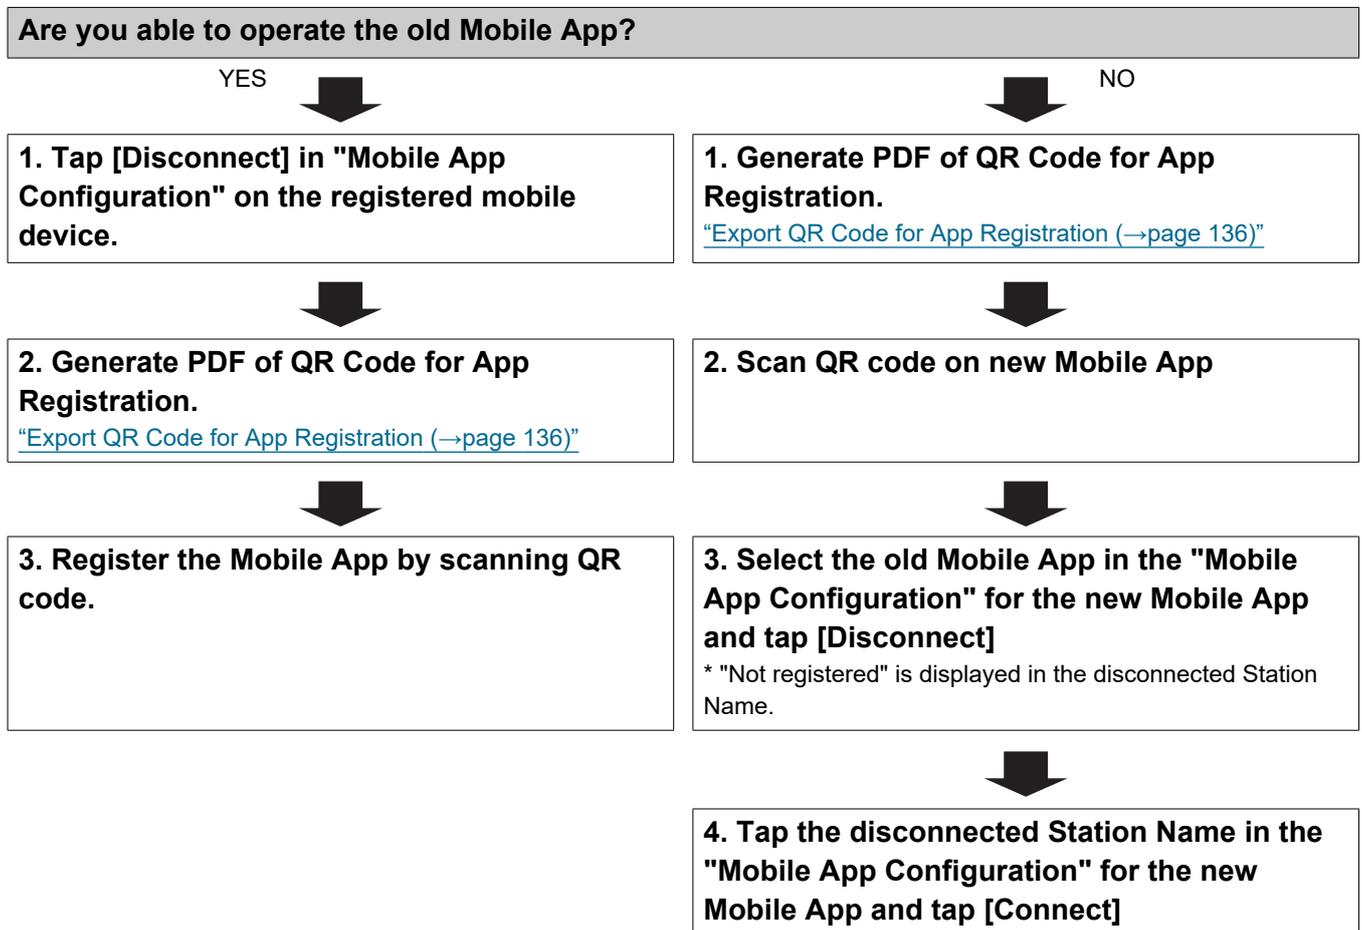

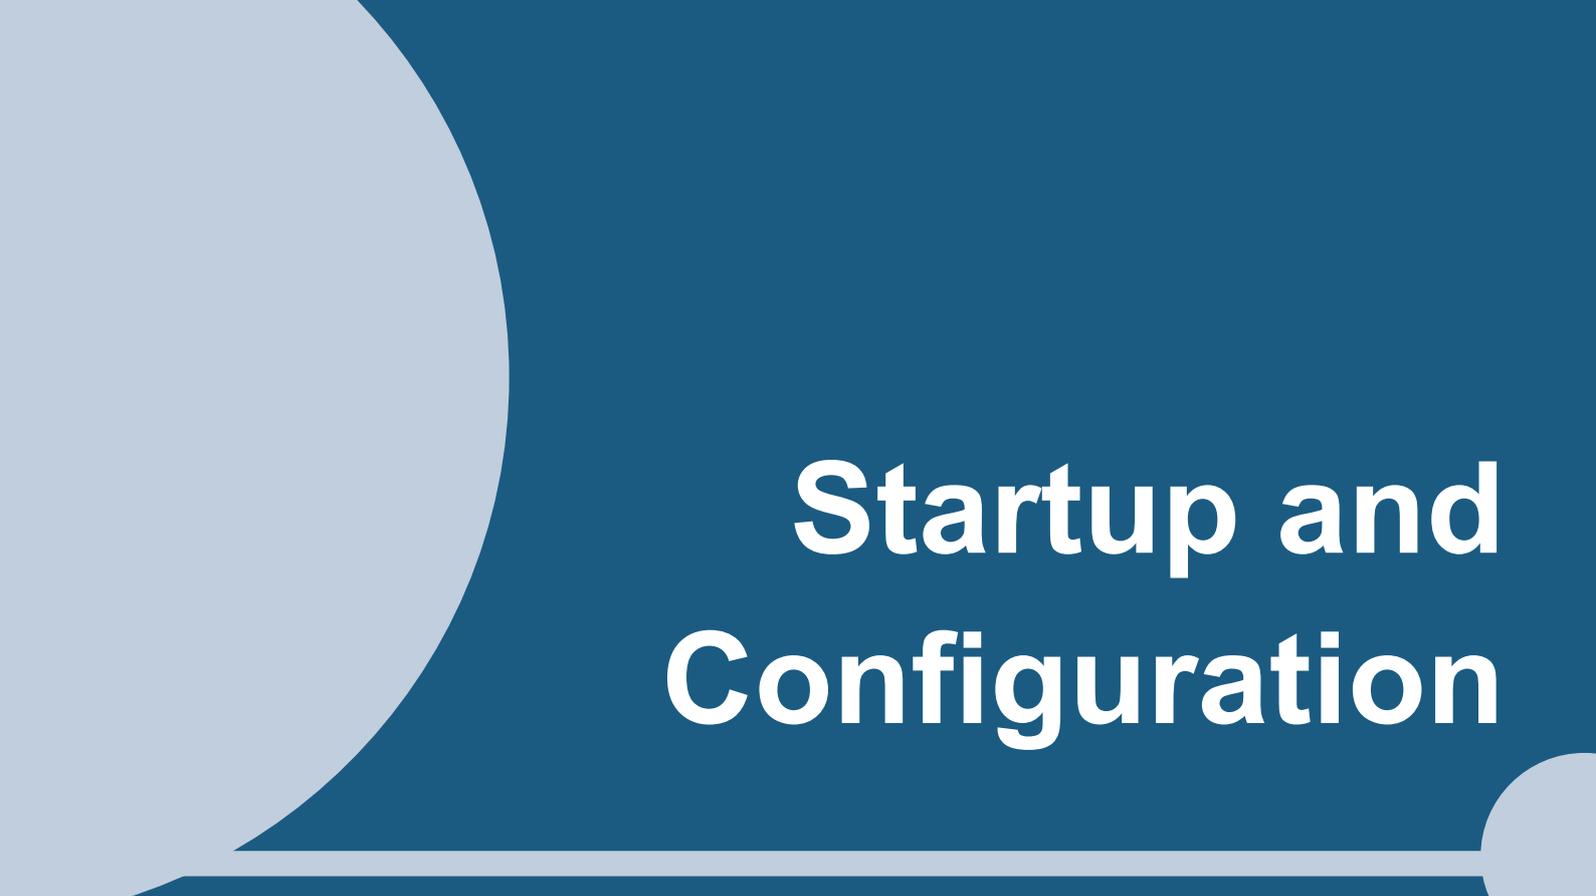

Startup and Configuration

1. System requirements

PC requirements for using the IXG Support Tool.

Operating System	Windows 7 Professional (SP1), Windows 7 Enterprise (SP1), Windows 7 Ultimate (SP1) Windows 8, Windows 8 pro, Windows 8 Enterprise Windows 8.1, Windows 8.1 pro, Windows 8.1 Enterprise Windows 10 Home, Windows 10 Pro, Windows 10 Enterprise
CPU	32 bit (x86) processor or 64 bit (x64) processor of 1 GHz or higher
Memory	4 GB RAM or higher
Resolution	1280x768 or greater




Note


- Set the display size setting of your PC to “100%”.
If set to a setting other than “100%”, the screen of the IXG Support Tool may not be displayed correctly.

2. Installing IXG Support Tool


1. Access our Web site at <https://www.aiphone.net/product/support/> and download the IXG Support Tool to your PC.
2. Double-click the downloaded file ("AIPHONE_IXG_SupportTool_Setup.exe") to install IXG Support Tool.

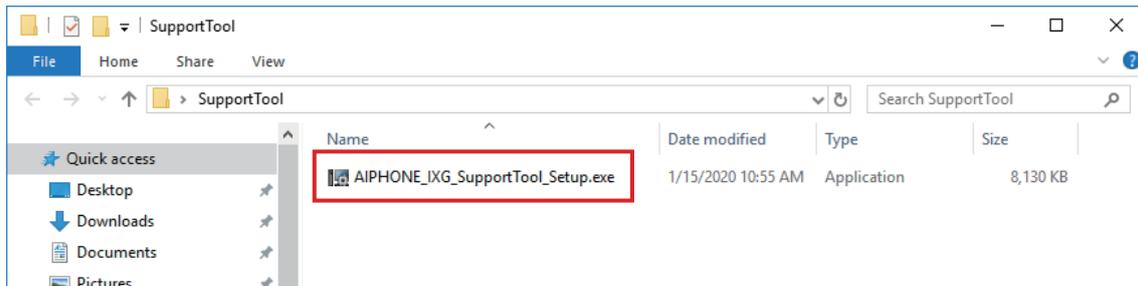

3. Select the components to install for IXG Support Tool, and then click **[Next]**.

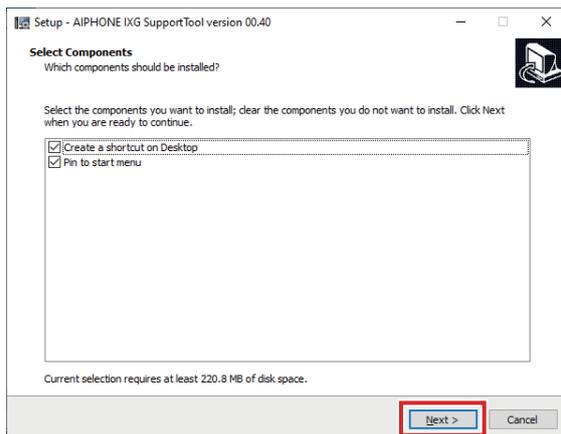


4. Click **[Finish]**.

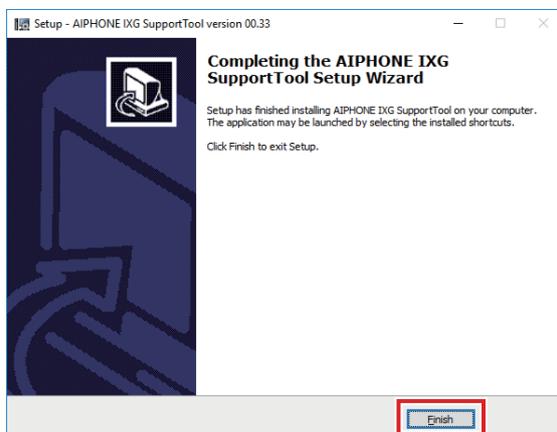


- IXG Support Tool is now installed.

3. Login and registration of the station

1. Double-click any of the following.
 - The "AIPHONE IXG SupportTool" shortcut that was created on the desktop
 - "AIPHONE IXG SupportTool" in the Start Menu
 - "Local Disk (C)" - "Program Files" - "Aiphone" - "IXG" - "SupportTool" - "AIPHONE_IXG_SupportTool.exe"

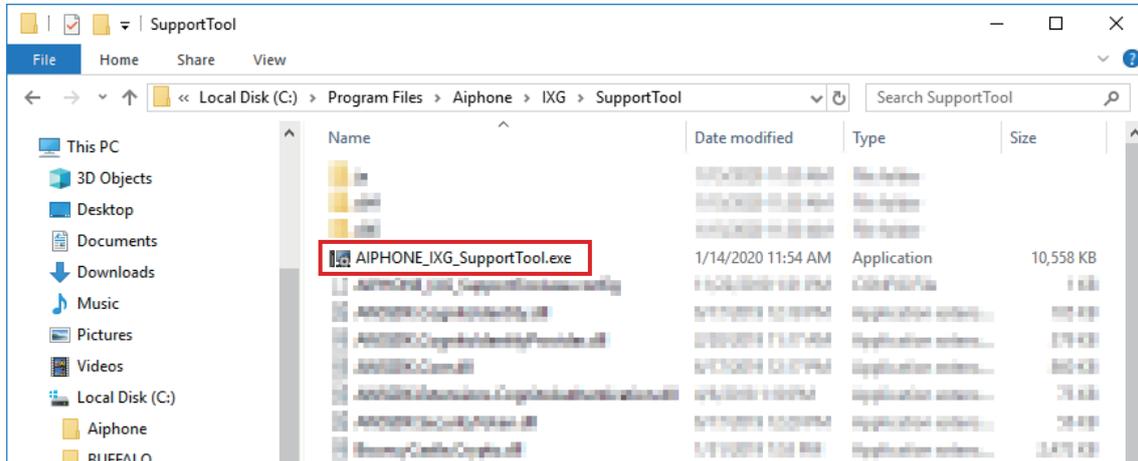

2. Select "Administrator."
 - Refer to the separate "IXG Support Tool Setting Manual: Property Manager Mode" document for information on the manager mode.

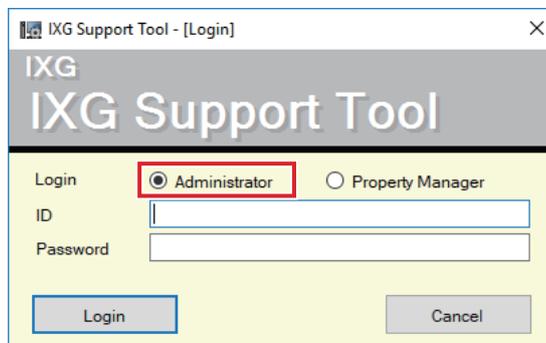

3. Enter "ID" and "Password," and click **[Login]**.
 - The "Basic" screen is displayed. To switch to the "Advanced" screen, click ["View \(→page 144\)"](#) in the Menu bar and then "Advanced."
 - The setting data configured during the previous login session will be shown.
 - If logging into the IXG Support Tool for the first time, proceed to Step 4.
 - The default ID and Password are "admin."


4. When first logging into IXG Support Tool, the "New System" screen is displayed. Refer to ["Create new system/import setting data \(→page 101\)"](#) and proceed with the setup.

System settings

["Restore System Settings \(→page 106\)"](#)

["Reading in data created by another IXG Support Tool \(→page 104\)"](#)

Once "New System" configuration is complete, the setting file is automatically generated and the Settings screen is displayed.

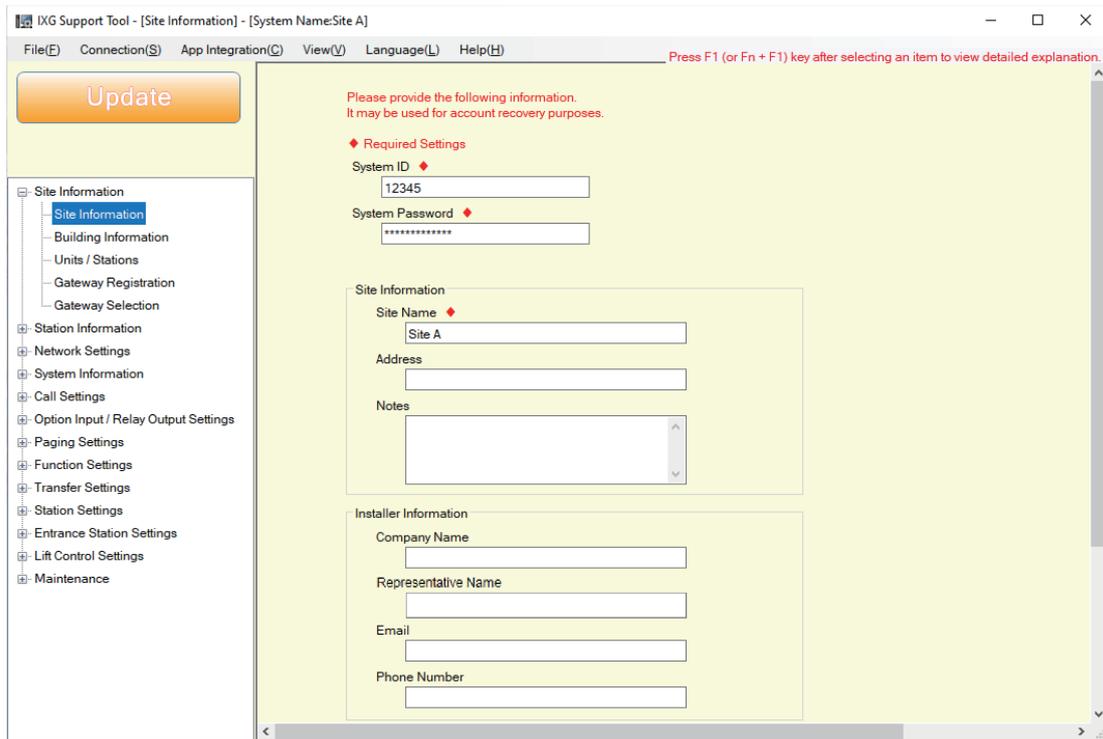

4. How to Configure

After logging into IXG Support Tool, the Settings screen is displayed. The Settings screen is used to configure settings.

- Depending on PC and OS being used, the window may be slightly different.
- After configuration, refer to the "Operation Manual" for each station and confirm operation.

4.1 Settings window

Settings screen sample

All stations in the system can be configured using the table.

Update: Click to update the settings.

Menu bar: Allows you to create new setting files. "[Menu bar](#) ([→page 100](#))"

Information: Click to display notes.

Title bar: Displays the site name and title when editing settings.

Building Number	Unit Number	Station Name	Station Information				Required settings				
			ID / Password	ID/Administrator	Password/Administrator	ONVIF ID		ONVIF Password	RTSP ID	RTSP Password	
01	001	Entrance Station1	12345	*****							
01	002	Master Station1	12345	*****							
01	002	Master Station2	12345	*****							
01	002	Video Door Station1	12345	*****							
01	003	Video Door Station1	12345	*****							
01	101	Tenant Station1	12345	*****							
01	101	Tenant Station2	12345	*****							
01	101	Video Door Station1	12345	*****							
01	102	Tenant Station1	12345	*****							
01	102	Tenant Station2	12345	*****							
01	102	Video Door Station1	12345	*****							
01	103	Tenant Station1	12345	*****							
01	103	Video Door Station1	12345	*****							
01	104	Tenant Station1	12345	*****							
01	104	Video Door Station1	12345	*****							
01	105	Tenant Station1	12345	*****							

Setting menu: Displays a list of titles. Click the title to be configured and the appropriate Settings screen will display.

Settings screen: The Settings screen for the currently selected title is displayed.

Note

- Settings which cannot be modified will be grayed out.

4.2 How to Configure

1. Click the title to be configured.
 - The Settings window for that particular title will be shown.
2. Enter setting values for each entry.
 - The selected field will turn orange.
 - When changing the settings, the field will turn pink.
 - Some titles allow copy and paste.


Building Number	Unit Number	Station Type	Station Settings	
			Station Number	Station Name
01	001	IXG-DM7(-*)	0010	Entrance Station1
01	002	IX-MV7-*	0020	Master Station2
01	002	IX-DV,IX-DVF(-*)	0021	

Required settings.

! Important

- Be sure to input the settings for entries in red. Use the default values, unless a change is necessary.

- Select an entry field and press the F1 key to display an explanation screen.

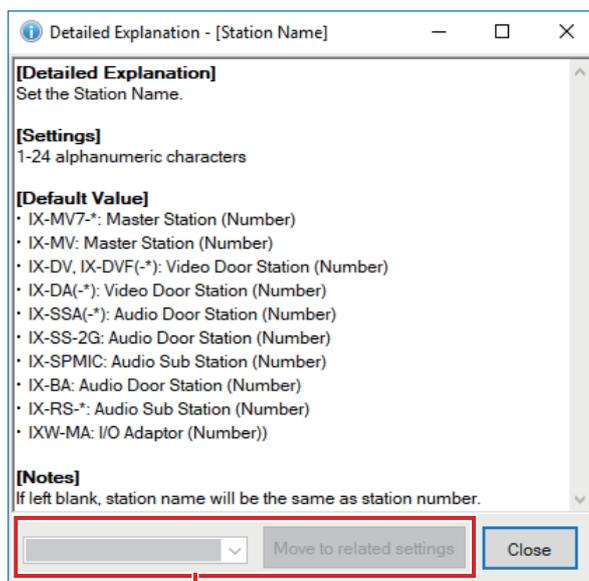

Move to related item: This allows you to move to the Settings screen for related entries.

- Pressing [Ctrl] + [F] displays the Search window, which allows the search function to be used. Enter the text to search and click **[Find Next]** to move to the applicable cell.
-  is displayed when the cursor is moved over an entry. Clicking this allows you to use the filter function. Select what to display and then click **[Apply]** to display only the applicable information.

Building Number	Unit Number	Station Type	Station Settings	
			Identification	
			Station Number	Station Name
01	001			
01	002			
01	002			
01	003			
01	101			
01	101			
01	101			
01	102	IXG-2C7(-*)	1020	Tenant Station1

(Select All)

Intercom App

IX-DV,IX-DVF(-*)

IXG-2C7(-*)

IXG-DM7(-*)

IXGW-GW

IXGW-LC

IX-MV7-*


B Text Filter

- 3.** When you are done configuring on this screen, click **[Update]** to save the settings.
- To cancel all settings, click another title in the Setting menu.
 - If there is an error when clicking **[Update]**, the error message will be shown and the settings will not be allowed to be saved.
- The field will be shown in red if there is an error in the settings.

Building Number	Unit Number	Station Type	Station Settings	
			Identification	
			Station Number	Station Name
01	001	IXG-DM7(-*)	0010	Entrance Station1
01	002	IX-MV7-*	0020	Master Station_1
01	002	IX-MV7-*	0021	Master Station2
01	002	IX-DV,IX-DVF(-*)	0022	Video Door Station1

Required settings.

- If another title is selected without clicking **[Update]**, the system will prompt whether to save the settings. Click **[Yes]** to save, or click **[No]** to display another title without saving.
- Click **[Cancel]** to return to the previous screen.

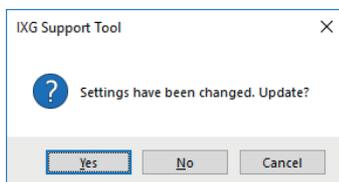

- 4.** Perform Steps 1 - 3 for other titles as well.

5. System settings list

The following items can be configured using IXG Support Tool.

The symbols indicate the following:

- ◆: Be sure to enter a setting value. Use the default values, unless a change is necessary.
- ♣: The setting item information can be copied.
 - The following table provides an overview of IXG Support Tool. The content, how they are displayed, and the order of entries may vary from the actual screens.
 - Download and back up the setting file [“Exporting the IXG Support Tool System Configuration \(→page 108\)”](#) in case post-installation maintenance and service is required, and store it in a safe place where it will not be lost. If a backup has not been performed, it may not be possible to recover the data during after-sales service.

Setting items			Reference pages	
Site Settings				
Site Information	-	-	System ID◆	149
			System Password◆	149
			Site Information	149
			Installer Information	149
			Property Management Information	149
Building Information	-	-	Enable	150
			Building Name◆	150
Units / Stations	-	-	Building Number◆	152
			Unit Number◆	153
			Unit Type◆	153
			Unit Name◆	153
			First Name (Residential only)	153
			Last Name (Residential only)	153
			Master / Tenant Station (Guard, Commercial, Residential, Inside Area only)	154
			Door / Entrance Station	154
			App (Guard, Commercial, Residential only)	154
Gateway Registration	-	-	Enable	155
			Station Name◆	155
			Cancel Priority Rule	155
			Maximum simultaneous calls	155
Gateway Selection	-	-	Gateway Number	156

Setting items				Reference pages	
Station Information					
Identification	-	-	Station Number◆	158	
			Station Name◆	158	
ID / Password	-	-	ID(Administrator)◆	159	
			Password(Administrator)◆	159	
			ONVIF ID	159	
			ONVIF Password	160	
			RTSP ID	160	
			RTSP Password	160	
Time	Time Zone	-	Select time zone	161	
	Daylight Saving Time	-	Automatic Daylight Saving Time	162	
	Manual Date / Time Setup	-	-	163	
Network Settings					
IP Address	-	-	Hostname	164	
			IP Version	165	
			Static / DHCP	165	
	IPv4 Address	-	-	IP Address◆	166
				Subnet Mask◆	166
				Default Gateway	166
	IPv6 Address	-	-	IP Address◆	167
				Default Gateway	167
	Batch IP Address Configuration	-	-	-	168
DNS	Primary Server	-	IPv4	169	
			IPv6	169	
	Secondary Server	-	IPv4	170	
			IPv6	170	
Multicast Address	-	-	IPv4	171	
			IPv6	171	
	Batch Multicast Address Configuration	-	-	-	172

Setting items				Reference pages
Video	Video Encoder 1	-	Frame Rate [fps]	173
			I-picture interval [H.264/AVC]◆	174
			Bit rate [kbps] [H.264 / AVC]	174
	Video Encoder 2	-	Second Video Encoder	175
			Video Codec	175
			Resolution	175
			Frame Rate [fps]	176
			Select Profile [H.264/AVC]	176
			I picture interval [H.264/AVC]◆	176
			Bit rate [kbps] [H.264 / AVC]	177
			Select Quality [Motion-JPEG]	177
			RTP Start Port◆	177
	RTP End Port◆	177		
	Master Station Video Setting	-	Frame Rate [fps]	178
			I-picture Interval◆	178
Bit rate [kbps]			178	
Using a 3rd party product to monitor video/audio from Door Stations	-	-	179	
Audio	-	-	Audio Codec	180
	Audio Buffer	-	Packets Buffered at Audio Start	181
			Maximum Packets Buffered	181
Packet Priority	-	-	TOS Value (Audio)◆	182
			TOS Value (Video)◆	182
			TOS Value (SIP)◆	182
			VLAN Setting	183
			VLAN ID◆	183
			VLAN Priority	183
NTP	NTP	-	-	184
	Synchronization Interval [hour]◆	-	-	184
	Primary Server	-	IPv4 Address	185
			IPv6 Address	185
			Port◆	185
	Secondary Server	-	IPv4 Address	186
			IPv6 Address	186
			Port◆	186

Setting items				Reference pages
System Information				
Station List	-	-	-	187
Mobile App List	-	-	-	190
Network Camera List	Network Camera Registry	-	Camera Name◆	194
			Hostname	194
			IP Address (IPv4)◆	194
			IP Address (IPv6)◆	194
			ID◆	194
			Password◆	194
Group	Configuring a Group	-	-	197
Custom Sound Registry	-	-	-	199
Call Settings				
Called Stations (Door/Sub Stations)	-	-	-	202
Call Origination	Call Origination Advanced Settings	-	Ringback Tone	206
			Call Timeout◆	207
			Ringback Tone Count [time(s)]	207
			Call Destination ([contact input 1 - 4 call] only)	207
			Standard Mode Settings	208
Guard Button (IXG-2C7)	-	-	Select Station	209
			Mobile App	209
Option Input / Relay Output Settings				
Option Input	Option Input Advanced Settings	Function	-	211
		Type	-	211
		Door Release Output	Relay Output 1	211
			Relay Output 2	211
Relay Output	Relay Output Advanced Settings	Function	-	213
		Option Relay Control	-	213
		Output Time	Output Time Range	214
			Output Time ◆	214
		Door Release Key	-	214
	Tone Settings	Door Release	215	
	Authentication Key	-	Option Relay Control Authentication Key	215

Setting items				Reference pages
Paging Settings				
All Page	-	-	-	216
Function Settings				
Door Release	Door Release Assignment	-	Contact Assignment	218
			Door Release Key	219
			Option Output Key	219
Network Camera Integration	Profile Setting	-	Profile	223
			Event Registration	-
	Function	223		
	Event Tone	224		
		Play Count of Event Tone	224	
Email	Server Settings	-	SMTP Server	227
			SMTP Port◆	227
			SMTP Encryption	228
	Authentication Settings	-	SMTP Authentication	229
			Mode	229
			ID	229
			Password	229
	Email Addresses	-	Destination 1	230
			Destination 2	230
			Destination 3	230
			Source Address	230
	Email Event Trigger	-	SD Card Error	231
			Recording Memory Full	231
			Subject	231
	Send Test Email	-	-	-
Recording	Recording Mode	-	-	234
	Recording Event	-	Call Origination	234
			Communication (Door)	234
	Recorded Device	-	-	235
	Audio Recording	-	-	235
CSR	-	-	Country◆	236
			State / County / Region◆	237
			City / Locality	237
			Organization◆	237
			Organizational Unit	237
			Common Name	237

Setting items				Reference pages		
SSL Certificate	How to upload the SSL certificate to each station	-	-	240		
Display Mode	Standard Mode	-	Home Screen	242		
Transfer Settings						
Absent Transfer	-	-	Absent Transfer	243		
			Transfer Destination List	244		
			Re-Transfer Destination	244		
Delay Transfer	-	-	Delay Transfer	245		
			Delay Time [sec]◆	245		
			Transfer Destination List	246		
			Re-Transfer Destination	246		
Schedule Transfer	-	-	Schedule Transfer	247		
			Weekly Schedule	-	Transfer Destination List	248
					Re-Transfer Destination	248
					Start Time	249
	End Time	249				
	Daily Schedule	-	Transfer Destination List	251		
			Re-Transfer Destination	252		
			Start Time	252		
End Time			252			
Station Settings						
Speed Dials	Advanced Speed Dial Button Settings	Speed Dial Button Name	-	253		
		Function	-	254		
		Option Relay Control	Total	254		
			Output Time Range	254		
			Output Time ◆	255		
			TLS	255		
			Option Relay Control Key	255		

Setting items				Reference pages
Volume	Volume	-	Hands-free Transmit	256
			Transmit	256
			Receive	257
			Paging	257
	Headset Specification	-	-	257
	Audio Output	-	-	257
Communication	-	-	Communication Start Tone	258
Monitoring	Prevent Being Monitored	-	-	259
	Monitoring Notification Tone	-	-	260
Camera	Adjustment	-	Backlight Compensation	261
			Low Light Correction	261
	Night Illumination LED	-	Call / Communication	262
			When Monitored	262
	PTZ Preset Position	-	-	262
	Zoom / Wide Preset	-	-	263
	Refresh Rate	-	-	263
Entrance Station Settings				
Display	-	-	Call by Unit Number	264
			Call by List	265
			Search by Name	265
			Default Display Screen	266
			Building Selection Button	266
			Hearing aid Icon	267
Welcome Screen	Welcome Screen Wallpaper	-	-	268
	Image 1	-	Display	269
			File name	269
Direct Call List	Button Number	-	Building Number	270
			Unit Number	270
Access Code	Add Access Code	-	-	273
	Delete Access Code	-	-	274
Misc.	-	-	Motion Sensor	275
			Communication after Door Release	275
Lift Control Settings				
Registration	-	-	Enable	276
			Station Name↕	276
Pick Up Floor	-	-	Relay Output Terminal	277
Arrival Floor	-	-	Relay Output Terminal	278
Building Exit	-	-	Lift Control Button	279
			Relay Output Terminal	280


Setting items				Reference pages
Maintenance				
Firmware Update	-	-	-	281
Initialization	-	-	-	283
syslog	-	-	IPv4 Address	285
			IPv6 Address	285
			Port◆	285

Menu bar

Important

- The symbols indicate the following:
 - ◆: Be sure to enter a setting value. Use the default values, unless a change is necessary.

1. File

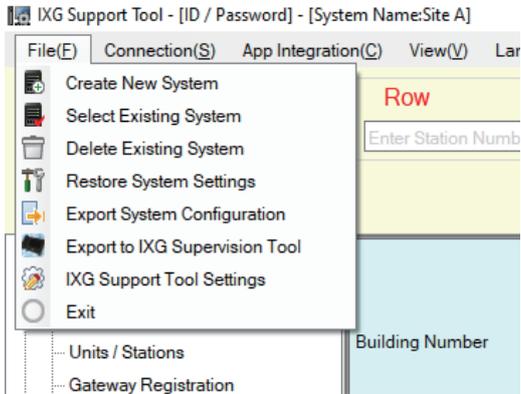

1.1 Create new system/import setting data

Creates new system setting data.

The below two methods can be used to create a new system depending on your objective.

- Perform detailed configuration for all functions. → ["Create a new system setting file \(→page 103\)"](#)
- Import a setting file created from another IXG Support Tool. ["Reading in data created by another IXG Support Tool \(→page 104\)"](#)

Select "File" - "Create New System" to display the "New System" screen.

1

["Restore System Settings \(→page 106\)"](#)

["Reading in data created by another IXG Support Tool \(→page 104\)"](#)

1.1.1 Create a new system setting file

1. Configure the system settings.

■ Site Name ♦

Description	Enter the name of the site.
Settings	1-128 alphanumeric characters
Default value	-

■ System Type ♦

Description	Select the type of system.
Settings	<ul style="list-style-type: none"> • Single Building • Multiple Buildings
Default value	Single Building

■ Number of Buildings ♦

Description	Select the number of buildings when "System Type" is set to "Multiple Buildings".
Settings	1-99 buildings
Default value	1 building

■ System ID ♦

Description	Configure the System ID used to configure the "ID(Administrator) ♦ (→page 159)" in bulk. The value entered for System ID is reflected in "ID(Administrator)" of each station.
Settings	1-20 alphanumeric characters Cannot be set to "admin" or "root."
Default value	-

■ System Password ♦

Description	Configure the System Password used to configure the "Password(Administrator) ♦ (→page 159)" in bulk. The value entered for System Password is reflected in "Password(Administrator)" of each station.
Settings	1-20 alphanumeric characters
Default value	-

■ Site Information

Description	Enter the site "Address" and "Notes."
Settings	<ul style="list-style-type: none"> • Address: 1-128 alphanumeric characters • Notes: 1-128 alphanumeric characters
Default value	-

■ Installer Information

Description	Enter the installer information.
Settings	<ul style="list-style-type: none"> • Company Name: 1-128 alphanumeric characters • Representative Name: 1-128 alphanumeric characters • Email: 1-254 alphanumeric characters • Phone Number: 1-15 alphanumeric characters
Default value	-

■ Property Management Information


Description	Enter the property management company information.
Settings	<ul style="list-style-type: none"> • Company Name: 1-128 alphanumeric characters • Representative Name: 1-128 alphanumeric characters • Email: 1-254 alphanumeric characters • Phone Number: 1-15 alphanumeric characters
Default value	-

2. Click **[Finish]**.

- The setting file will be automatically generated and the Settings screen will be displayed. Refer to "[System Settings \(→page 147\)](#)" when performing the settings.
- Click **[Cancel]** to exit.

1.1.2 Reading in data created by another IXG Support Tool

On the "New System" screen, click **[Import Setting File]** to display the "Import System Configuration" screen.

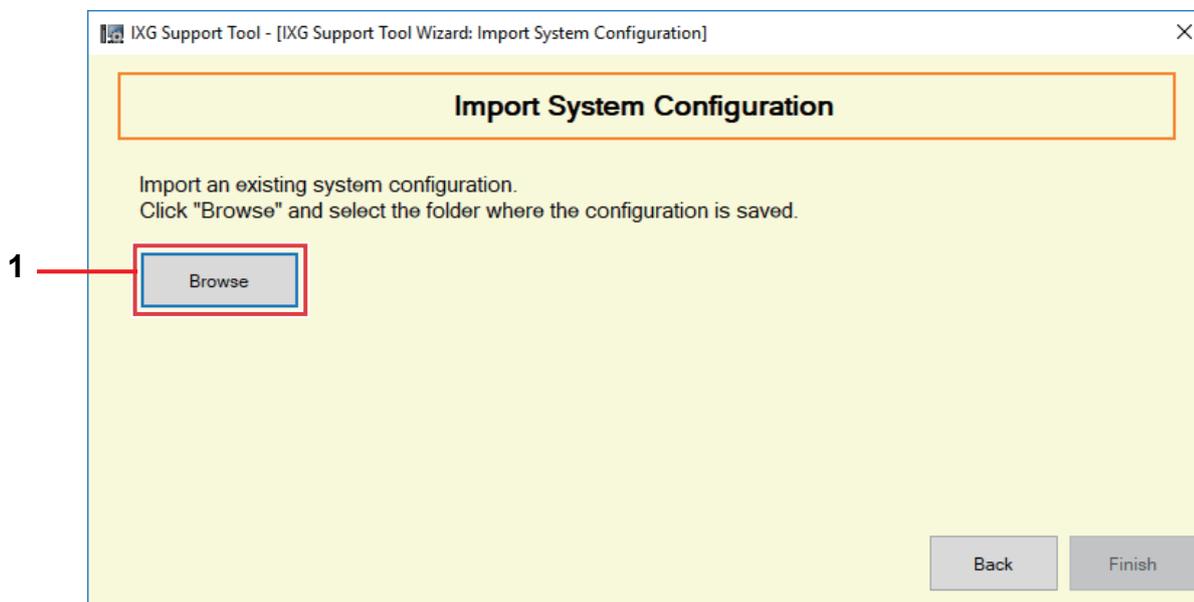


1. Click **[Browse]**.

2. Select the folder where the setting file is saved and click **[OK]**.

3. Click **[Finish]**.

1.2 Select Existing System


Edit a setting file that already exists. This allows you to load a setting file that was saved. Select "File" - "Select Existing System." The "System Selection" screen will be displayed.

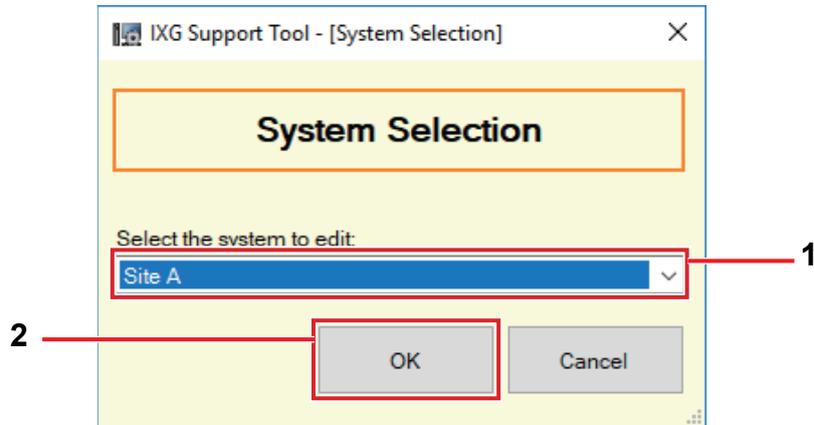

1. Select the system (site name) for the setting file to edit.
2. Click **[OK]**.
 - In the Setting window, the selected setting data will be shown.
 - Click **[Cancel]** to quit without selecting a system.

1.3 Delete Existing System

Delete created setting data. Select "File" - "Delete Existing System." The "Delete System" screen is displayed.

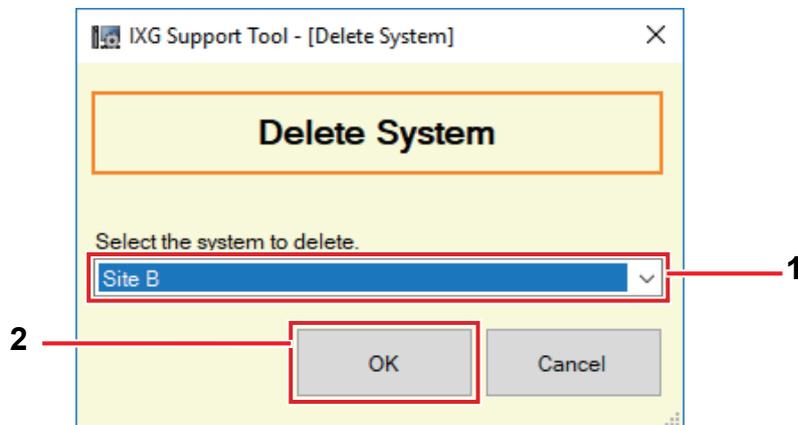


1. Select the system (site name) for the setting file to delete.
2. Click **[OK]**.
 - Delete the selected setting data.
 - Click **[Cancel]** to quit without deleting a system.
3. Click **[OK]**.
 - Click **[Cancel]** to return to the "Delete System" screen.

1.4 Restore System Settings

If the setting file is lost, the setting file can be restored.

Select "File" - "Restore System Settings", or click **[Restore Setting File]** in "[Login and registration of the station](#) ([→page 86](#))" or "[Create new system/import setting data](#) ([→page 101](#))". The "Restore System Settings" screen is displayed.

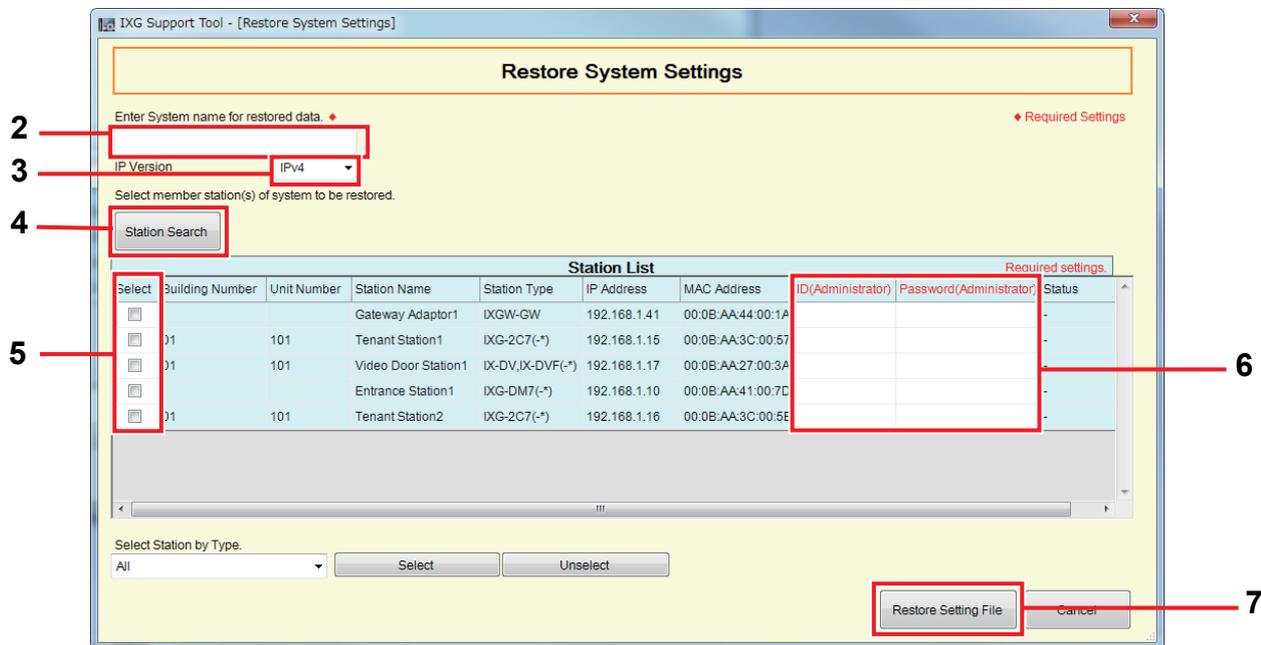


1. Connect the PC to a network on the same segment as the system.
2. Enter the name (site name) of the system for which to restore the setting file.
 - System Name:: 1-64 full-width characters, 1-128 alphanumeric characters
3. Choose the internet protocol version for the system.
 - Set the PC to the same communication type.
4. Click **[Station Search]** to search stations and display them in the "Station List." (Searching may take several minutes.)
 - The stations without power and the stations in the process of initialization will not be subject to search.
 - Search up to 9999 stations at a time.
 - Stations on other segments cannot be searched.
5. Select the station from which to restore the setting file. (Multiple selections allowed.)
 - If the station number is duplicated or does not exist, the setting file will not be restored.
 - To select or unselect stations in a batch, choose the station type and click **[Select]** or **[Unselect]**.
6. Enter the "ID(Administrator)" and "Password(Administrator)" for the station selected in Step 5.
 - If "ID(Administrator)" or "Password(Administrator)" are wrong, the setting file will not be restored.
7. Click **[Restore Setting File]**.

8. Click **[OK]**.

- Click **[Cancel]** to return to the "Restore System Settings" screen.

9. Click **[OK]**.

- The result is displayed in "Station List" - "Status."
In Process: The setting file is in the process of restoring.
Success: Restore successful.
Failed: Restore failed.
- Restored setting files are saved as follows in "Local Disk (C)" - "users" - "public" - "Documents" - "Aiphone" - "IXG" - "SupportTool" - "SystemData."
 - Setting file: "NewIXSystem(Set Site Name).db"
 - Sound file: Saved as a WAV file in "(Set Site Name)" - "Setting (Hidden Folder)" - "(Station Number)"
 - Image file: Saved as a PNG file in "(Set Site Name)" - "Setting (Hidden Folder)" - "(Station Number)"
 - Schedule file: Saved inside "(Set Site Name)" - "Setting (Hidden Folder)" - "(Station Number)" as "SCHED_CHIME.txt," "SCHED_GROUP.txt," "SCHED_OUTPUT.txt," "SCHED_TRANSFER.txt," or "SCHED_REC.txt" (the saved content differs depending on the station).
- The items that could not be restored are displayed as shown below.

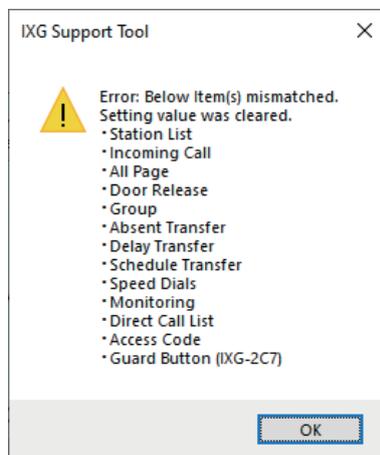


1.5 Exporting the IXG Support Tool System Configuration

Backup setting files created in IXG Support Tool.

If the settings are lost, it may be impossible to restore them after maintenance or after-sales servicing.


Select "File" - "Export System Configuration." The "Export Settings" screen is displayed.

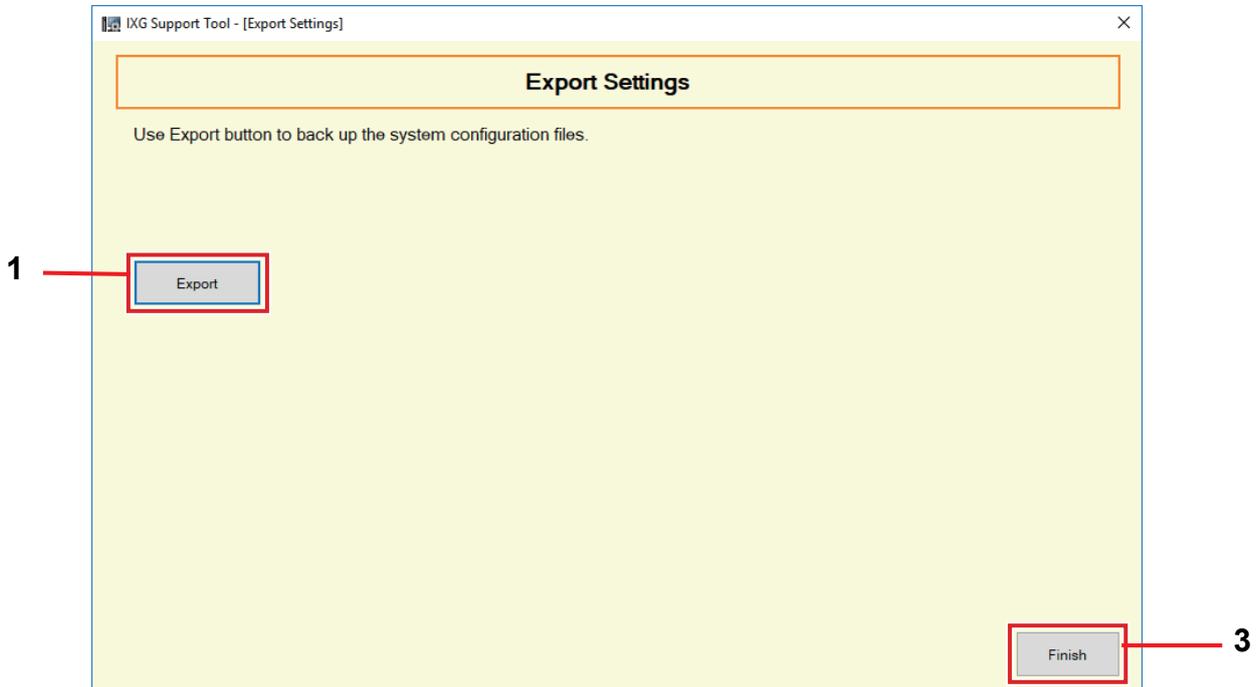

1. Click **[Export]**.
2. Select the folder where the setting file is saved and click **[OK]**.
 - A folder with the name specified in "Site Name" will be created in the specified directory, and the system configuration file will be saved inside as a hidden file.
Copy the entire "Site Name" folder to store the setting file.
 - Click **[Cancel]** to return to the "Export Settings" screen without saving the setting file.
3. Click **[Finish]**.

1.6 Outputting IXG Supervision Tool Data

To use registered station information with the IXG Supervision Tool, output the file in Address Book format. Select "File" - "Export to IXG Supervision Tool" to display the following screen.

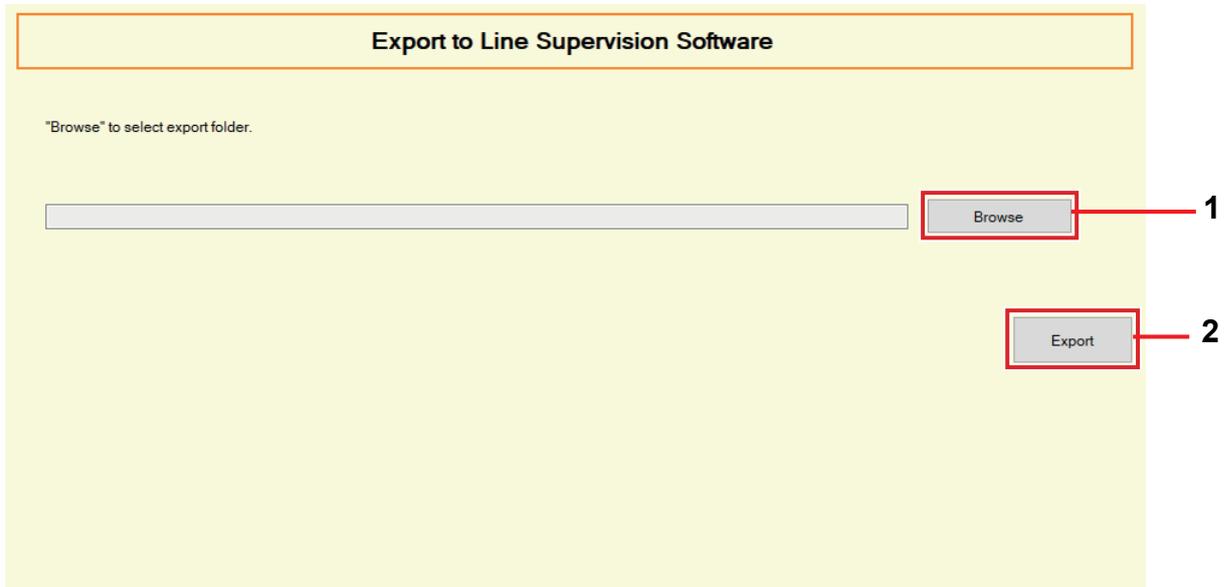

1. Click **[Browse]** and select the folder where the setting file will be saved.
2. Click **[Export]**.
3. Click **[OK]**.
 - The setting file will be saved as "SettingAddressList.txt."
 - Information for stations without configured IP addresses will not be output.

1.7 IXG Support Tool Settings

Select "File" - "IXG Support Tool Settings." The "IXG Support Tool Settings" screen will be displayed.

How to configure IXG Support Tool Settings

1. Configure each item.
2. If a proxy server is used to access the IXG Cloud Server, check the "Use Proxy Server" box and enter the required information.
3. Click [OK].
 - Click [Cancel] to exit.

■ Administrator ID◆

Description	Configure the ID used to login to IXG Support Tool in Administrator mode.
Settings	1-32 alphanumeric characters
Default value	admin

Administrator Password◆

Description	Configure the password used to login to IXG Support Tool in Administrator mode.
Settings	1-32 alphanumeric characters
Default value	admin

Confirm Password◆

Description	Enter the "Administrator Password" again.
Settings	1-32 alphanumeric characters
Default value	admin

Property Manager ID◆

Description	Configure the ID used to login to IXG Support Tool in Property Manager mode.
Settings	1-32 alphanumeric characters
Default value	admin

Property Manager Password◆

Description	Configure the password used to login to IXG Support Tool in Property Manager mode.
Settings	1-32 alphanumeric characters
Default value	admin

Confirm Password◆

Description	Enter the "Property Manager Password" again.
Settings	1-32 alphanumeric characters
Default value	admin

Select NIC

Description	Select the network interface card (NIC).
Settings	Select the NIC used for the PC.
Default value	-

IP Version

Description	Choose the protocol for IXG Support Tool.
Settings	<ul style="list-style-type: none"> • IPv4 • IPv6
Default value	IPv4

Hostname

Description	Enter the IP address of the proxy server.
Settings	1-255 alphanumeric characters
Default value	-

Port

Description	Enter the port number of the proxy server.
Settings	1-5 digits
Default value	-

■ ID

Description	Enter the ID used for proxy authentication.
Settings	1-255 alphanumeric characters
Default value	-


■ Password

Description	Enter the password used for proxy authentication.
Settings	1-255 alphanumeric characters
Default value	-

1.8 Exit

Select "File" - "Exit" to close IXG Support Tool.

2. Connection

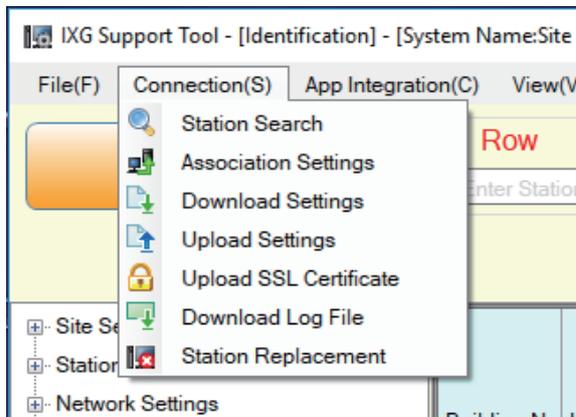

2.1 Station Search

Search the stations in IXG and IX Systems connected in the network to show the list.

1. Connect the PC to a network on the same segment as the system.
 - Set this to the same IP version as the system. Refer to ["IXG Support Tool Settings \(→page 110\)"](#) for information of configuring the IP version.
2. Select "Connection" - "Station Search". The stations searched are displayed on the "Station Search" screen. (Searching may take several minutes.)
 - The stations without power and the stations in the process of initialization will not be subject to search.
 - Search up to 9999 stations at a time.
 - Stations on other segments cannot be searched.
 - Click **[Search]** to search again.

Station Search

Search results within the local network.

Station List								Required settings
Building Number	Unit Number	Station Name	Station Type	IP Address	MAC Address	Firmware Version	Sub Firmware Version (for IXG-DM7)	
		Gateway Adaptor1	IXGW-GW	192.168.1.41	00:0B:AA:44:00:1A	0.19		
01	101	Video Door Station1	IX-DV,IX-DVF(-*)	192.168.1.17	00:0B:AA:27:00:3A	C.05		
01	101	Tenant Station1	IXG-2C7(-*)	192.168.1.15	00:0B:AA:3C:00:57	0.73		
01	101	Tenant Station2	IXG-2C7(-*)	192.168.1.16	00:0B:AA:3C:00:5E	0.73		
		Entrance Station1	IXG-DM7(-*)	192.168.1.10	00:0B:AA:41:00:7D	0.72		

2.2 Association Settings

The data created with IXG Support Tool is to be assigned to each station.
Associate the settings when creating the setting data.
Some items cannot be configured without association.

Association Settings

1. Select the setting file to be linked with the chosen station.

Select	Building Nu	Unit Number	Station Name	Station Type	Hostname	IP Address	Associated
<input type="radio"/>	01	001	Entrance Station1	IXG-DM7(-*)		192.168.1.10	Yes
<input type="radio"/>	01	002	Master Station1	IX-MV7-*		192.168.1.40	Yes
<input type="radio"/>	01	002	Master Station2	IX-MV7-*		192.168.1.12	-
<input type="radio"/>	01	002	Video Door Station1	IX-DV,IX-DVF(-*)		192.168.1.13	-
<input type="radio"/>	01	003	Video Door Station1	IX-DV,IX-DVF(-*)		192.168.1.14	-
<input checked="" type="radio"/>	01	101	Tenant Station1	IXG-2C7(-*)		192.168.1.15	-
<input type="radio"/>	01	101	Tenant Station2	IXG-2C7(-*)		192.168.1.16	-

2. Select the station to associate with the setting file.

Enter station MAC address:

Search and select station within local network:

Select	Building Nu	Unit Number	Station Name	Station Type	MAC Address	Associated
<input type="radio"/>			Gateway Adaptor1	IXGW-GW	00:0B:AA:44:00:1A	Yes
<input type="radio"/>	01	101	Video Door Station1	IX-DV,IX-DVF(-*)	00:0B:AA:27:00:3A	Yes
<input type="radio"/>			Entrance Station1	IXG-DM7(-*)	00:0B:AA:41:00:7D	Yes
<input checked="" type="radio"/>	01	101	Tenant Station1	IXG-2C7(-*)	00:0B:AA:3C:00:57	-
<input type="radio"/>	01	101	Tenant Station2	IXG-2C7(-*)	00:0B:AA:3C:00:5E	-

5

Station(s) that have been associated with a setting file are listed below.

Select	Building Nu	Unit Number	Station Name	Station Type	IP Address	MAC Address	Status
<input checked="" type="checkbox"/>	01	106	Master Station1	IX-MV7-*	192.168.1.27	00:0B:AA:2F:08:26	Success
<input checked="" type="checkbox"/>	01	101	Video Door Station1	IX-DV,IX-DVF(-*)	192.168.1.17	00:0B:AA:27:00:3A	Success
<input checked="" type="checkbox"/>	01	002	Master Station1	IX-MV7-*	192.168.1.40	00:0B:AA:00:F8:2C	Success
<input checked="" type="checkbox"/>	01	001	Entrance Station1	IXG-DM7(-*)	192.168.1.10	00:0B:AA:41:00:7D	Success
<input checked="" type="checkbox"/>			Gateway Adaptor1	IXGW-GW	192.168.1.41	00:0B:AA:44:00:1A	Success

Station Settings List
A list of the setting files that have been created will be shown.

Station List
The searched stations will be shown.

Search again for stations.

Associated Stations List
The settings that have been associated will be shown.

Perform association again.

Removes association.

1. Connect the PC to a network on the same segment as the system.
 - Set this to the same IP version as the system. Refer to ["IXG Support Tool Settings \(→page 110\)"](#) for information of configuring the IP version.


2. Select "Connection" - "Association Settings" to search for stations and display the "Association Settings" screen. (Searching may take several minutes.)
 - The stations without power and the stations in the process of initialization will not be subject to search.
 - Search up to 9999 stations at a time.
 - Click **[Station Search]** to search again.
 - Stations on other segments cannot be searched. To associate a station on another segment, go to the network on the other segment and make an association.
3. Select the file to associate from "Station Settings List."
 - A setting file that has already been associated cannot be selected.
 - A setting file without a configured IP address cannot be selected.
4. Select the station with which the setting file selected at Step 3 will be associated from "Station List."
 - A station that has already been associated cannot be selected.
 - Select "Enter station MAC address:" to specify a station by entering the MAC address.
 - When specifying a station from the "Station List" which has the "ID(Administrator)" and "Password(Administrator)" set to values other than "admin," select "Enter Station ID and Station Password" and input the "ID(Administrator)" and "Password(Administrator)" for the associated station.
 - To associate a station on another segment, go to the network on the other segment and make an association.
5. Click **[Apply]**.
 - The settings that have been associated will be shown in "Associated Stations List."
If a new IP address has been set or the address has been changed, the station will restart and the IP address and station name will be updated.
6. Repeat Steps 3 - 5 and associate all stations.
 - To remove an association, select what to remove from "Associated Stations List" (multiple selections allowed), and then click **[Remove Association]**.

2.3 Download Settings

Obtain (download) settings from a station.

If ["Association Settings \(→page 115\)"](#) is not performed in advance, downloading is not possible.

Select "Connection" - "Download Settings." The "Setting File Download" screen will be displayed.

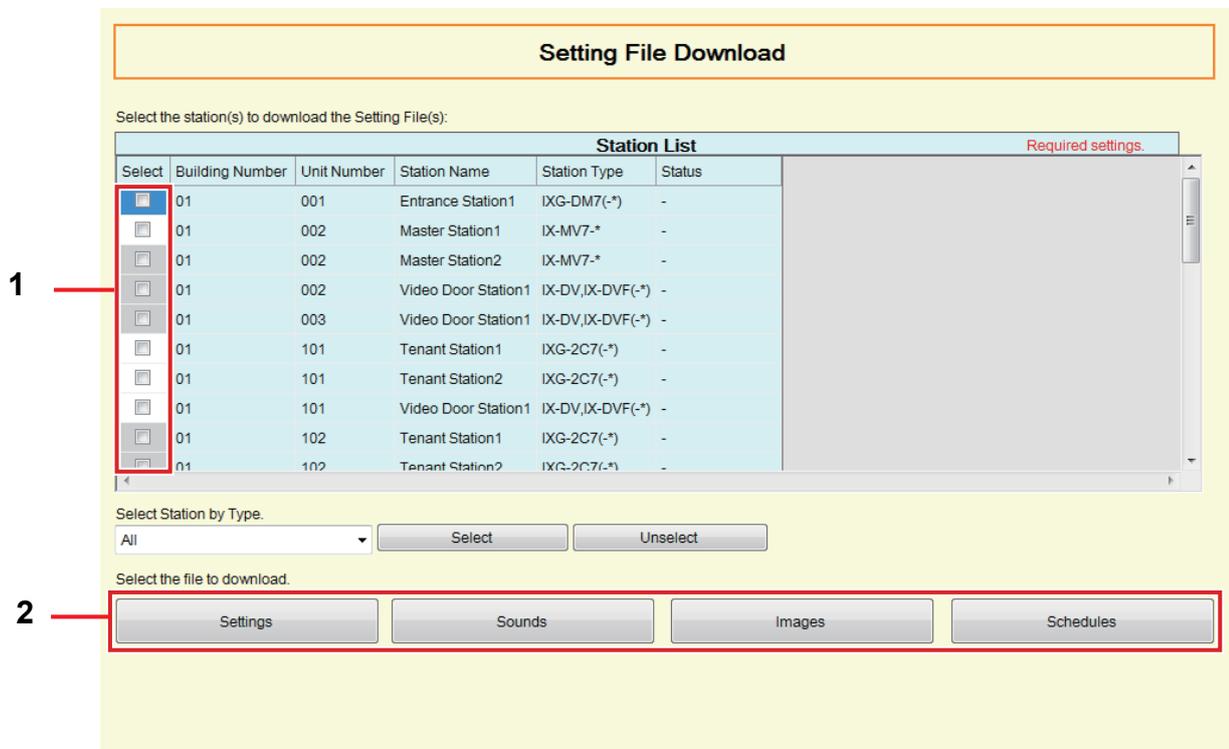


How to obtain settings

1. Select the station from which to download the setting file from "Station List." (Multiple selections allowed.)
 - To select or unselect stations in a batch, choose the station type and click **[Select]** or **[Unselect]**.
 - Stations in which ["Association Settings \(→page 115\)"](#) has not been performed cannot be selected.
2. Download the file.
 - [Settings]**: Download only the setting file.
 - [Sounds]**: Download the setting file and audio file for a custom tone.
 - [Images]** (IXG-DM7(-*) only): Download the setting file and the image file for Welcome Screen Settings.
 - [Schedules]** (IX-MV7-* only): Download transfer and other schedule setting files.

3. Click [OK].

- Click [**Cancel**] to return to the "Setting File Download" screen without downloading.

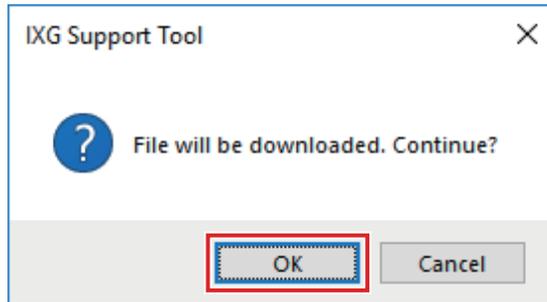

4. Click [OK].

- The file download result is displayed in "Station List" - "Status."
 - In Process: The file is in the process of downloading.
 - Success: Download is completed.
 - Failed: Download failed. Try downloading again.
 - Unavailable: This is displayed when a file that cannot be uploaded to a station is selected to download in Step 2.
- Downloaded files are saved as follows in "Local Disk (C)" - "users" - "public" - "Documents" - "Aiphone" - "IXG" - "SupportTool" - "SystemData."
 - Setting file: "NewIXSystem(Set Site Name).db"
 - Sound file: Saved as a WAV file in "(Set Site Name)" - "Setting (Hidden Folder)" - "(Station Number)"
 - Image file: Saved as a PNG file in "(Set Site Name)" - "Setting (Hidden Folder)" - "(Station Number)"
 - Schedule file: Saved inside "(Set Site Name)" - "Setting (Hidden Folder)" - "(Station Number)" as "SCHED_CHIME.txt," "SCHED_GROUP.txt," "SCHED_OUTPUT.txt," "SCHED_TRANSFER.txt," or "SCHED_REC.txt" (the saved content differs depending on the station).

2.4 Upload Settings


Upload settings created using IXG Support Tool onto the station.

If ["Association Settings \(→page 115\)"](#) is not performed in advance, uploading is not possible.

Select "Connection" - "Upload Settings." The "Setting File Upload" screen will be displayed.


! Important

- When the IXGW-GW settings have been uploaded, synchronize on the ["Manual IXG Cloud Server and Gateway Sync \(→page 143\)"](#) screen. The Intercom App cannot be used without synchronizing.
- If a custom tone/image was registered, be sure to upload each file to the station in "Sounds" - "Images."
The following will occur if only the setting file is uploaded.
 - The default tone will play when the operation in which the custom tone was set is performed.
 - "Download Settings" will fail.
 - "Upload Settings" will fail.

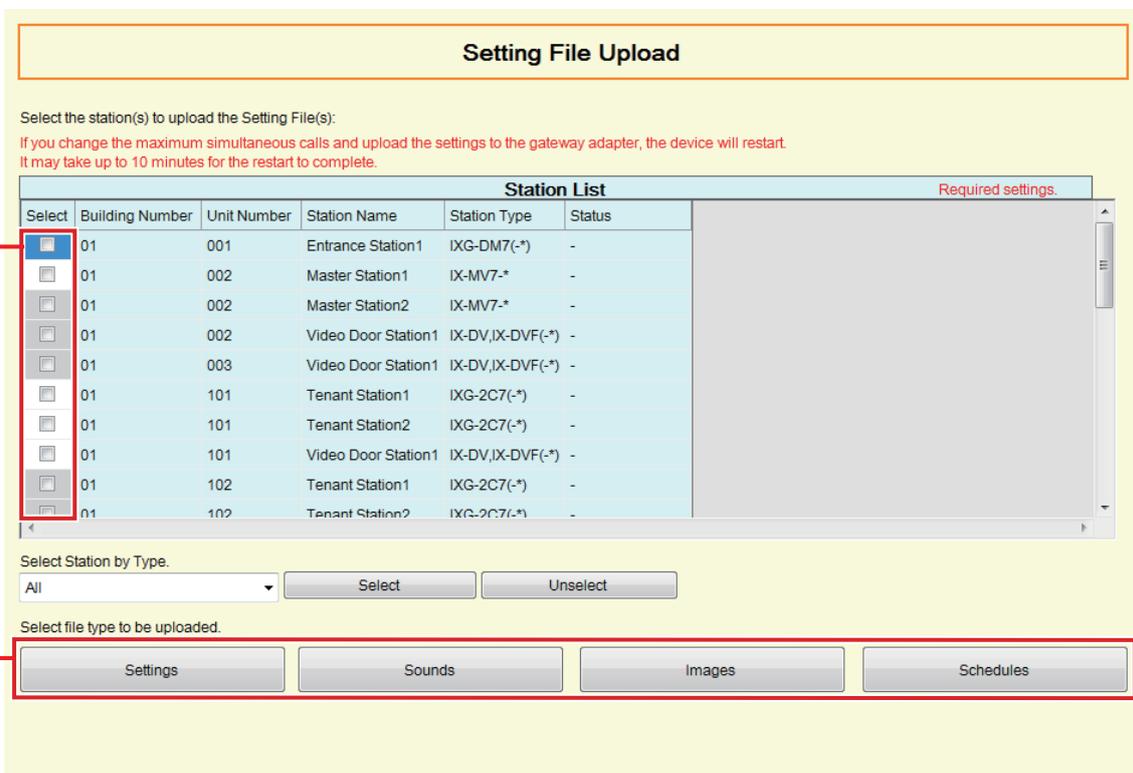

How to upload settings


1. Select the station from which to upload the setting file from "Station List." (Multiple selections allowed.)
 - To select or unselect stations in a batch, choose the type and click **[Select]** or **[Unselect]**.
 - Stations in which ["Association Settings \(→page 115\)"](#) has not been performed cannot be selected.
2. Upload the file.
 - [Settings]**: Upload only the setting file.
 - [Sounds]**: Upload the setting file and audio file for a custom tone.
 - [Images]** (IXG-DM7(-*) only): Download the setting file and the image file for Welcome Screen Settings.
 - [Schedules]** (IX-MV7-* only): Select and upload transfer and other schedule setting files. Refer to ["How to upload schedules \(→page 121\)"](#).
3. If **[Settings]**, **[Sounds]**, or **[Images]** was clicked, click **[OK]**.
 - Click **[Cancel]** to return to the "Setting File Upload" screen without uploading.

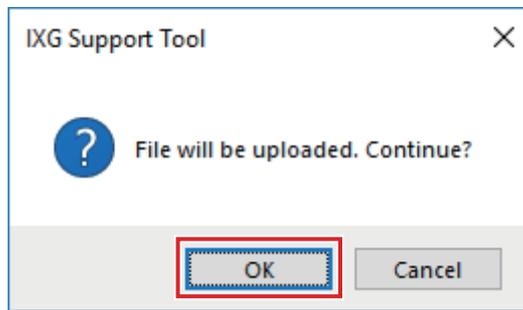

4. Click **[OK]**.
 - The file upload result is displayed in "Station List" - "Status."
 - In Process: The file is in the process of uploading.
 - Success: Upload is completed.
 - Failed: Upload failed. Try uploading again.
 - Unavailable: This is displayed when a file that cannot be uploaded was selected in Step 2.
5. When the IXGW-GW settings have been uploaded, click **[Sync]** on the ["Manual IXG Cloud Server and Gateway Sync \(→page 143\)"](#) screen.

How to upload schedules

In Step 2 of "[How to upload settings \(→page 120\)](#)", if **[Schedules]** is clicked, the following screen is displayed.

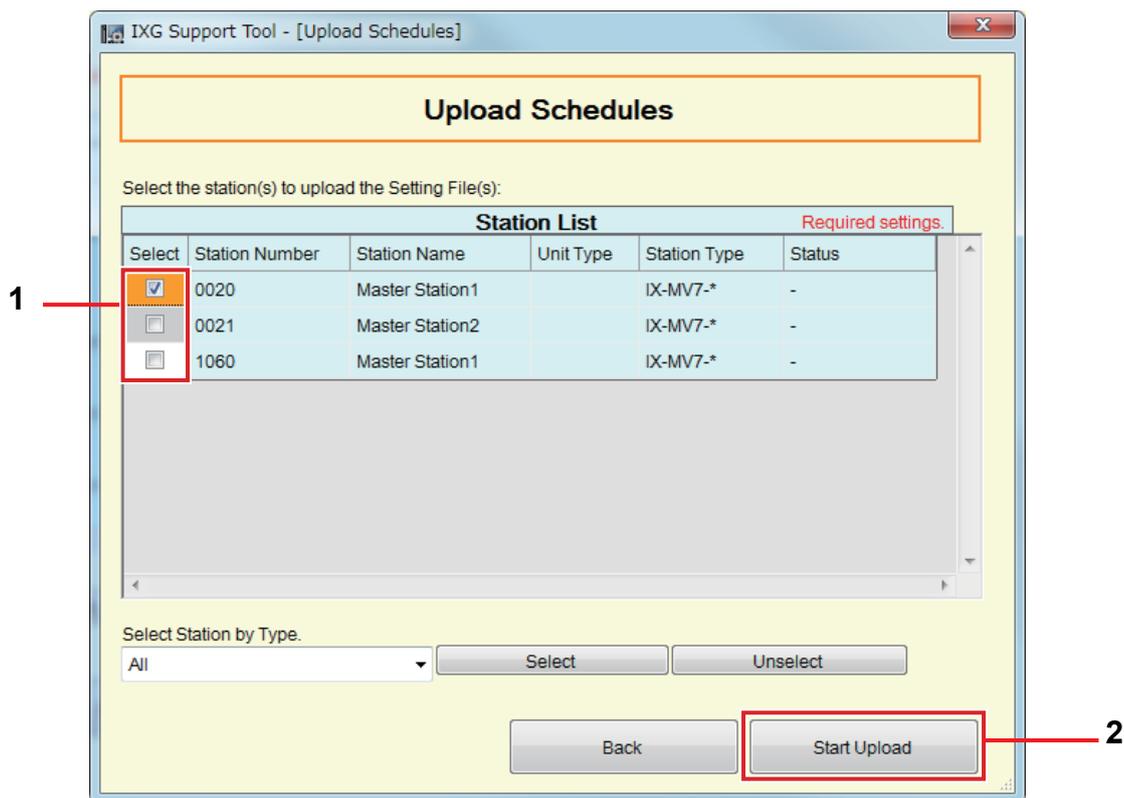

1. Select the station from which to upload the schedule file, from the station list. (Multiple selections allowed.)
 - To select or unselect stations in a batch, choose the station type and click **[Select]** or **[Unselect]**.
2. Click **[Start Upload]**.
3. Click **[OK]**.
 - Click **[Cancel]** to return to the "Upload Schedules" screen without uploading.

2.5 Upload SSL certificate

Apply the SSL certificate data to the station.

If "[Association Settings \(→page 115\)](#)" is not performed in advance, uploading is not possible. Select "Connection" - "Upload SSL Certificate." The "Certification Upload / Delete" screen will be displayed.

Chose a security certification to be uploaded.

SSL Certificate
Upload certificate set for each station.

Select the station(s) to upload the Setting File(s):

Select	Building Number	Unit Number	Station Name	Station Type	Status
<input checked="" type="checkbox"/>	01	002	Master Station1	IX-MV7-*	-
<input type="checkbox"/>	01	002	Master Station2	IX-MV7-*	-
<input type="checkbox"/>	01	002	Video Door Station1	IX-DV,IX-DVF(-*)	-
<input type="checkbox"/>	01	003	Video Door Station1	IX-DV,IX-DVF(-*)	-
<input type="checkbox"/>	01	101	Video Door Station1	IX-DV,IX-DVF(-*)	-
<input type="checkbox"/>	01	102	Video Door Station1	IX-DV,IX-DVF(-*)	-
<input type="checkbox"/>	01	103	Video Door Station1	IX-DV,IX-DVF(-*)	-
<input type="checkbox"/>	01	104	Video Door Station1	IX-DV,IX-DVF(-*)	-
<input type="checkbox"/>	01	105	Video Door Station1	IX-DV,IX-DVF(-*)	-
<input type="checkbox"/>	01	106	Master Station1	IX-MV7-*	-
<input type="checkbox"/>	01	106	Video Door Station1	IX-DV,IX-DVF(-*)	-
<input type="checkbox"/>	01	201	Video Door Station1	IX-DV,IX-DVF(-*)	-
<input type="checkbox"/>	01	202	Video Door Station1	IX-DV,IX-DVF(-*)	-
<input type="checkbox"/>	01	203	Video Door Station1	IX-DV,IX-DVF(-*)	-
<input type="checkbox"/>	01	204	Video Door Station1	IX-DV,IX-DVF(-*)	-

Select Station by Type.
All


1. Select the type of certificate to be uploaded.
 - Set the file to upload in "[SSL Certificate \(→page 238\)](#)".
2. Select the station from which to upload the file from "Station List." (Multiple selections allowed.)
 - To select or unselect stations in a batch, choose the station type and click **[Select]** or **[Unselect]**.
3. Click **[Upload]**.
 - Click **[Delete]** to delete the uploaded file.
4. Click **[OK]**.
 - Click **[Cancel]** to return to the "Certification Upload / Delete" screen without uploading.
 - The file upload result is displayed in "Station List" - "Status."
 - In Process: The file is in the process of uploading.
 - Success: Upload is completed.
 - Failed: Upload failed. Try uploading again.
 - Unavailable: This is displayed when a file that cannot be uploaded was selected in Step 1.
 - No certification: Set the file to upload in "[SSL Certificate \(→page 238\)](#)".

2.6 Download Log File

Obtain (download) log files from IXG-DM7(-*), IXG-2C7(-*), IXGW-LC, or IXGW-GW.

If "[Association Settings \(→page 115\)](#)" is not performed in advance, downloading is not possible.

Select "Connection" - "Download Log File ." The "Download Log" screen will be displayed.

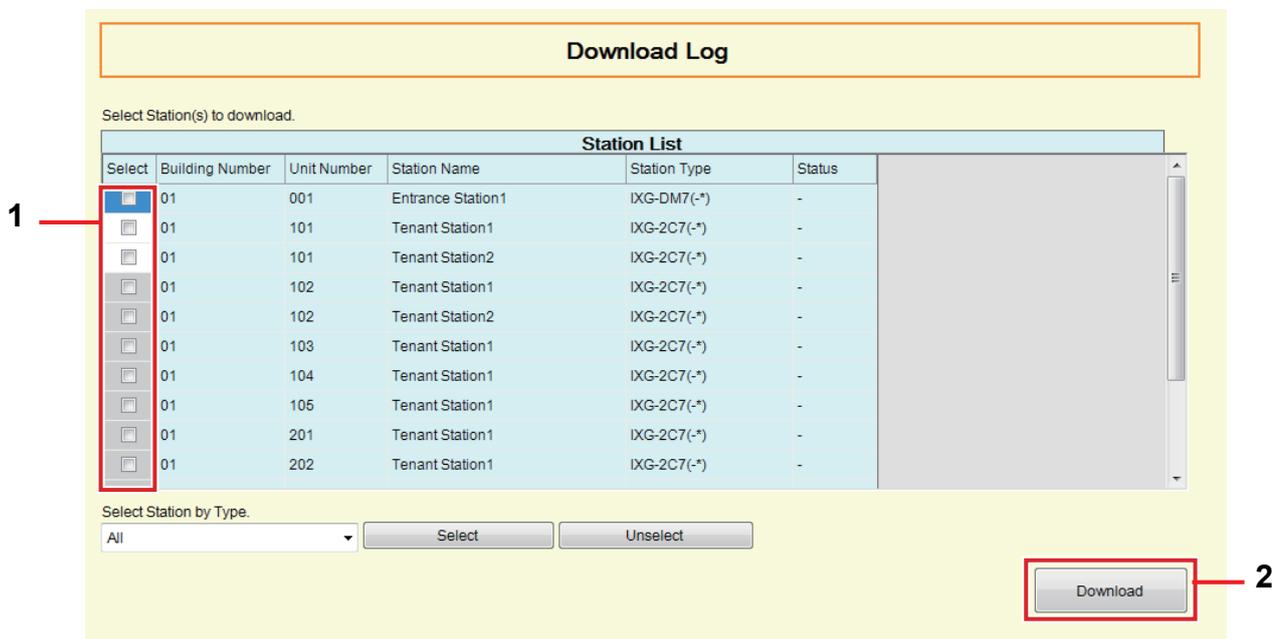

How to obtain log files

1. Select the station from which to download the log files from "Station List." (Multiple selections allowed.)
 - To select or unselect stations in a batch, choose the station type and click **[Select]** or **[Unselect]**.
 - Stations in which "[Association Settings \(→page 115\)](#)" has not been performed cannot be selected.
2. Click **[Download]**.
3. Click **[OK]**.
 - Click **[Cancel]** to return to the "Download Log" screen without downloading.
4. Select the folder where the log files are saved and click **[OK]**.
 - A folder with the name "Station Number_Date_log.gz" will be created in the specified directory, and the log files will be saved inside as hidden files.
 - Click **[Cancel]** to return to the "Download Log" screen without saving log files.
 - The file download result is displayed in "Station List" - "Status."
 - In Process: The file is in the process of downloading.
 - Success: Download is completed.
 - Failed: Download failed. Try downloading again.
5. Click **[OK]**.

2.7 Station Replacement

Use this feature to replace a station that is malfunctioning, etc. A station can only be replaced with one of the same station type.



Note

- To replace a station on another segment, select "Connection" - "Association Settings" to remove the association with the malfunctioning station and then associate the newly installed station.

Station Replacement

1. Select the station to be replaced:

Select	Building Nu	Unit Number	Station Name	Station Type	MAC Address
<input type="radio"/>	01	001	Entrance Station1	IXG-DM7(-*)	00:0B:AA:41:00:7D
<input type="radio"/>	01	002	Master Station1	IX-MV7-*	
<input type="radio"/>	01	002	Master Station2	IX-MV7-*	
<input type="radio"/>	01	002	Video Door Station1	IX-DV,IX-DVF(-*)	
<input type="radio"/>	01	003	Video Door Station1	IX-DV,IX-DVF(-*)	
<input type="radio"/>	01	101	Tenant Station1	IXG-2C7(-*)	00:0B:AA:3C:00:57
<input type="radio"/>	01	101	Tenant Station2	IXG-2C7(-*)	00:0B:AA:3C:00:5E
<input checked="" type="radio"/>	01	101	Video Door Station1	IX-DV,IX-DVF(-*)	00:0B:AA:27:00:3A
<input type="radio"/>	01	102	Tenant Station1	IXG-2C7(-*)	

2. Select the replacement station:

Enter Station ID and Station Password.

ID/Administrator:


Password/Administrator:

Select	MAC Address	Station Type
<input type="radio"/>	00:0B:AA:2F:08:26	IX-MV7-*
<input type="radio"/>	00:0B:AA:00:F8:2C	IX-MV7-*
<input type="radio"/>	00:0B:AA:44:00:1A	IXGW-GW
<input checked="" type="radio"/>	00:0B:AA:27:00:3A	IX-DV,IX-DVF(-*)
<input type="radio"/>	00:0B:AA:2B:00:06	IX-FA
<input type="radio"/>	00:0B:AA:41:00:7D	IXG-DM7(-*)
<input type="radio"/>	00:0B:AA:3C:00:57	IXG-2C7(-*)
<input type="radio"/>	00:0B:AA:3C:00:5E	IXG-2C7(-*)

The MAC address for the associated stations will be displayed. If there are no associations, there will be no display.

1. Connect the PC to a network on the same segment as the system.
 - Set this to the same IP version as the system. Refer to ["IXG Support Tool Settings \(→page 110\)"](#) for information of configuring the IP version.
2. Replace the station.
3. Select "Connection" - "Station Replacement" to search for stations and display the "Station Replacement" screen. (Searching may take several minutes.)
 - The stations without power and the stations in the process of initialization will not be subject to search.
 - Search up to 9999 stations at a time.
 - Click **[Search]** to search again.
 - Stations on other segments cannot be searched.
4. Select the station to replace from "Station List."
 - Stations that are not associated cannot be selected.


5. Select the newly installed station from "Station List."
 - When specifying a station from the "Station List" which has the "ID(Administrator)" and "Password(Administrator)" set to values other than "admin," select "Enter Station ID and Station Password" and input the "ID(Administrator)" and "Password(Administrator)" for the associated station.
6. Click **[Apply]**.
7. Click **[OK]**.
 - The setting data will be uploaded to the newly installed station.
 - Click **[Cancel]** to return to the "Station Replacement" screen without uploading.

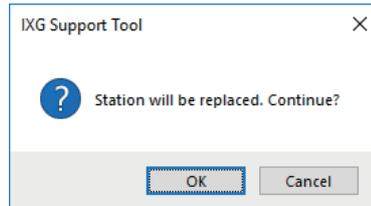

8. Click **[OK]**.

3. App Integration

If the "App" was registered in ["Units / Stations \(→page 151\)"](#), registration on IXG Cloud Server is necessary. Create an IXG Cloud Server account and log in.

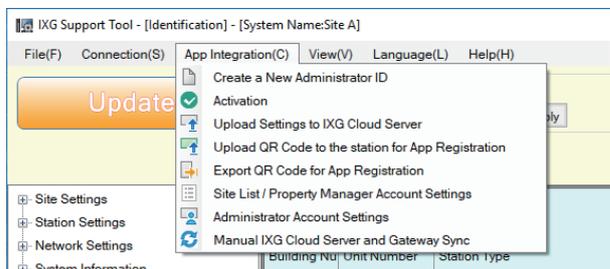

3.1 Create a New Administrator ID

Create an administrator account of the IXG Cloud Server.


Click "App Integration" - "Create a New Administrator ID." The following screen will be displayed.

 A screenshot of a dialog box titled "IXG Support Tool - [Create a New Administrator ID]". The dialog has a yellow background and a title bar with a close button. The main heading is "Create a New Administrator ID". Below the heading are four input fields: "Administrator ID", "Password", "Confirm Password", and "Email Address". Below the "Password" field, there is a note: "The password must be at least 8 characters and include uppercase letters, lowercase letters, and numbers." At the bottom of the dialog are two buttons: "Create" and "Cancel".


How to create a new administrator account

1. Enter the following information.
 - Administrator ID: 1-22 alphanumeric characters
 - Password: The password must be at least 8 alphanumeric characters and include uppercase letters, lowercase letters, and numbers.
 - Confirm Password: Enter the same password again.
 - Email Address: 1-64 alphanumeric characters


2. Click **[Create]**.
 - A Verification Code will be sent to the registered email address.
 - Click **[Cancel]** to exit.
3. Click **[OK]**.

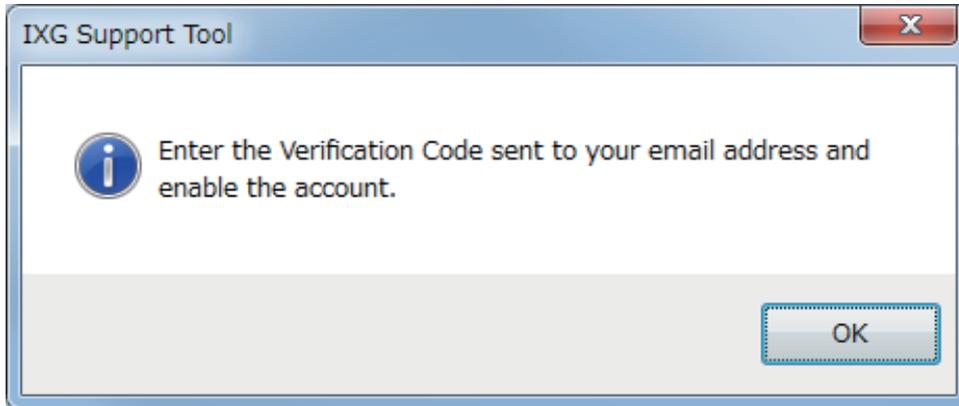

4. Enter the "Verification Code" contained in the email and then click **[Activate]**.
 - The administrator account has now been created on the IXG Cloud Server.
 - Click **[Cancel]** to exit.

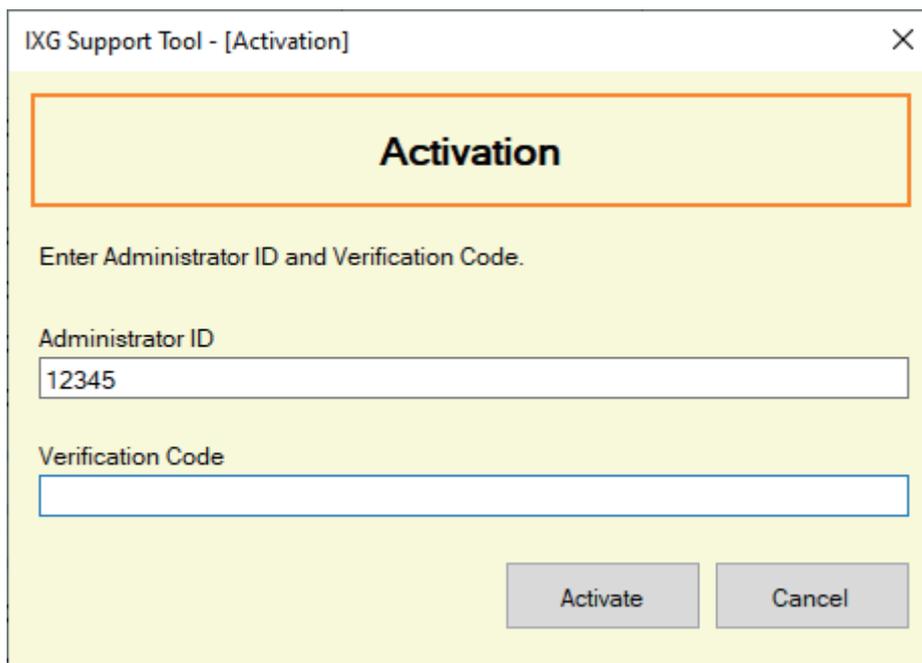A screenshot of a dialog box titled "IXG Support Tool - [Activation]". It has a yellow background and a close button (X) in the top right corner. A large orange-bordered box at the top contains the word "Activation" in bold. Below this, the text "Enter Administrator ID and Verification Code." is displayed. There are two input fields: "Administrator ID" with the value "12345" and "Verification Code" which is empty. At the bottom, there are two buttons: "Activate" and "Cancel".


5. Click **[OK]**.

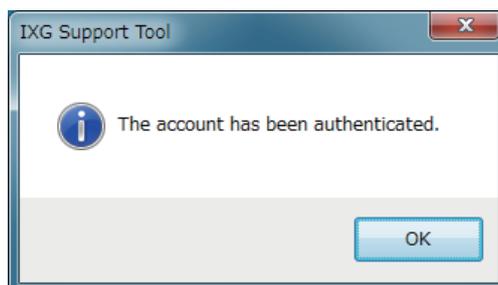

3.2 Activation

Continue to configure settings if up to Step 3 in [“Create a New Administrator ID \(→page 126\)”](#) was finished but Steps 4 and onward were not performed.

Click "App Integration" - "Activation." The following screen will be displayed.

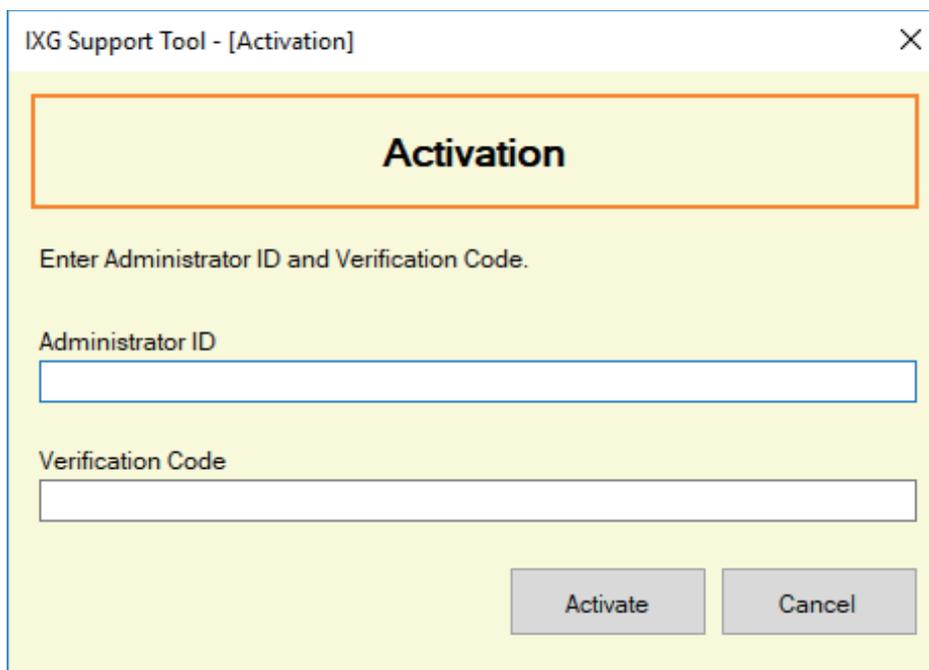

IXG Support Tool - [Activation] ×

Activation

Enter Administrator ID and Verification Code.

Administrator ID


Verification Code

Activate Cancel

How to activate the administrator account

An email containing a "Verification Code" will be sent to the registered email address in Step 1 of [“Create a New Administrator ID \(→page 126\)”](#).

1. Enter the "Verification Code" contained in the email and then click **[Activate]**.
 - The administrator account has now been created on the IXG Cloud Server.
 - Click **[Cancel]** to exit.

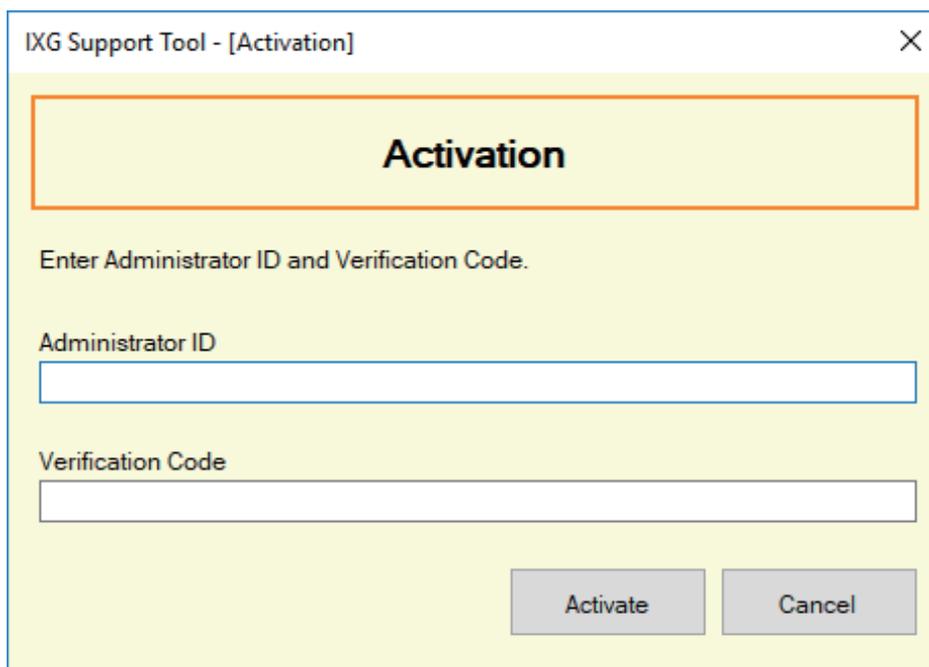

IXG Support Tool - [Activation] ×

Activation


Enter Administrator ID and Verification Code.

Administrator ID

Verification Code

Activate Cancel

2. Click [OK].

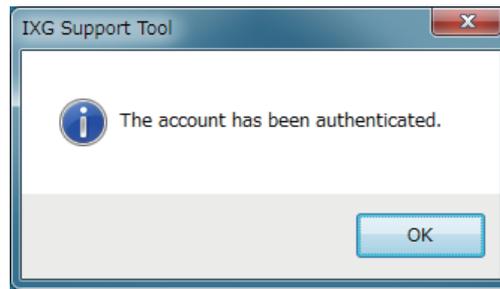

3.3 Upload Settings to IXG Cloud Server

If "App" was registered in ["Units / Stations \(→page 151\)"](#), the following setting data configured in IXG Support Tool will need to be uploaded to IXG Cloud Server.

- Site Information, Installer Information, Property Management Information
- Building Name
- Unit Name
- Station Name
- Station List
- Mobile App List

Refer to ["Uploading a new site to the IXG Cloud Server \(→page 130\)"](#) if a new site was created in IXG Support Tool. Refer to ["Uploading an existing site to the IXG Cloud Server \(→page 132\)"](#) if the setting data of a site that was already registered was updated in IXG Support Tool.

3.3.1 Uploading a new site to the IXG Cloud Server

Finish configuring the following settings prior to uploading settings to the IXG Cloud Server.


- Gateway Registration ([→page 155](#))
- Gateway Selection ([→page 156](#))
- IXG Support Tool Settings ["IXG Support Tool Settings \(→page 110\)"](#)
- Create new administrator account on the IXG Cloud Server ["Create a New Administrator ID \(→page 126\)"](#)
- Site Information, Installer Information, Property Management Information ["Site Information \(→page 148\)"](#)
- Building Name ["Building Information \(→page 150\)"](#)
- Unit Name ["Units / Stations \(→page 151\)"](#)
- Station Name ["Identification \(→page 157\)"](#)
- Station List ["Station List \(→page 187\)"](#)
- Mobile App List ["Mobile App List \(→page 190\)"](#)

Select "App Integration" - "Upload Settings to IXG Cloud Server." The "IXG Cloud Server Login" screen will be displayed.

How to apply settings to the IXG Cloud Server

1. Enter the "Administrator ID" (IXG Cloud Server ID) and "Password" that were entered in ["Create a New Administrator ID \(→page 126\)"](#).

2. Click **[Login]**.
 - Login to the IXG Cloud Server.
 - Click **[Cancel]** to exit.
3. Select a country which has a site.

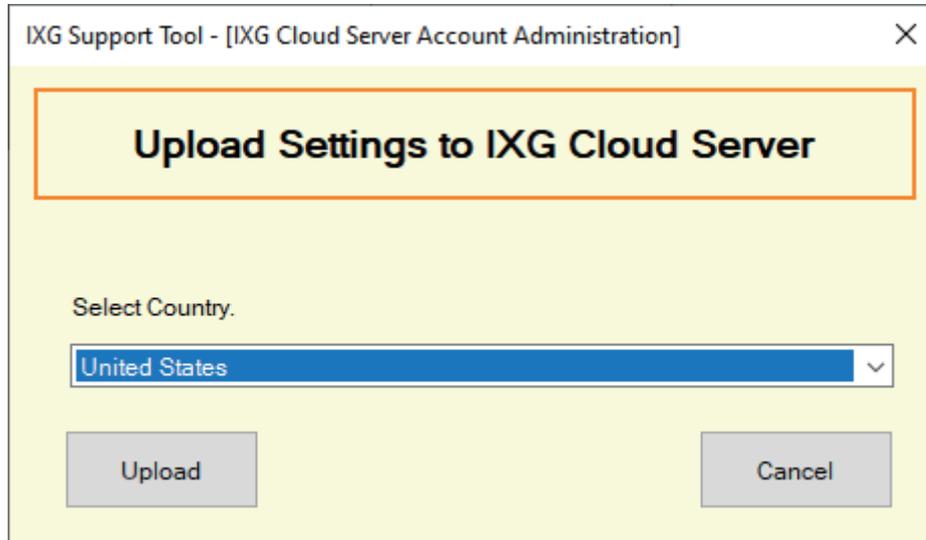

4. Click **[Upload]**.
 - Click **[Cancel]** to exit.
5. Click **[Agree]**.
 - The new site is uploaded to the IXG Cloud Server.
 - Click **[Disagree]** to exit.



6. Click **[OK]** to send the QR Code to the Tenant Station.
 - The QR code will be sent to the Tenant Station. Refer to [“Applying QR Code for App Registration to a station \(→page 135\)”](#) for details.
 - Click **[Cancel]** to exit.

3.3.2 Uploading an existing site to the IXG Cloud Server

If the following settings were changed in IXG Support Tool, upload the changes to the IXG Cloud Server.

- Site Information, Installer Information, Property Management Information [“Site Information \(→page 148\)”](#)
- Building Name [“Building Information \(→page 150\)”](#)
- Unit Name [“Units / Stations \(→page 151\)”](#)
- Station Name [“Identification \(→page 157\)”](#)
- Station List [“Station List \(→page 187\)”](#)
- Mobile App List [“Mobile App List \(→page 190\)”](#)

Select "App Integration" - "Upload Settings to IXG Cloud Server." The "IXG Cloud Server Login" screen will be displayed.


How to apply settings to the IXG Cloud Server

1. Enter the "Administrator ID" (IXG Cloud Server ID) and "Password" that were entered in [“Create a New Administrator ID \(→page 126\)”](#).
2. Click **[Login]**.
 - Login to the IXG Cloud Server.
 - Click **[Cancel]** to exit.

3. Click **[Upload]**.
- Click **[Cancel]** to exit.




4. Click **[Agree]**.
- The changes are applied to IXG Cloud Server.
 - Click **[Disagree]** to exit.

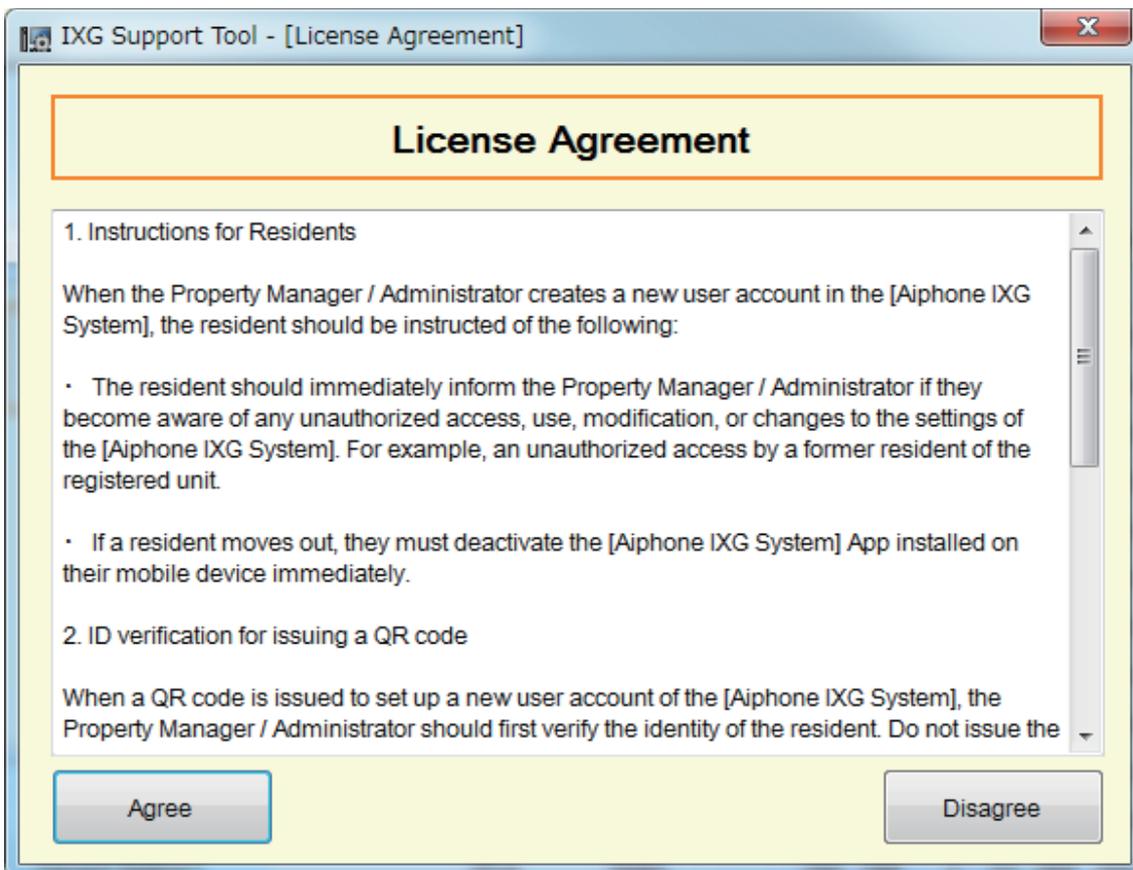

5. Click **[OK]** to send the QR Code for App Registration to the Tenant Station.
 - The QR code will be sent to the Tenant Station. Refer to [“Applying QR Code for App Registration to a station \(→page 135\)”](#) for details.
 - Click **[Cancel]** to exit.

3.4 Applying QR Code for App Registration to a station

After uploading the settings configured with IXG Support Tool in [“Upload Settings to IXG Cloud Server \(→page 130\)”](#), a QR Code for App Registration is sent to the Tenant Station. If there is no Tenant Station in a Residential unit or an Intercom App was registered in a non-Residential unit, refer to [“Export QR Code for App Registration \(→page 136\)”](#). The settings will not be uploaded unless [“Association Settings \(→page 115\)”](#) was performed first. Click "App Integration" - "Upload QR Code to the station for App Registration." The following screen will be displayed.

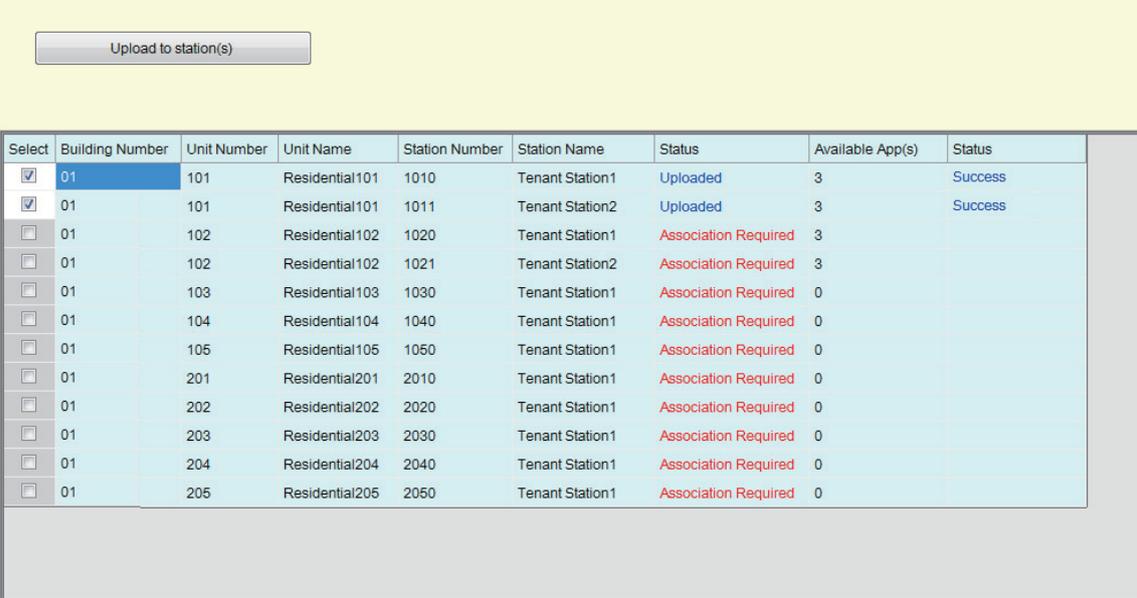

The screenshot shows a software interface with a yellow header bar containing a button labeled "Upload to station(s)". Below the button is a table with the following columns: Select, Building Number, Unit Number, Unit Name, Station Number, Station Name, Status, Available App(s), and Status. The table contains 14 rows of data representing different tenant stations.

Select	Building Number	Unit Number	Unit Name	Station Number	Station Name	Status	Available App(s)	Status
<input checked="" type="checkbox"/>	01	101	Residential101	1010	Tenant Station1	Uploaded	3	Success
<input checked="" type="checkbox"/>	01	101	Residential101	1011	Tenant Station2	Uploaded	3	Success
<input type="checkbox"/>	01	102	Residential102	1020	Tenant Station1	Association Required	3	
<input type="checkbox"/>	01	102	Residential102	1021	Tenant Station2	Association Required	3	
<input type="checkbox"/>	01	103	Residential103	1030	Tenant Station1	Association Required	0	
<input type="checkbox"/>	01	104	Residential104	1040	Tenant Station1	Association Required	0	
<input type="checkbox"/>	01	105	Residential105	1050	Tenant Station1	Association Required	0	
<input type="checkbox"/>	01	201	Residential201	2010	Tenant Station1	Association Required	0	
<input type="checkbox"/>	01	202	Residential202	2020	Tenant Station1	Association Required	0	
<input type="checkbox"/>	01	203	Residential203	2030	Tenant Station1	Association Required	0	
<input type="checkbox"/>	01	204	Residential204	2040	Tenant Station1	Association Required	0	
<input type="checkbox"/>	01	205	Residential205	2050	Tenant Station1	Association Required	0	

How to upload the QR code to the station

1. Select the Tenant Station to send the QR Code for App Registration.
2. Click **[Upload to station(s)]**.
 - The result will be displayed in "Status."
 - In Process: The QR code is being sent.
 - Success: The QR code has been applied.
 - Failed: The QR code has not been applied. Try again.
3. Click **[OK]**.

3.5 Export QR Code for App Registration

Once the settings files have been uploaded to the IXG Cloud Server in ["Upload Settings to IXG Cloud Server \(→page 130\)"](#) generate a PDF file with QR code. A QR code for App Registration can be sent to the Tenant Station if a Tenant Station is registered in the Residential Unit. Refer to ["Applying QR Code for App Registration to a station \(→page 135\)"](#).

The settings can not be uploaded to unless ["Association Settings \(→page 115\)"](#) was performed first. Click "App Integration" - "Export QR Code for App Registration." The following screen will be displayed.


Select	Building Number	Unit Number	Unit Name	Registered Master Station(s)	Available App(s)
<input type="checkbox"/>	01	001	Entrance001	0	0
<input type="checkbox"/>	01	002	Inside Area 002	0	0
<input type="checkbox"/>	01	003	Outside Area 003	0	0
<input type="checkbox"/>	01	101	Residential101	2	3
<input type="checkbox"/>	01	102	Residential102	2	3
<input type="checkbox"/>	01	103	Residential103	1	0
<input type="checkbox"/>	01	104	Residential104	1	0
<input type="checkbox"/>	01	105	Residential105	1	0
<input type="checkbox"/>	01	106	Commercial106	0	1
<input type="checkbox"/>	01	201	Residential201	1	0
<input type="checkbox"/>	01	202	Residential202	1	0
<input type="checkbox"/>	01	203	Residential203	1	0
<input type="checkbox"/>	01	204	Residential204	1	0
<input type="checkbox"/>	01	205	Residential205	1	0
<input type="checkbox"/>	01	206	Guard206	0	1

How to export the QR Code for App Registration

1. Select the unit to register a Mobile App.
2. Click **[Export QR Code for App Registration]**.
3. Specify the save directory and click **[OK]**.
 - A file with the name "(Building Number)_(Unit Number)" will be saved in the specified directory.
4. Click **[OK]**.

3.6 Site List / Property Manager Account Settings

If an account was enabled in [“Create a New Administrator ID \(→page 126\)”](#) or [“Activation \(→page 128\)”](#), login to the IXG Cloud Server to delete site information, or to register or delete the property manager ID. Select "App Integration" - "Site List / Property Manager Account Settings." The following screen will be displayed.

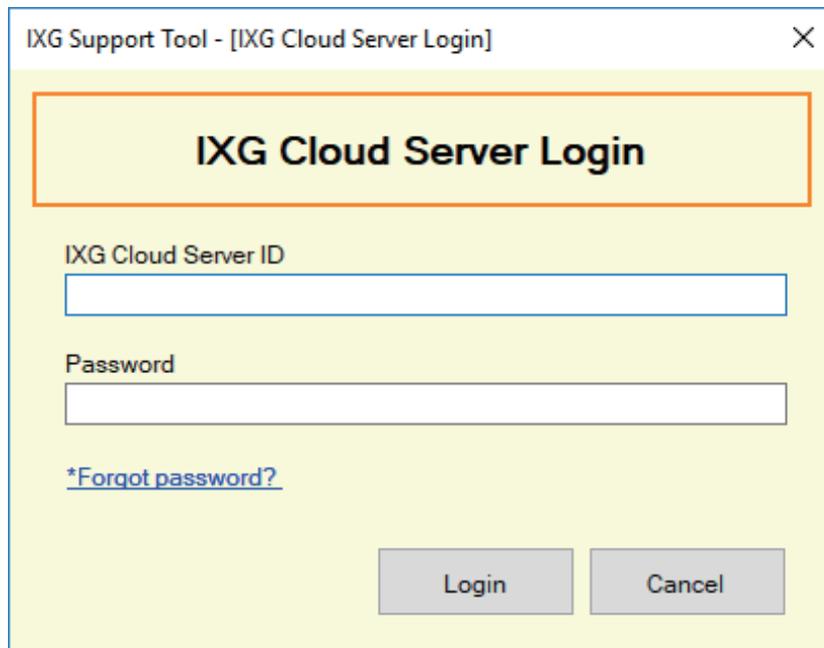

The screenshot shows a dialog box titled "IXG Support Tool - [IXG Cloud Server Login]". Inside the dialog, there is a yellow background with a white border. At the top, the text "IXG Cloud Server Login" is displayed in a large, bold, black font. Below this, there are two input fields: "IXG Cloud Server ID" and "Password". The "IXG Cloud Server ID" field is a simple white box with a blue border. The "Password" field is a white box with a blue border and a small eye icon on the right side. Below the password field, there is a blue hyperlink that says "*Forgot password?". At the bottom of the dialog, there are two buttons: "Login" and "Cancel", both in a light gray color.


How to configure Site List / Property Manager Account Settings

1. Enter the "Administrator ID" (IXG Cloud Server ID) and "Password" that were entered in [“Create a New Administrator ID \(→page 126\)”](#).
2. Click **[Login]**.
 - Login to the IXG Cloud Server.
 - Click **[Cancel]** to exit IXG Cloud Server Login.

3. Configure the Site List and Property Manager Account Settings.

The site list will not be displayed unless "[Upload Settings to IXG Cloud Server \(→page 130\)](#)" is performed.

- **OK:** Click to register the Property Manager ID and email address for each property.
- **Delete:** Click to delete the site information from the cloud server.
- Click **[Close]** to finish configuring the Site List / Property Manager Account Settings.

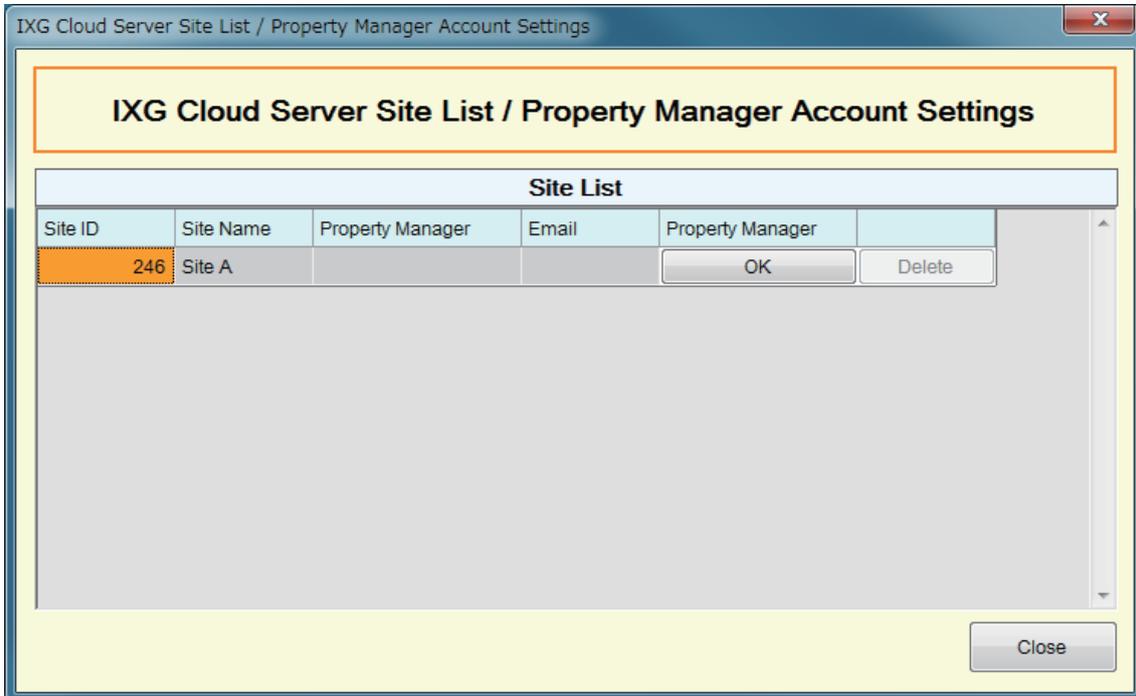

4. Click **[OK]** in Step 3 to display the following screen.

Enter the following information.

- Property Manager ID: 1-22 alphanumeric characters
- Email: 1-64 alphanumeric characters


5. Click **[Create / Add]**.

- A temporary password will be sent to the registered email address.
- Click **[Cancel]** to exit.

6. Click **[OK]**.

3.7 Administrator Account Settings

Change the email address and password of the registered Administrator Account. Configure this if the registered email address was changed, or to change the password. Select "App Integration" - "Administrator Account Settings." The following screen will be displayed.

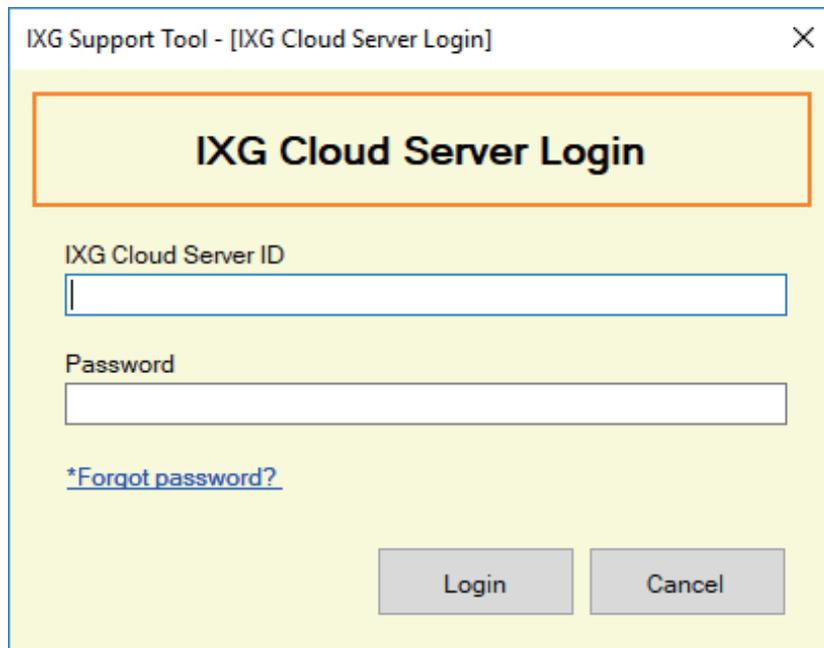

The screenshot shows a dialog box titled "IXG Support Tool - [IXG Cloud Server Login]". Inside the dialog, there is a yellow background with a white border. At the top, the text "IXG Cloud Server Login" is displayed in a large, bold, black font. Below this, there are two input fields: "IXG Cloud Server ID" and "Password". The "IXG Cloud Server ID" field is a simple text box, while the "Password" field is a text box with a small eye icon on the right side. Below the password field, there is a blue hyperlink that says "*Forgot password?". At the bottom of the dialog, there are two buttons: "Login" and "Cancel".

How to configure Administrator Account Settings

1. Enter the "Administrator ID" (IXG Cloud Server ID) and "Password" that were entered in ["Create a New Administrator ID \(→page 126\)"](#).
2. Click **[Login]**.
 - Login to the IXG Cloud Server.
 - Click **[Cancel]** to exit.

3. Change the following information if required.
 - Change Email Address: Enter the new email address and click **[Change Email Address]**. (Email: 1-64 alphanumeric characters.)
 - Change Password: Enter the current and new passwords, and then click **[Change Password]**. (The password must be at least 8 alphanumeric characters and include uppercase letters, lowercase letters, and numbers.)
 - Click **[Close]** to exit.



The screenshot shows a dialog box titled "IXG Support Tool - [IXG Cloud Server Account Administration]". The main heading is "IXG Cloud Server Account Administration". It is divided into two sections: "Change Email Address" and "Change Password".

Change Email Address section:


- Field: "New Email Address" (text input)
- Button: "Change Email Address"
- Field: "Email Address Status" (text input)
- Field: "Verified" (text input)
- Button: "Activate"

Change Password section:

- Field: "Current Password" (text input)
- Field: "New Password" (text input)
- Text: "The password must be at least 8 characters and include uppercase letters, lowercase letters, and numbers."
- Field: "Confirm Password" (text input)
- Button: "Change Password"

At the bottom right of the dialog is a "Close" button.

4. If **[Change Email Address]** was clicked in Step 3, an email containing the Verification Code will be sent to the registered email address. Click **[OK]**.
5. Enter the received "Verification Code" and then click **[Activate]**.
 - Click **[Cancel]** to exit.

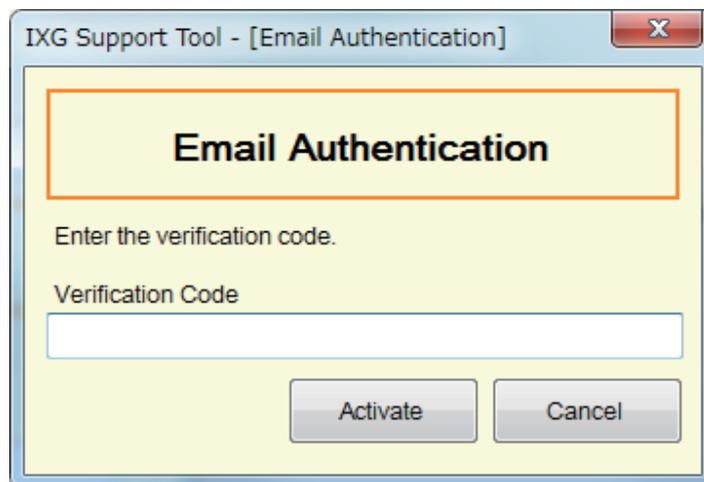

The screenshot shows a dialog box titled "IXG Support Tool - [Email Authentication]". The main heading is "Email Authentication".

Text: "Enter the verification code."

Field: "Verification Code" (text input)

Buttons: "Activate" and "Cancel"

6. Click **[OK]**.

3.7.1 Password Recovery

If the password used to login to the IXG Cloud Server was forgotten, a new password can be created. Click "App Integration" - "Upload Settings to IXG Cloud Server," "Site List / Property Manager Account Settings," or "Administrator Account Settings." The following screen will be displayed.


How to create a new password

1. Click [***Forgot password?**].
2. Enter "IXG Cloud Server ID" or "Email," and click [**Send Email**].
 - An email containing the Verification Code will be sent either to the email address associated with the IXG Cloud Server ID or to the email address that was entered.
 - Click [**Cancel**] to exit.

Note

- Input the Email Address which is registered in the IXG Cloud Server for the Email Address.

3. Click **[OK]**.

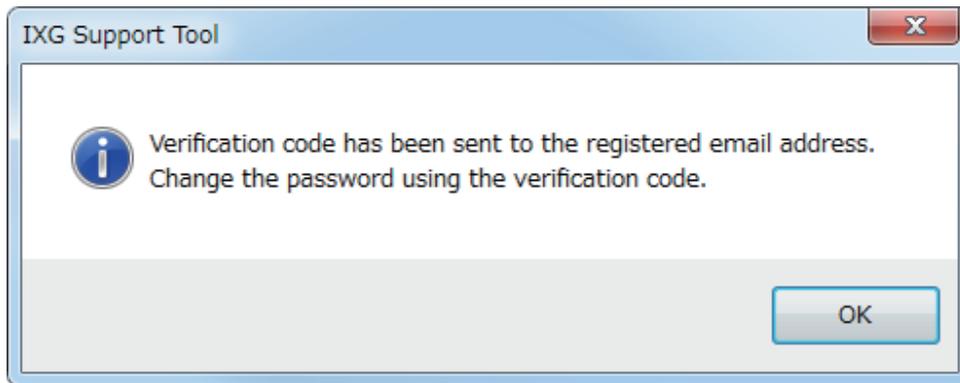

4. Enter the following information.

- Verification Code: Enter the "Verification Code" contained in the email.
- New Password: The password must be at least 8 alphanumeric characters and include uppercase letters, lowercase letters, and numbers.
- Confirm Password: Enter the same password again.



5. Click **[Change Password]**.

- The password will be changed.
- Click **[Cancel]** to exit.

6. Click **[OK]**.


3.8 Manual IXG Cloud Server and Gateway Sync

If the app integration function is not working properly, synchronize the settings of the Gateway Adaptor and the IXG Cloud Server.

! Important

- The Gateway Adaptor cannot be configured unless "[Association Settings \(→page 115\)](#)" was performed and the PC can communicate with the system.

Click "App Integration" - "Manual IXG Cloud Server and Gateway Sync" to display the following screen.

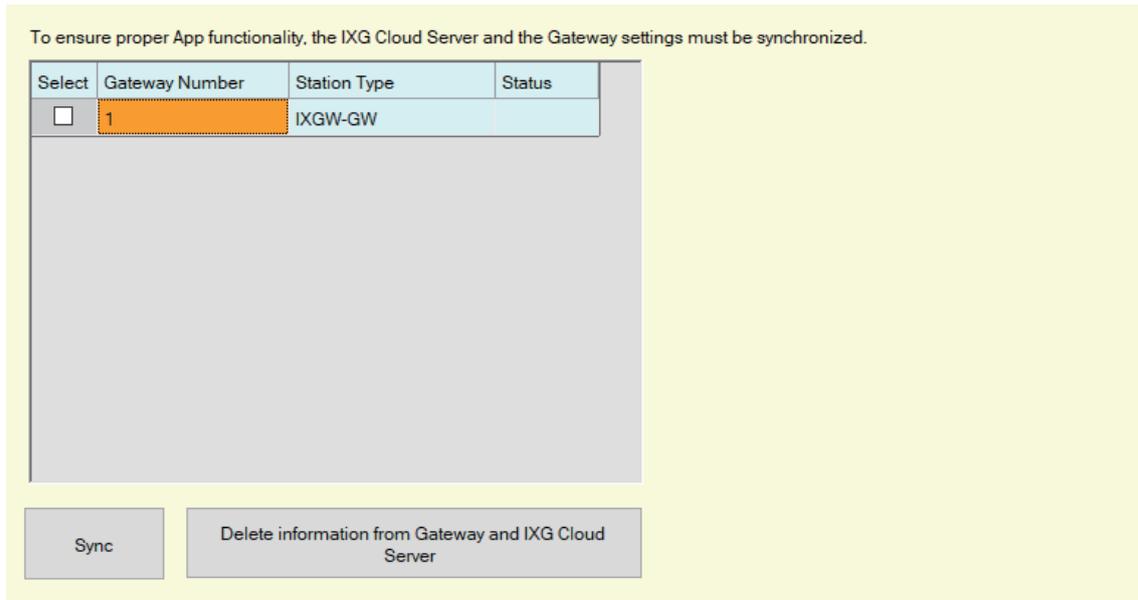

Manual IXG Cloud Server and Gateway Sync


1. Select the Gateway Adaptor to synchronize with the IXG Cloud Server.
2. Click **[Sync]**.
 - The IXG Cloud Server and the Gateway Adaptor will be synchronized.
 - The file synchronization result is displayed in "Status."
 In Process: Currently synchronizing.
 Success: Synchronization successful.
 Failed: Synchronization failed. Try synchronizing again.

How to delete linked information from the Gateway and the IXG Cloud Server

If app integration will no longer be used, delete the gateway information from the IXG Cloud Server and the IXG Cloud Server information from the gateway.

1. Select the Gateway Adaptor for which to delete the link.
2. Click **[Delete information from Gateway and IXG Cloud Server]**.
 - The gateway information is deleted from the IXG Cloud Server, and the IXG Cloud Server information is deleted from the gateway.
 - The result is displayed in "Status."
 In Process: Linked information is being deleted.
 Success: Linked information has been deleted.
 Failed: Linked information has not been deleted, try again.

4. View

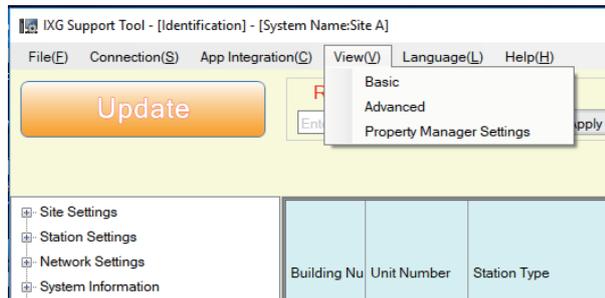

Select the configuration mode.

- Basic: Configure only the following settings.
 - Site Information
 - Building Information
 - Units / Stations
 - Gateway Registration
 - Gateway Selection
 - Identification
 - ID / Password
 - IP Address
 - DNS
 - NTP
- Advanced: Perform detailed configuration for all functions.
- Property Manager Settings: Configure the following settings.

Move-in Settings

- Units / Stations
- Identification
- Station List
- Mobile App List
- Network Camera List
- Group
- Called Stations (Door/Sub Stations)
- Guard Button (IXG-2C7)


Move-out Settings

- Resident Move-out
- Delete Unit Information

Misc.

- Access Code
- Welcome Screen
- Absent Transfer
- Delay Transfer
- Schedule Transfer

5. Language

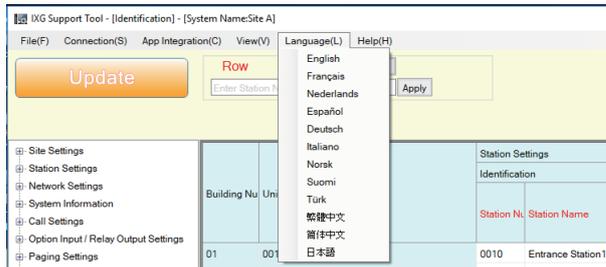


Set the language of following items.

- The display content of the IXG Support Tool.
- The language used to enter setting data (Units / Stations, etc.)
- The content of the email message.

! Important


- The language used on each station can be changed on the Settings screen of each station.
- If the language (configured on the station main unit) displayed on the screen for IXG-2C7(-*), IX-MV7-*, IXG-DM7(-*), or Intercom App is different from the language set with "Apply" the characters may appear incorrectly. To avoid this, enter information in the setting data using alphabetical characters only.

6. Help

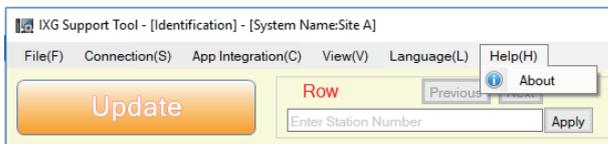

6.1 About

Select "Help" - "About." The "About" screen will be displayed.

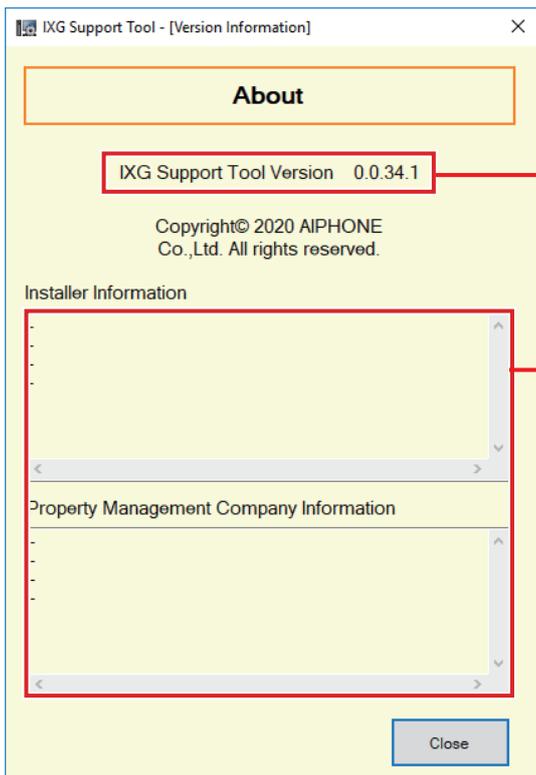

The current version of the IXG Support Tool.

This shows the Installer Information and Property Management Information entered in ["Create new system/import setting data \(→page 101\)"](#) or ["Site Information \(→page 148\)"](#).

Click **[Close]** to close the "About" screen.

System Settings

Important

- Depending on the display language of the Master Station (IXG-2C7(-*), IX-MV7(-*), IXG-DM7(-*), or Intercom App), the settings may appear incorrectly.
- The symbols indicate the following:
 - ◆: Be sure to enter a setting value. Use the default values, unless a change is necessary.

1. Site Information

1.1 Site Information

Basic

Please provide the following information.
It may be used for account recovery purposes.

◆ Required Settings

System ID ◆

System Password ◆

Site Information

Site Name ◆

Address

Notes

Installer Information

Company Name

Representative Name

Email

Phone Number

Property Management Information

Company Name

Representative Name

Email

Phone Number

■ System ID◆

Description	Configure the System ID used to configure the "ID(Administrator)◆ (→page 159)" in bulk. The value entered for System ID is reflected in "ID(Administrator)" of each station. If System ID was entered in "Create a new system setting file (→page 103)" , that information will be displayed.
Settings	1-20 alphanumeric characters Cannot be set to "admin" or "root."
Default value	-

■ System Password◆

Description	Configure the System Password used to configure the "Password(Administrator)◆ (→page 159)" in bulk. The value entered for System Password is reflected in "Password(Administrator)" of each station. If System Password was entered in "Create a new system setting file (→page 103)" , that information will be displayed.
Settings	1-20 alphanumeric characters
Default value	-

■ Site Information

Description	Enter the site information. If site information was entered in "Create a new system setting file (→page 103)" , that information will be displayed.
Settings	<ul style="list-style-type: none"> • Site Name◆: 1-128 alphanumeric characters • Address: 1-128 alphanumeric characters • Notes: 1-128 alphanumeric characters
Default value	-

■ Installer Information

Description	Enter the installer information. If installer information was entered in "Create a new system setting file (→page 103)" , that information will be displayed.
Settings	<ul style="list-style-type: none"> • Company Name: 1-128 alphanumeric characters • Representative Name: 1-128 alphanumeric characters • Email: 1-254 alphanumeric characters • Phone Number: 1-15 alphanumeric characters
Default value	-

■ Property Management Information

Description	Enter the property management company information. If property management company information was entered in "Create a new system setting file (→page 103)" , that information will be displayed.
Settings	<ul style="list-style-type: none"> • Company Name: 1-128 alphanumeric characters • Representative Name: 1-128 alphanumeric characters • Email: 1-254 alphanumeric characters • Phone Number: 1-15 alphanumeric characters
Default value	-

1.2 Building Information Basic

Configure the name of the building to register to the system.
Up to 99 buildings can be registered.

Building Nu	Site Settings	
	Building Information	
	Enable	Building Name
01	<input checked="" type="checkbox"/>	1

Required settings.

■ Enable

Description	Configure whether to use building information.
Settings	<ul style="list-style-type: none"> • Checked: Enable • Unchecked: Disable
Default value	Checked: Enable

! Important

- If data associated with a building has already been set, setting "Unchecked: Disable" will delete all data associated with the building.

■ Building Name ♦


Description	Configure the name of the building. The set building name will be used when specifying a destination on a Entrance Station or Guard Station.
Settings	<ul style="list-style-type: none"> • 1-24 alphanumeric characters
Default value	If "Enable" is set to "Checked: Enable," this will be set in order starting from building 1.

1.3 Units / Stations Basic

Configure common area and private area information.

Up to 9,999 units can be registered.

Up to 9,999 IXG and IX stations can be registered. Up to 9,999 Mobile Apps can be registered.

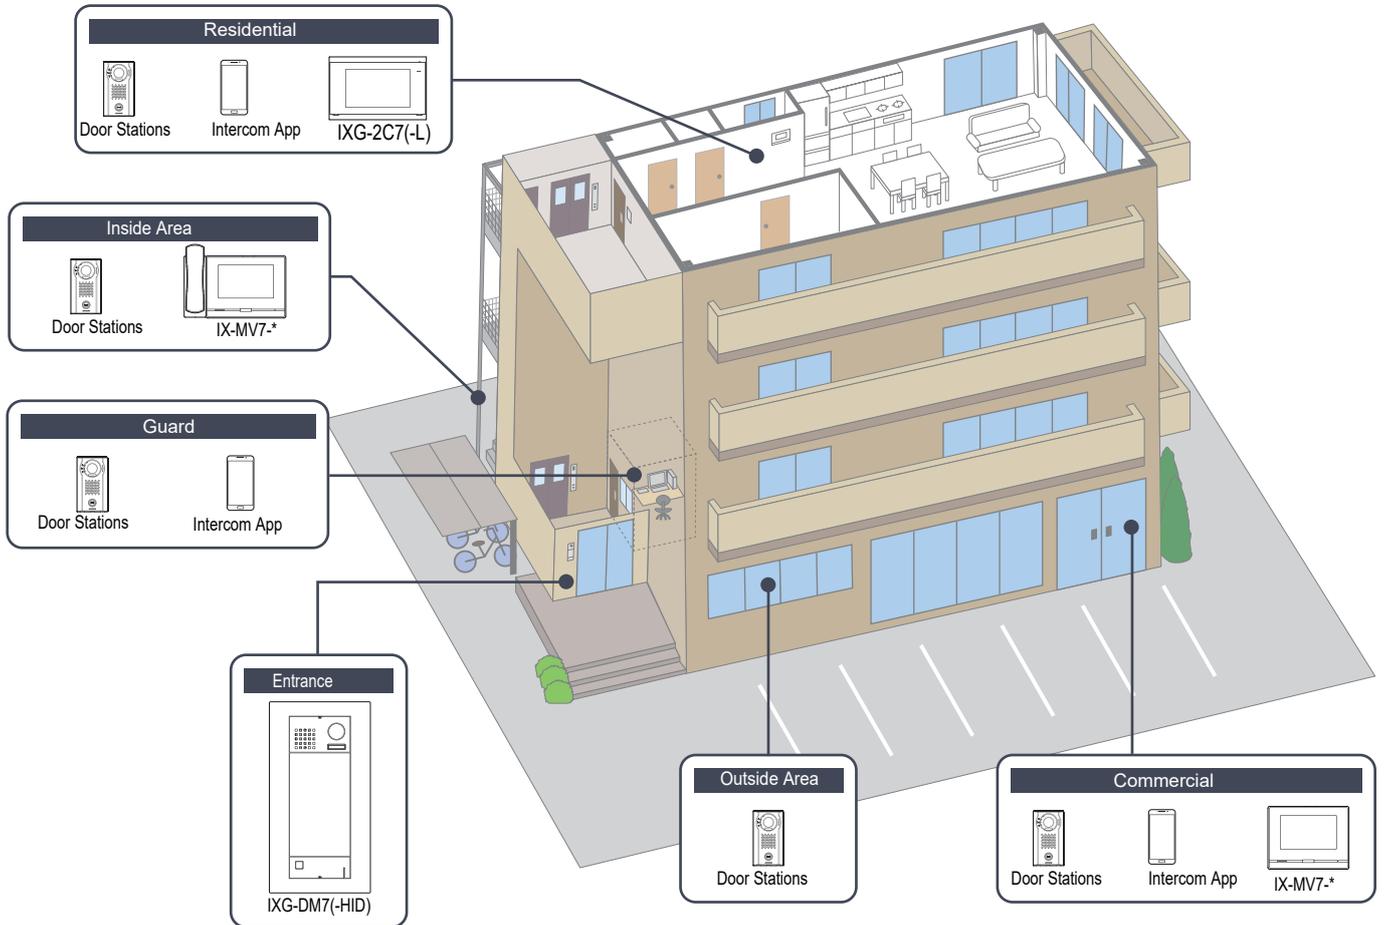

Configure unit information.

Up to 9,999 IXG and IX stations can be registered. Up to 9,999 Mobile Apps can be registered.

Filter
 Building Number / Building Name: Select a building to display and then click **[Apply]** to display only the selected building.
 Unit Type: Select a location to display and then click **[Apply]** to display only the selected location.

Display Settings
 Check the display setting item box, select the number to display for each station, and then click **[Apply]**.

Filter

Building Number / Building Name: All

Unit Type: All

Display Settings

First Name / Last Name Number of Master Stations: 1 Number of Mobile Apps: 1

Number of Door / Entrance Stations: 1 Apply

Building Number		Unit Number	Unit Type	Site Information Required settings									
				Units / Stations									
				Unit Name	First Name	Last Name	Master / Tenant Station 1	Door / Entrance Station 1		App 1			
01		001	Entrance	Select	Entrance001			Select	IXG-DM7(-*)	Select		Select	
01		002	Inside Area	Select	Inside Area 002		IX-MV7-*	Select	IX-DV,IX-DVF(-*)	Select		Select	
01		003	Outside Area	Select	Outside Area 003			Select	IX-DV,IX-DVF(-*)	Select		Select	
01		101	Residential	Select	Residential101		IXG-2C7(-*)	Select	IX-DV,IX-DVF(-*)	Select	Intercom App	Select	
01		102	Residential	Select	Residential102		IXG-2C7(-*)	Select	IX-DV,IX-DVF(-*)	Select	Intercom App	Select	
01		103	Residential	Select	Residential103		IXG-2C7(-*)	Select	IX-DV,IX-DVF(-*)	Select		Select	
01		104	Residential	Select	Residential104		IXG-2C7(-*)	Select	IX-DV,IX-DVF(-*)	Select		Select	
01		105	Residential	Select	Residential105		IXG-2C7(-*)	Select	IX-DV,IX-DVF(-*)	Select		Select	
01		106	Commercial	Select	Commercial106		IX-MV7-*	Select	IX-DV,IX-DVF(-*)	Select	Intercom App	Select	
01		201	Residential	Select	Residential201		IXG-2C7(-*)	Select	IX-DV,IX-DVF(-*)	Select		Select	
01		202	Residential	Select	Residential202		IXG-2C7(-*)	Select	IX-DV,IX-DVF(-*)	Select		Select	
01		203	Residential	Select	Residential203		IXG-2C7(-*)	Select	IX-DV,IX-DVF(-*)	Select		Select	
01		204	Residential	Select	Residential204		IXG-2C7(-*)	Select	IX-DV,IX-DVF(-*)	Select		Select	
01		205	Residential	Select	Residential205		IXG-2C7(-*)	Select	IX-DV,IX-DVF(-*)	Select		Select	
01		206	Guard	Select	Guard206			Select	IX-DV,IX-DVF(-*)	Select	Intercom App	Select	
				Select				Select		Select		Select	

! Important

- “[Language \(→page 145\)](#)” must be set before continuing.
- Enter using the language set in “[Language \(→page 145\)](#)”. However, if the language (configured on the station main unit) displayed on the screen for IXG-2C7(-*), IX-MV7-*, IXG-DM7(-*), or Intercom App is different from the language set with “[Language \(→page 145\)](#)”, the characters displayed on the station screen may appear incorrectly. To avoid this, enter information using alphabetical characters only.

■ Building Number ◆

Description	Select the building number.
Settings	01-99
Default value	-

■ Unit Number◆

Description	Enter the unit number. When configuring a range of unit numbers in order, enter the first unit number and then press the [Enter key] to configure subsequent unit numbers in order. Unit Number and Station Number must be different. Unit Numbers must be unique within the same building.
Settings	Single building system: 3-4 digits Multiple building system: 3-10 digits
Default value	-

■ Unit Type◆

Description	Select the location where the station is installed. Click [Select] and select the location.
Settings	<ul style="list-style-type: none"> • Entrance • Residential • Guard • Commercial • Inside Area • Outside Area • Delete
Default value	-

 Note

- The types of stations that can be installed vary by location.

■ Unit Name◆

Description	Configure the name of the unit. The Unit Name will be displayed when placing a call. The Unit Name will be displayed on the selection button of the Search by List Screen for the Entrance Station. (Guard, Inside Area, Commercial only)
Settings	1-24 alphanumeric characters
Default value	A combination of the location selected in "Unit Type" and the unit number

■ First Name (Residential only)

Description	Enter the first name. The First Name will be displayed on the selection button of the Search by List Screen on the Entrance Station. This is also used to search for a destination on the Entrance Station.
Settings	1-16 alphanumeric characters
Default value	-

■ Last Name (Residential only)

Description	Enter the last name. The Last Name will be displayed on the selection button of the Search by List Screen on the Entrance Station. This is also used to search for a destination on the Entrance Station.
Settings	1-16 alphanumeric characters
Default value	-

 **Note**

• Only alphanumeric characters can be entered on the Search by Name Screen for an Entrance Station, so enter only alphanumeric characters for the "First Name" and "Last Name" when using "[Search by Name \(→page 265\)](#)" with an Entrance Station.

■ **Master / Tenant Station (Commercial, Residential, Inside Areaonly)**

Description	Configure the station type of the station to install in Commercial, Residential, or Inside Area. Up to 8 new master / tenant stations can be registered in each unit. Click [Select] and select the new master / tenant station type.
Settings	<ul style="list-style-type: none"> • Commercial: IX-MV7-*, Delete • Residential: IXG-2C7(-*), Delete • Inside Area: IX-MV7-*, Delete
Default value	-

■ **Door / Entrance Station**

Description	Configure the station type of the Door Station or Entrance Station to install in each location. Up to two Door Stations can be registered for each unit (excluding the Outside Area) and up to 10 Entrance Stations. Up to 10 Door Stations can be registered for the Outside Area. Click [Select] and select the station type of the Door Station or Entrance Station.
Settings	<ul style="list-style-type: none"> • Entrance: IXG-DM7(-*), Delete • Additional Settings <ul style="list-style-type: none"> – IX-DA (Single Building System only) – IX-BA (Single Building System only) – IX-DV, IX-DVF(-*) – IX-DV, IX-DVF(-*) with Emergency Button – IX-SSA(-*) – IX-SSA(-*) with Emergency Button – IX-EA, IX-EAU – IX-FA – Delete
Default value	-

■ **App (Guard, Commercial, Residential only)**

Description	Configure the station type of the app to register to Guard, Commercial, or Residential Unit. Up to 8 Mobile Apps can be registered in each unit. Click [Select] and select the app station type.
Settings	Intercom App, Delete
Default value	-

 **Important**

• Even if stations or units are deleted in the IXG Support Tool, the settings on the stations are not initialized. If a deleted station exists on the same network, make sure that a newly registered station does not conflict with the IP address of the deleted station.

1.4 Gateway Registration

Basic

! Important

- Due to the features and services provided by the Gateway Adaptor and the AIPHONE IXG app, future required changes to device functionality, network communication, security, etc. may require firmware updates unavailable to the Gateway Adaptor. In this situation, the Gateway Adaptor would need to be replaced at the cost of the responsible party.

Site Settings		Site Settings				Required settings.
Gateway Registration		Gateway Registration				
Gateway Number	Station Type	Enable	Station Name	Cancel Priority Rule	Maximum simultaneous calls	
1	IXGW-GW	<input checked="" type="checkbox"/>	Gateway Adaptor1	Enable	8	

■ Enable

Description	Configure whether to use the Gateway Adaptor.
Settings	<ul style="list-style-type: none"> • Checked: Enable • Unchecked: Disable
Default value	Unchecked: Disable

■ Station Name ◆

Description	Configure the name of the Gateway Adaptor.
Settings	1-24 alphanumeric characters
Default value	If "Enable" is set to "Checked: Enable," this will be set to Gateway Adaptor 1.

■ Cancel Priority Rule

Description	Configure whether to disconnect a communication line of lower priority and switch to a communication line of higher priority if all of the communication lines within the Gateway Adaptor are in use.
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Enable

■ Maximum simultaneous calls

Description	Configure the maximum number of communication lines in the Gateway Adaptor.
Settings	1-8
Default value	8

1.5 Gateway Selection

Basic

Building Number	Unit Number	Unit Name	Site Settings		Required settings.
			Gateway Selection		
			Gateway Number	Station Name	
01	001	Entrance001	1	Gateway Adaptor1	
01	002	Inside Area 002	1	Gateway Adaptor1	
01	003	Outside Area 003	1	Gateway Adaptor1	
01	101	Residential101	1	Gateway Adaptor1	
01	102	Residential102	1	Gateway Adaptor1	
01	103	Residential103	1	Gateway Adaptor1	
01	104	Residential104	1	Gateway Adaptor1	
01	105	Residential105	1	Gateway Adaptor1	
01	106	Commercial106	1	Gateway Adaptor1	
01	201	Residential201	1	Gateway Adaptor1	
01	202	Residential202	1	Gateway Adaptor1	
01	203	Residential203	1	Gateway Adaptor1	
01	204	Residential204	1	Gateway Adaptor1	
01	205	Residential205	1	Gateway Adaptor1	
01	206	Guard206	1	Gateway Adaptor1	

■ Gateway Number

Description	If " Gateway Registration (→page 155) " is set to "Enable," configure "1" for the unit where the App is registered in " Units / Stations (→page 151) ". Also configure "1" for the unit (entrance) that calls the Mobile App, and the unit containing the Entrance Station or Door Station that is monitored by the Mobile App.
Settings	1
Default value	-

2. Station Information

2.1 Identification

Basic

Configure the Station Number and Station Name of the station to register in the system.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Building Number	Unit Number	Station Type	Station Settings	
			Identification	
			Station Number	Station Name
01	001	IXG-DM7(-*)	0010	Entrance Station1
01	002	IX-MV7-*	0020	Master Station1
01	002	IX-DV.IX-DVF(-*)	0021	Video Door Station1
01	003	IX-DV.IX-DVF(-*)	0030	Video Door Station1
01	101	IXG-2C7(-*)	1010	Tenant Station1
01	101	Intercom App	101000	Intercom App1
01	101	IX-DV.IX-DVF(-*)	1011	Video Door Station1

Required settings. ^

! Important

- Always set "[Language \(→page 145\)](#)" before setting "Identification."
- Enter using the language set in "[Language \(→page 145\)](#)". However, if the language (configured on the station main unit) displayed on the screen for IXG-2C7(-*), IX-MV7-*, IXG-DM7(-*), or Intercom App is different from the language set with "[Language \(→page 145\)](#)", the characters displayed on the station screen may appear incorrectly. To avoid this, enter information using alphabetical characters only.

■ Station Number◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input checked="" type="checkbox"/> Intercom App
Description	Set the station number. Ensure that it does not overlap with the unit number or other station numbers. The set station number will be shown on the destination station when placing a call or when the station is paged. This is also used when searching stations by station number on IX-MV7-*.
Settings	Single Building System (except for IXGW-LC, IXGW-GW, Intercom App): 3-5 digits Multiple Building System: 3-24 digits
Default value	Single Building System: Unit Number+sequence number starting from 0 for each unit type (sequence number from 000 for Intercom App) Multiple Building System: Building Number+Unit Number+sequence number starting from 0 for each unit type (sequence number from 000 for Intercom App) • For IXGW-LC, Building Number+sequence number starting from 01 for each building+19999999999999999999 • For IXGW-GW, 00+sequence number starting from 01 for each system+29999999999999999999

■ Station Name◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input checked="" type="checkbox"/> Intercom App
Description	Set the station name. The set station name will be shown on the destination station when placing a call.
Settings	1-24 alphanumeric characters
Default value	<ul style="list-style-type: none"> • IXG-2C7(-*): Tenant Station (number) • IX-MV7-*: Master Station (number) • IXG-DM7(-*): Entrance Station (number) • IX-DV, IX-DVF(-*), IX-DA, IX-EA, IX-EAU: Video Door Station (number) • IX-SSA(-*), IX-BA, IX-FA: Audio Door Station (number) • Intercom App: Intercom App (number) • IXGW-LC: Lift Control Adaptor (number) • IXGW-GW: Gateway Adaptor (number)

2.2 ID / Password

Basic

Set ID and password used when authenticating using ONVIF or RTSP.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Building Number	Unit Number	Station Name	ID/Administrator	Password/Administrator	ONVIF ID	ONVIF Password	RTSP ID	RTSP Password
01	001	Entrance Station1	12345	*****				
01	002	Master Station1	12345	*****				
01	002	Video Door Station1	12345	*****				

■ ID(Administrator)◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set an ID used when communicating with a station, such as when applying settings to the station.
Settings	1-32 alphanumeric characters Cannot be set to "admin" or "root."
Default value	admin (if " System ID◆ (→page 103) " was set, the same value as the System ID will be set.)

■ Password(Administrator)◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set a password used when communicating with a station, such as when applying settings to the station.
Settings	1-32 alphanumeric characters
Default value	admin (if " System Password◆ (→page 103) " was set, the same value as the System Password will be set.)

■ ONVIF ID

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the ID to access this station from 3rd party products using ONVIF.
Settings	1-32 alphanumeric characters
Default value	-

■ ONVIF Password

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the Password to access this station from 3rd party products using ONVIF.
Settings	1-32 alphanumeric characters
Default value	-

■ RTSP ID

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the ID to access this station from 3rd party products using RTSP.
Settings	1-32 alphanumeric characters
Default value	-

■ RTSP Password

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the Password to access this station from 3rd party products using RTSP.
Settings	1-32 alphanumeric characters
Default value	-

 **Note**

- The ONVIF port number is "10080" and the RTSP port number is "554."
- Refer to ["Using a 3rd party product to monitor video/audio from Door Stations \(→page 179\)"](#) for information on monitoring video and audio from a Door Station with a 3rd party product.
- "Password(Administrator)," "ONVIF Password," and "RTSP Password" are displayed as "*****" in the Settings screen.

2.3 Time

Set the date and time for each station.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

["Manual Date / Time Setup \(→page 163\)"](#)

The screenshot shows a control panel at the top with a 'Row' label, 'Previous' and 'Next' buttons, an 'Enter Station Number' input field, and an 'Apply' button. To the right, there is a 'Manual Date / Time Setup' button. Below this is a table with columns for Building Number, Unit Number, Station Name, Station Settings, and Required settings. The table contains two rows of data.

Building Number	Unit Number	Station Name	Station Settings	Required settings
01	001	Entrance Station1	(GMT-08:00) Pacific Standard Time (US), Tijuana	Disable
01	002	Master Station1	(GMT-08:00) Pacific Standard Time (US), Tijuana	Disable

2.3.1 Time Zone

■ Select time zone

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the time zone.
Settings	Select from 99 regions
Default value	When a new system is created, the following settings will be set to these defaults depending on the language selected. Japanese: (GMT+09:00) Osaka, Sapporo, Tokyo English: (GMT-08:00) Pacific Standard Time (US), Tijuana French: (GMT+01:00) Brussels, Madrid, Copenhagen, Paris Spanish: (GMT+01:00) Brussels, Madrid, Copenhagen, Paris Dutch: (GMT+01:00) Amsterdam, Berlin, Bern, Oslo, Rome, Stockholm Traditional Chinese: (GMT+08:00) Taipei Simplified Chinese: (GMT+08:00) Beijing, Chongqing, Hong Kong, Urumqi Italian: (GMT+01:00) Amsterdam, Berlin, Bern, Oslo, Rome, Stockholm German: (GMT+01:00) Amsterdam, Berlin, Bern, Oslo, Rome, Stockholm Norwegian: (GMT+01:00) Amsterdam, Berlin, Bern, Oslo, Rome, Stockholm Finnish: (GMT+02:00) Helsinki, Riga, Tallinn Turkish: (GMT+02:00) Athens, Istanbul

2.3.2 Daylight Saving Time

■ Automatic Daylight Saving Time

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Use this to adjust the daylight saving time automatically to match the region selected in "Select time zone."
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Disable


2.3.3 Manual Date / Time Setup

Configure the date and time for each station. Be sure to set this, as the time is used for the incoming call history, outgoing call history, and the system log.

! Important


- The time cannot be set unless the ["Association Settings \(→page 115\)"](#) is performed and the PC is connected to the same network as the station.

Click **[Manual Date / Time Setup]**. The "Manual Date / Time Setup" screen will be shown.

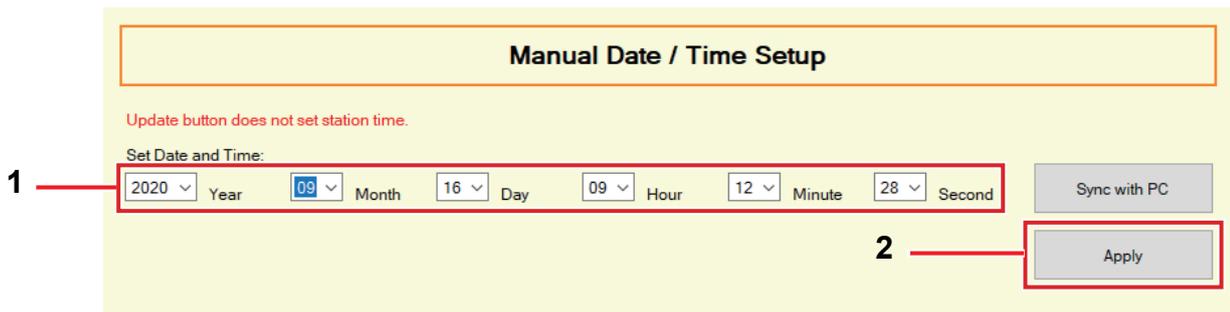


How to configure the date and time

1. Enter (select) "Year," "Month," "Day," "Hour," "Minute," and "Second."
 - Click **[Sync with PC]** to synchronize the time with the PC.
2. Click **[Apply]**.
 - If "Association Settings" have not been configured, the following screen will be shown. Click **[OK]** and perform ["Association Settings \(→page 115\)"](#).

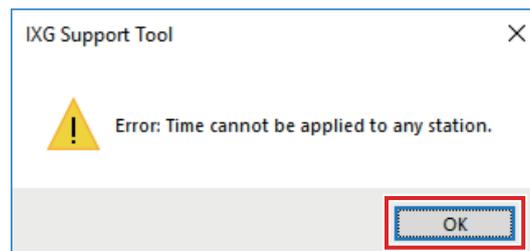

- If the PC cannot communicate with the system, the following screen will be shown. Click **[OK]**, and then make sure the PC can communicate with the system.

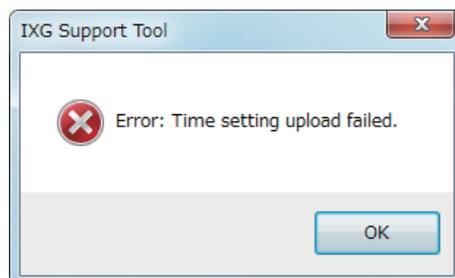

3. Click **[OK]**.

3. Network Settings

3.1 IP Address Basic

Configure the hostname, IP address, subnet mask, and default gateway for each station.

! Important

- When a setting related to the IP address is updated on a station, it will restart. In some cases, it may take up to 10 minutes for the station to restart.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

["Batch IP Address Configuration \(→page 168\)"](#)

Row Previous Next

Enter Station Number Apply

Related Settings

[Batch IP Address Configuration](#)

Network Settings			Required settings.															
Building Number	Unit Number	Station Name	IP Address															
			Hostname	IP Version	Static / DHCP	IPv4 Address				Subnet Mask	Default Gateway				IPv6 Address			
						1	2	3	4		1	2	3	4		IP Address		
01	001	Entrance Station1		IPv4	Static	192	168	1	10	255	255	255	0					
01	002	Master Station 1		IPv4	Static	192	168	1	11	255	255	255	0					

■ Hostname

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the hostname for the station. Set this to connect to stations registered in "Station List (→page 187)" and "Called Stations (Door/Sub Stations) (→page 202)" by hostname. When setting the hostname, configure "DNS (→page 169)" .
Settings	1-64 alphanumeric characters
Default value	-

💡 Note

- Communication from IXG Support Tool to the stations use the IP address.

■ IP Version

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select the protocol.
Settings	<ul style="list-style-type: none"> • IPv4 • IPv6
Default value	IPv4

Important

- IPv4 and IPv6 cannot be mixed in the same system.

■ Static / DHCP

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select the addressing method for the IP version selected in "IP Version."
Settings	For IPv4 <ul style="list-style-type: none"> • Static • DHCP For IPv6 <ul style="list-style-type: none"> • Static • Stateless • DHCPv6
Default value	• Static

Important

- When selecting "DHCP" for IPv4, configure the system so that the DHCP server assigns a static IP address to each station.
- When selecting "Stateless" for IPv6, do not change the prefix of the device that can transmit RA.
- When selecting "DHCPv6" for IPv6, configure the system so that the DHCP server assigns a static IP address to each station. DUID of the station is "00030001 + MAC address."
- When setting up a product from another manufacturer, such as a DHCP server, refer to its manual.

3.1.1 IPv4 Address

Important

- If "[Static / DHCP \(→page 165\)](#)" is set to "DHCP," settings will not be applied to the station even if the "IP Address," "Subnet Mask," and "Default Gateway" are set.

■ IP Address◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the IP address. Set unique IP addresses. Doing otherwise will cause malfunctions.
Settings	1.0.0.1-223.255.255.254
Default value	-

■ Subnet Mask◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the Subnet Mask.
Settings	128.0.0.0-255.255.255.255
Default value	-

■ Default Gateway

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the Default Gateway.
Settings	1.0.0.1-223.255.255.254
Default value	-

Important

- Be sure to set the IXGW-GW Default Gateway. The Intercom App cannot be used unless it is configured.

3.1.2 IPv6 address

! Important

• If "Static / DHCP" is set to "Stateless" or "DHCPv6," settings will not be applied to the station even if "IP Address" and "Default Gateway" are set.

■ IP Address◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the IP address. Set unique IP addresses. Doing otherwise will cause malfunctions.
Settings	2000::0-3FFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF or FD00::0-FDFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF
Default value	-

■ Default Gateway

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the Default Gateway.
Settings	::FF:0-FE9F:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF
Default value	-

3.1.3 Batch IP Address Configuration

Click **[Batch IP Address Configuration]**. The "Batch IP Address Configuration" screen will be shown.

1

2

3

4

Select	Building Number	Unit Number	Station Name	Station Type	IP Address (IPv4)	IP Address (IPv6)
<input checked="" type="checkbox"/>	01	001	Entrance Station1	IXG-DM7(-*)	192 168 1 10	
<input type="checkbox"/>	01	002	Master Station1	IX-MV7-*	192 168 1 11	
<input type="checkbox"/>	01	002	Video Door Station1	IX-DV,IX-DVF(-*)	192 168 1 12	
<input type="checkbox"/>	01	003	Video Door Station1	IX-DV,IX-DVF(-*)	192 168 1 13	
<input type="checkbox"/>	01	101	Tenant Station1	IXG-2C7(-*)	192 168 1 14	
<input type="checkbox"/>	01	101	Video Door Station1	IX-DV,IX-DVF(-*)	192 168 1 15	
<input type="checkbox"/>	01	102	Tenant Station1	IXG-2C7(-*)	192 168 1 16	
<input type="checkbox"/>	01	102	Video Door Station1	IX-DV,IX-DVF(-*)	195 168 1 17	
<input type="checkbox"/>	01	103	Tenant Station1	IXG-2C7(-*)	195 168 1 18	

How to perform Batch IP Address Configuration

1. Enter the start IP address that is to be automatically assigned in "IPv4 Address" or "IPv6 Address."
2. For IPv4, enter the "Subnet Mask."
 - Use the subnet mask to set the range for assignment. The network address and the broadcast addresses for the range cannot be assigned.
3. Select the station to automatically assign an IP address from "Station List." (Multiple selections allowed.)
 - To select or unselect stations in a batch, choose the station type and click **[Select]** or **[Unselect]**.
4. Click **[OK]**.
5. Click **[OK]**. The IP addresses will be automatically assigned and the subnet mask will be entered.
 - Click **[Cancel]** to return to the "Batch IP Address Configuration" screen.

3.2 DNS Basic

If the IPv4 or IPv6 address for each item was configured by hostname, a DNS server must be configured for name resolution.


Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

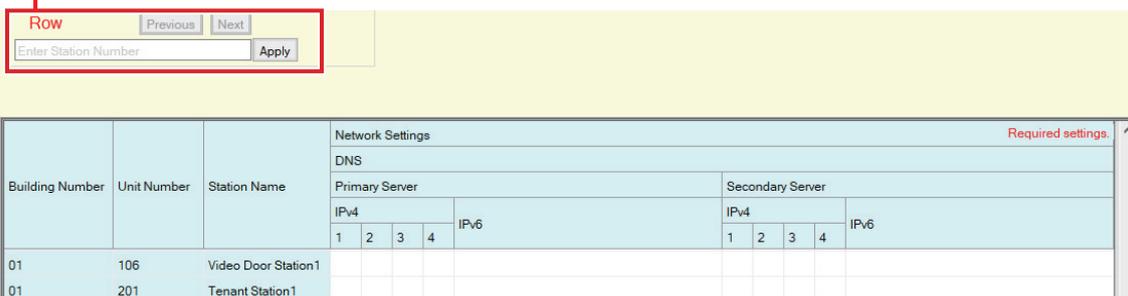

3.2.1 Primary Server

■ IPv4

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the IPv4 address for DNS Primary Server.
Settings	1.0.0.1-223.255.255.254
Default value	-

■ IPv6

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the IPv6 address for DNS Primary Server.
Settings	::FF:0-FE:FF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF
Default value	-

3.2.2 Secondary Server

■ IPv4

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the IPv4 address of the secondary DNS server.
Settings	1.0.0.1-223.255.255.254
Default value	-

■ IPv6

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the IPv6 address of the secondary DNS server.
Settings	::FF:0-FEFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF
Default value	-

Important

- Be sure to set the IXGW-GW DNS. The Intercom App cannot be used unless it is configured.

3.3 Multicast Address

This must be configured if multicast is enabled in [“Group \(→page 196\)”](#), [“All Page \(→page 216\)”](#), and [“Called Stations \(Door/Sub Stations\) \(→page 202\)”](#).

 **Note**

- A multicast address must be configured to utilize All Page.

Move row


Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

[“Batch multicast address configuration \(→page 172\)”](#)

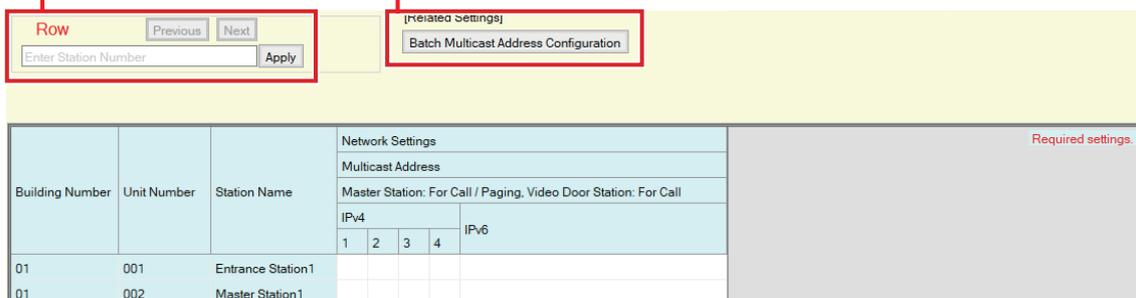

Building Number	Unit Number	Station Name	Network Settings				Required settings.
			Multicast Address				
			Master Station: For Call / Paging, Video Door Station: For Call				
			IPv4				IPv6
			1	2	3	4	
01	001	Entrance Station1					
01	002	Master Station1					

■ IPv4

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the IPv4 multicast address. Be sure to set unique multicast addresses.
Settings	224.0.0.0-239.255.255.255
Default value	-

■ IPv6

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the IPv6 multicast address. Be sure to set unique multicast addresses.
Settings	FF10::0-FF1F:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF
Default value	-

3.3.1 Batch multicast address configuration

Click **[Batch Multicast Address Configuration]**. The "Batch Multicast Address Configuration" screen will be shown.

1

2

3

Select	Building Number	Unit Number	Station Name	Station Type
<input checked="" type="checkbox"/>	01	001	Entrance Station1	IXG-DM7(-*)
<input type="checkbox"/>	01	002	Master Station1	IX-MV7-*
<input type="checkbox"/>	01	002	Video Door Station1	IX-DV,IX-DVF(-*)
<input type="checkbox"/>	01	003	Video Door Station1	IX-DV,IX-DVF(-*)
<input type="checkbox"/>	01	101	Video Door Station1	IX-DV,IX-DVF(-*)
<input type="checkbox"/>	01	102	Video Door Station1	IX-DV,IX-DVF(-*)
<input type="checkbox"/>	01	103	Video Door Station1	IX-DV,IX-DVF(-*)
<input type="checkbox"/>	01	104	Video Door Station1	IX-DV,IX-DVF(-*)
<input type="checkbox"/>	01	105	Video Door Station1	IX-DV,IX-DVF(-*)

How to perform batch multicast address configuration

1. Enter the start IP address that is to be automatically assigned for multicast addresses in "IPv4" or "IPv6."
2. Select the station to automatically assign a multicast address from "Station List." (Multiple selections allowed.)
 - To select or unselect stations in a batch, choose the station type and click **[Select]** or **[Unselect]**.
3. Click **[OK]**.
4. Click **[OK]**. The multicast addresses will be automatically assigned.
 - Click **[Cancel]** to return to the "Batch Multicast Address Configuration" screen.

3.4 Video

Configure video settings.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Move to Related Settings

Moves to the selected item within the same Settings screen.

The screenshot shows a settings interface with a yellow header bar. On the left, there is a 'Row' section with a text input 'Enter Station Number', 'Previous', 'Next', and 'Apply' buttons. On the right, there is a 'Move to Related Settings' dropdown menu currently showing 'Video Encoder 1'. Below this is a table with columns for 'Building Number', 'Unit Number', 'Station Name', and various video encoder parameters. The table has two rows of data.

Building Number	Unit Number	Station Name	Network Settings					Video		
			Video Encoder 1		Video Encoder 2					
			Frame Rate [fps]	picture interval [H.264/AVC]	Bit Rate [kbps] [H.264/AVC]	Second Video Encoder	Video Codec	Resolution	Frame Rate [fps]	
01	001	Entrance Station1	15		15	1024	Disable	H.264/AVC	1280x720(HD)	10
01	002	Master Station1								

3.4.1 Video Encoder 1

Configure video settings for calls/communication between IXG and IX system stations. Use [“Master Station Video Setting \(→page 178\)”](#) to configure video settings for the IX-MV7-* camera.

■ Frame Rate [fps]

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the frame rate.
Settings	1, 2 (except for IX-DA), 3, 5, 7.5, 10, 15, 20 (except for IXG-DM7(-*)), 30 (except for IXG-DM7(-*)) fps If IX-DA was set to 7.5, 10, 15, 20, or 30 fps, the frame rate will drop to 5 fps once approximately 10 minutes have elapsed after an outgoing call is made.
Default value	15 fps

Note

- The frame rate may be lower than the set value depending on the video being sent, the number of recipient stations, and the network environment.

■ I-picture interval [H.264/AVC]◆

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the interval to send H.264/AVC I-pictures.
Settings	1 - 100
Default value	15

■ Bit Rate [kbps] [H.264/AVC]

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the H.264/AVC bit rate.
Settings	32 (except for IX-DA), 64, 128, 256, 384, 512, 768, 1024, 2048 kbps
Default value	1024 kbps



Note

- The bit rate may be lower than the set value depending on the video being sent, the number of recipient stations, and the network environment.

3.4.2 Video Encoder 2

Set when transmitting video using ONVIF.

Refer to [“Using a 3rd party product to monitor video/audio from Door Stations \(→page 179\)”](#) for information on viewing video of IX-DV, IX-DVF(-*), IX-EA, IX-EAU, or IX-DA with a 3rd party product.

Important

- Settings may be changed by request from the 3rd party product. Refer to the manual of the 3rd party product for details.

■ Second Video Encoder

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set whether to use the second video encoder. Set to "Enable" when transmitting video using ONVIF.
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Except for IXG-DM7(-*): Enable IXG-DM7(-*): Disable

■ Video Codec

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select the coding system for the video.
Settings	<ul style="list-style-type: none"> • H.264/AVC • Motion-JPEG
Default value	H.264/AVC

■ Resolution

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select the video resolution.
Settings	<ul style="list-style-type: none"> • 320x240(QVGA) (except for IXG-DM7(-*)) • 640x480(VGA) • 800x480(WVGA) (except for IXG-DM7(-*), IX-DA) • 1280x720(HD) (except for IX-DA) • 1280x960(SXVGA) (except for IXG-DM7(-*), IX-DA)
Default value	Except for IX-DA: 1280x720(HD) IX-DA: 320x240(QVGA)

■ Frame Rate [fps]

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the frame rate.
Settings	1, 2 (except for IX-DA), 3, 5, 7.5, 10, 15 (except for IXG-DM7(-*)), 20 (except for IXG-DM7(-*)), 30 (except for IXG-DM7(-*)) fps If IX-DA was set to 7.5, 10, 15, 20, or 30 fps, the frame rate will drop to 5 fps once approximately 10 minutes have elapsed after an outgoing call is made.
Default value	Except for IX-DA: 10 fps IX-DA: 15 fps

 **Note**

- The frame rate may be lower than the set value depending on the video being sent, the number of recipient stations, and the network environment.

■ Select Profile [H.264/AVC]

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the H.264/AVC Profile.
Settings	<ul style="list-style-type: none"> • Baseline • Main • High
Default value	Main

■ I picture interval [H.264/AVC]◆

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the interval to send H.264/AVC I-pictures.
Settings	1 - 100
Default value	Except for IX-DA: 10 IX-DA: 15

■ Bit rate [kbps] [H.264 / AVC]

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the H.264/AVC bit rate.
Settings	32 (except for IX-DA), 64, 128, 256, 384, 512, 768, 1024, 2048, 4096 (except for IX-DA), 8192 (except for IX-DA) kbps
Default value	Except for IX-DA: 2048 kbps IX-DA: 1024 kbps



Note

- The bit rate may be lower than the set value depending on the video being sent, the number of recipient stations, and the network environment.

■ Select Quality [Motion-JPEG]

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the quality of Motion-JPEG.
Settings	This is set to "6" and cannot be changed.
Default value	6

■ RTP Start Port◆

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the range of port numbers to transmit and receive RTP. Set the difference to 10 or greater in the range of (RTP Start Port) - (RTP End Port).
Settings	1 - 65534
Default value	32000

■ RTP End Port◆

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the range of port numbers to transmit and receive RTP. Set the difference to 10 or greater in the range of (RTP Start Port) - (RTP End Port).
Settings	1 - 65535
Default value	33000

3.4.3 Master Station Video Setting

Configure video-related settings for the IX-MV7-* camera.

■ Frame Rate [fps]

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the frame rate.
Settings	0.5, 1, 2, 3, 5, 7.5, 10, 15, 20, 30 fps
Default value	15 fps



Note

- The frame rate may be lower than the set value depending on the video being sent, the number of recipient stations, and the network environment.

■ I-picture Interval◆

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select the interval to send I-picture for Video Streaming.
Settings	1 - 100
Default value	15

■ Bit rate [kbps]

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select the bit rate [kbps].
Settings	32, 64, 128, 256, 384, 512, 768, 1024, 2048 kbps
Default value	1024 kbps



Note

- The bit rate may be lower than the set value depending on the video being sent, the number of recipient stations, and the network environment.

3.4.4 Using a 3rd party product to monitor video/audio from Door Stations

Video Door Stations support ONVIF Profile S and RTSP.

Video and audio captured by a Video Door Station camera and microphone can be monitored from a 3rd party product.

Important

- Video from a Video Door Station cannot be viewed simultaneously by two or more 3rd party products.

Using a 3rd party product to monitor video/audio from a Door Station

1. Set "[Second Video Encoder \(→page 175\)](#)" to "Enable."
2. Configure video and audio settings.
 - Configure video in "[Video Encoder 2 \(→page 175\)](#)".
 - "Audio 2 RTP Start Port: 22,000" and "Audio 2 RTP End Port: 23,000" are set for audio.

Important

- Configure "[Video Encoder 2 \(→page 175\)](#)" according to the specification of the product.

3. Register the Door Station with the 3rd party product. Enter the following as necessary.
 - ONVIF ID: Configure in "[ONVIF ID \(→page 159\)](#)".
 - ONVIF Password: Configure in "[ONVIF Password \(→page 160\)](#)".
 - ONVIF communication port number: 10080
 - RTSP ID: Configure in "[RTSP ID \(→page 160\)](#)".
 - RTSP Password: Configure in "[RTSP Password \(→page 160\)](#)".
 - RTSP communication port number: 554
 - For how to register, refer to the instruction manual of the third party product to be registered.

Important

- "ONVIF ID" and "ONVIF Password" can be changed from the 3rd party product.

3.5 Audio

Configure the settings for audio.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

The screenshot shows a control bar at the top with a 'Row' label, 'Previous' and 'Next' buttons, an input field for 'Enter Station Number', and an 'Apply' button. Below this is a table with columns for Building Number, Unit Number, Station Name, Audio Codec, and Audio Buffer (Packets Buffered at Audio Start, Maximum Packets Buffered). A 'Required settings' indicator is visible on the right side of the table.

Building Number	Unit Number	Station Name	Network Settings		
			Audio		
			Audio Codec	Audio Buffer	
				Packets Buffered at Audio Start	Maximum Packets Buffered
01	001	Entrance Station1	G.711(μ-law)	1	3
01	002	Master Station1	G.711(μ-law)	1	3

Audio Codec

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select the audio codec.
Settings	<ul style="list-style-type: none"> G.711(μ-law) G.711(A-law)
Default value	G.711(μ-law)

3.5.1 Audio Buffer

■ Packets Buffered at Audio Start

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the number of packets to accumulate before playing audio.
Settings	0 - 4
Default value	1

■ Maximum Packets Buffered

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the maximum number of packets that can be accumulated. If a packet is received beyond the set value, it is removed from the oldest packet. It should be greater than the number of “Packets Buffered at Audio Start (→page 181)” .
Settings	2 - 10
Default value	3

3.6 Packet Priority

Configure the Packet Priority and VLAN for audio, video, and SIP packets.

! Important

- When a setting related to VLAN is updated at a station, it will restart. In some cases, it may take around 10 minutes for the station to start up.

Move row

Up to 50 station number rows can be displayed at a time. Switch the display as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the entered row.

Building Number	Unit Number	Station Name	Network Settings					
			Packet Priority					
			TOS Value (Audio)	TOS Value (Video)	TOS Value (SIP)	VLAN Setting	VLAN ID	VLAN Priority
01	001	Entrance Station1	0x00	0x00	0x00	Disable	1	0
01	002	Master Station1	0x00	0x00	0x00	Disable	1	0
01	002	Master Station2	0x00	0x00	0x00	Disable	1	0
01	002	Video Door Station1	0x00	0x00	0x00	Disable	1	0

■ TOS Value (Audio)◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the Packet Priority (TOS Value) for Audio.
Settings	0x00-0xFF
Default value	0x00

■ TOS Value (Video)◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the Packet Priority (TOS Value) for Video.
Settings	0x00-0xFF
Default value	0x00

■ TOS Value (SIP)◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the Packet Priority (TOS Value) for SIP.
Settings	0x00-0xFF
Default value	0x00

■ VLAN Setting

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select Enable / Disable for tagged VLAN.
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Disable

Important

- When "VLAN Setting" is set to "Enable" and uploaded to the station, ensure that the switches, PCs, and stations are all configured for VLAN operation.

■ VLAN ID◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the VLAN ID.
Settings	1 - 4094
Default value	1

■ VLAN Priority

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the VLAN Priority.
Settings	0 (Low) - 7 (High)
Default value	0

3.7 NTP

Basic

Configure NTP settings.


Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

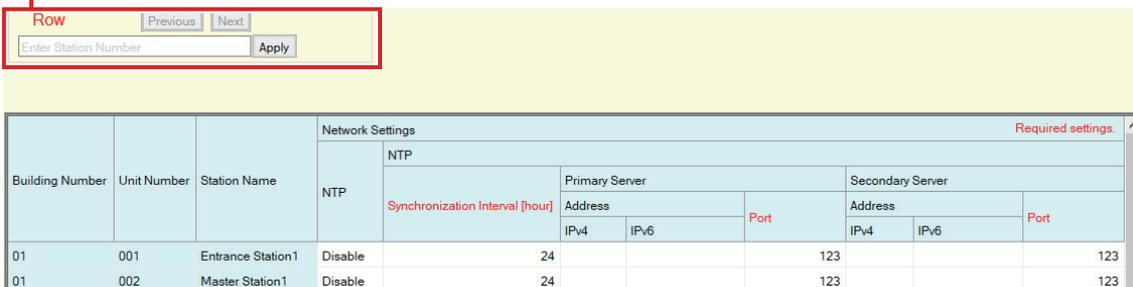

3.7.1 NTP

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set whether to obtain the time from an NTP server. If this is set to "Enable," be sure to configure the other subcategories in "NTP (→page 184)" .
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	<ul style="list-style-type: none"> • Except for IXGW-GW: Disable • IXGW-GW: Enable

3.7.2 Synchronization Interval [hour]◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the interval to synchronize with the NTP server.
Settings	1-255 hours (by 1 hour)
Default value	24 hours

3.7.3 Primary Server

■ IPv4 Address

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the IPv4 address of the primary NTP server. Configure the “DNS (→page 169)” if setting by hostname.
Settings	1.0.0.1-223.255.255.254 or hostname (1-64 alphanumeric characters)
Default value	<ul style="list-style-type: none"> Except for IXGW-GW: - IXGW-GW: ntp.jo.aiphone-app.net

■ IPv6 Address

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the IPv6 address of the primary NTP server. Configure the “DNS (→page 169)” if setting by hostname.
Settings	::FF:0 - FEFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF or hostname (1-64 alphanumeric characters)
Default value	<ul style="list-style-type: none"> Except for IXGW-GW: - IXGW-GW: ntp.jo.aiphone-app.net

■ Port◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the port number for NTP.
Settings	1 - 65535
Default value	123

3.7.4 Secondary Server

■ IPv4 Address

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the IPv4 address of the secondary NTP server. Configure the "DNS (→page 169)" if setting by hostname.
Settings	1.0.0.1-223.255.255.254 or hostname (1-64 alphanumeric characters)
Default value	-

■ IPv6 Address

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the IPv6 address of the secondary NTP server. Configure the "DNS (→page 169)" if setting by hostname.
Settings	::FF:0-FE:FF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF or hostname (1-64 alphanumeric characters)
Default value	-

■ Port◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input checked="" type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the port number for NTP.
Settings	1 - 65535
Default value	123

4. System Information

4.1 Station List

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input checked="" type="checkbox"/> Intercom App
-----------------	---

Configure the address book for IX-MV7-*, IXG-2C7(-*), IXG-DM7(-*), or Intercom App.

Up to 500 stations can be registered only on the IXG-2C7(-*).

The number of stations which can be registered on the IX-MV7-* is the number of stations registered on the [“Station List \(→page 187\)”](#) plus the number of units registered on the [“Mobile App List \(→page 190\)”](#) for a maximum total of 9,998.

Calling, paging, monitoring (IXG-DM7(-*) and Door Stations only), line supervision, and device checking (IX Station only) can be performed by IX-MV7-* for stations registered in the Address Book.

Calling (except for IXG-DM7(-*), Door Stations) and monitoring (IXG-DM7(-*) and Door Stations only) can be performed by IXG-2C7(-*) for stations registered in the Address Book.

Calling can be performed by IXG-DM7(-*) for stations registered in the Address Book.

Monitoring can be performed by Intercom App for stations registered in the Address Book.

Monitoring can be performed for network cameras.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Move column

Up to 50 station number columns can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 columns.

[Next]: Display the next 50 columns.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the column of the station number that was entered.

List of IX-MV7-*, IXG-2C7(-*), IXG-DM7(-*), and Intercom App in setting data

If a network camera has not been registered in "[Network Camera List](#) ([→page 192](#))", this will not be shown.

List of stations that can be registered to the Address Book

! Important

- Stations where "[IP Address](#) ([→page 164](#))" is not configured cannot be registered to the Address Book.
- To access stations registered to the Address Book by hostname, configure "IP Address" - "[Hostname](#) ([→page 194](#))" and "[DNS](#) ([→page 169](#))".

How to create a Station List

1. Search for the stations for which the Address Book will be set up from the "list of IX-MV7-*, IXG-2C7(-*), IXG-DM7(-*), and Intercom App in setting data."
2. Search for the station to be registered in the Address Book using "list of stations that can be registered to the Address Book."
3. Click the cells ("Select," "Network Camera," and "Door Release Button") that correspond to Steps 1 and 2.
 - Select: The station for which "✓" was selected will be registered in the Address Book.

- Network Camera (IX-MV7-* and IXG-2C7(-*)) only): Click **[Network Camera Selection]** to select the network camera to associate. Network cameras configured in [“Network Camera List \(→page 192\)”](#) may be selected. The number of the selected network camera is displayed. If a network camera is associated with a station, the video from the network camera will be displayed when placing a call, during a communication, or when monitoring.



- Door Release Button (Intercom App only): Set whether to display the Door Release button on the station screen in order to release the door.
 - Disable: Do not display the Door Release button on the station screen.
 - Display 1 Only: Display only Door Release button 1 on the station screen.
 - Display 1 and 2: Display Door Release button 1 and Door Release button 2 on the station screen.

4. After configuration is complete, click **[Update]**.

5. Click **[OK]**.

4.2 Mobile App List

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
-----------------	--

Register the unit containing the Mobile App to call in the Address Book.
 All Mobile Apps in a registered unit can be called at once.

The number of stations which can be registered on the IX-MV7-* is the number of stations registered on the [“Station List \(→page 187\)”](#) plus the number of units registered on the [“Mobile App List \(→page 190\)”](#) for a maximum total of 9,998.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.
[Previous]: Display the previous 50 rows.
[Next]: Display the next 50 rows.
[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Move column

Up to 50 station number columns can be displayed at a time. Switch the screen as follows.
[Previous]: Display the previous 50 columns.
[Next]: Display the next 50 columns.
[Building Number]: Select the building.
[Apply]: Select the building number and enter the unit number and click **[Apply]** to move the cursor to the column of the unit number that was entered.

List of IX-MV7-*, IXG-2C7(-*) and IXG-DM7(-*) in setting data

List of units that can be registered to the Address Book

Mobile App List

1. Search for the stations for which the Address Book will be set up from the "list of IX-MV7-*, IXG-2C7(-*) and IXG-DM7(-*) in setting data."
2. Search for the unit to be registered in the Address Book using "list of units that can be registered to the Address Book."
3. Click the cell that corresponds to Steps 1 and 2.
 - Select: The unit for which "✓" was selected will be registered in the Address Book.
4. After configuration is complete, click **[Update]**.

5. Click **[OK]**.

4.3 Network Camera List

IX-MV7-* and IXG-2C7(-*) support ONVIF Profile S and RTSP.

Video and audio captured by a 3rd party network camera and microphone can be monitored on the IX-MV7-* or IXG-2C7(-*) screen.

Register the network camera in the Address Book. Up to 500 network cameras can be registered.

Configure [“Network Camera Integration \(→page 222\)”](#) to configure event notification-related settings for the network camera.

Resolution of network cameras capable of displaying video	Resolution of network cameras capable of recording video
<ul style="list-style-type: none"> IX-MV7-*: SXGA IXG-2C7(-*): WVGA 	<ul style="list-style-type: none"> IX-MV7-*: SXVGA IXG-2C7(-*): WVGA

Move row
Up to 50 station number rows can be displayed at a time. Switch the screen as follows.
[Previous]: Display the previous 50 rows.
[Next]: Display the next 50 rows.
[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Move column
Up to 50 station number columns can be displayed at a time. Switch the screen as follows.
[Previous]: Display the previous 50 columns.
[Next]: Display the next 50 columns.
[Apply]: Enter the station number and click **[Apply]** to move the cursor to the column of the station number that was entered.

List of network cameras that can be registered to the Address Book


[“Network Camera Registry \(→page 193\)”](#)

List of IX-MV7-* and IXG-2C7(-*) in setting data

If no network camera is registered, this will not be shown.

How to create a Network Camera List

1. Register the network camera in ["Network Camera Registry \(→page 193\)"](#).
2. Search for the stations for which the Address Book will be set up from the "list of IX-MV7-* and IXG-2C7(-*) in setting data."
3. Identify the network camera to be registered in the Address Book using "List of network cameras that can be registered to the Address Book."
4. Click the cells ("Select" and "Audio Monitoring") that correspond to Steps 2 and 3.
 - Select: Register network cameras with "✓" selected to the Address Book.
 - Audio Monitoring: Configure whether to allow monitoring of network camera audio from the station.

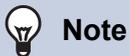

Note

- For IXG-2C7(-*), "Audio Monitoring" is set to "Enable" and cannot be changed.

5. After configuration is complete, click **[Update]**.
6. Click **[OK]**.

4.3.1 Network Camera Registry

Click **[Open Network Camera Registry]**. The following screen is displayed.

["How to register a new network camera \(→page 195\)"](#)

Select the network camera(s) to be deleted (multiple selections allowed), and click to delete.

Station Settings		Network Settings			Function Settings		Required settings
Select	#	Camera Name	Hostname	IP Address (IPv4)	IP Address (IPv6)	ID	Password
<input type="checkbox"/>	001	XXXXXXXXXX		192.168.1.200		001	*****

If no network camera is registered, this will not be shown.

! Important

- Network camera registration is configured via ["Association Settings \(→page 115\)"](#) on at least one IX-MV7-* or IXG-2C7(-*), and cannot be configured if the PC cannot communicate with the system. (This is because, when registering a network camera, the network camera is searched through IX-MV7-* or IXG-2C7(-*)).
- Even if the network camera unit settings (resolution, etc.) are changed after uploading the settings to stations (IXG-2C7(-*), IX-MV7-*), which display network camera video with the IXG Support Tool, the settings are not updated on the stations. Because the network camera information on the station must be erased one time, follow the steps below.
 1. Delete the reconfigured network camera in the "Network Camera List."
 2. With the target network camera in an unregistered state, upload the settings to the station. (The network camera information will disappear on the station side)
 3. Register the target network camera from the "Network Camera List" once more and upload the settings to the station.

■ Camera Name◆

Description	Set the Network Camera Name.
Settings	1-24 alphanumeric characters
Default value	-

■ Hostname

Description	Set the hostname. When setting the hostname, configure "DNS (→page 169)" .
Settings	1-64 alphanumeric characters
Default value	-

■ IP Address (IPv4)◆

Description	Set the IPv4 address for Network camera.
Settings	1.0.0.1-223.255.255.254
Default value	-

■ IP Address (IPv6)◆

Description	Set the IPv6 address for Network camera.
Settings	::FF:0-FE:FF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF
Default value	-

■ ID◆

Description	Enter ID of the network camera.
Settings	1-32 alphanumeric characters
Default value	-

■ Password◆

Description	Enter Password of the network camera.
Settings	1-32 alphanumeric characters
Default value	-



Note


- "Password" is displayed as "*****" in the Settings screen.

How to register a new network camera

Registration cannot be performed if the PC is not connected to the same network as the network camera.

Click **[Add Camera]** to search for a network camera. (Searching may take several minutes.)

When searching is complete, the "Network Camera Selection" screen is displayed, and the network cameras connected to the network are displayed in the "Network Camera Search List."

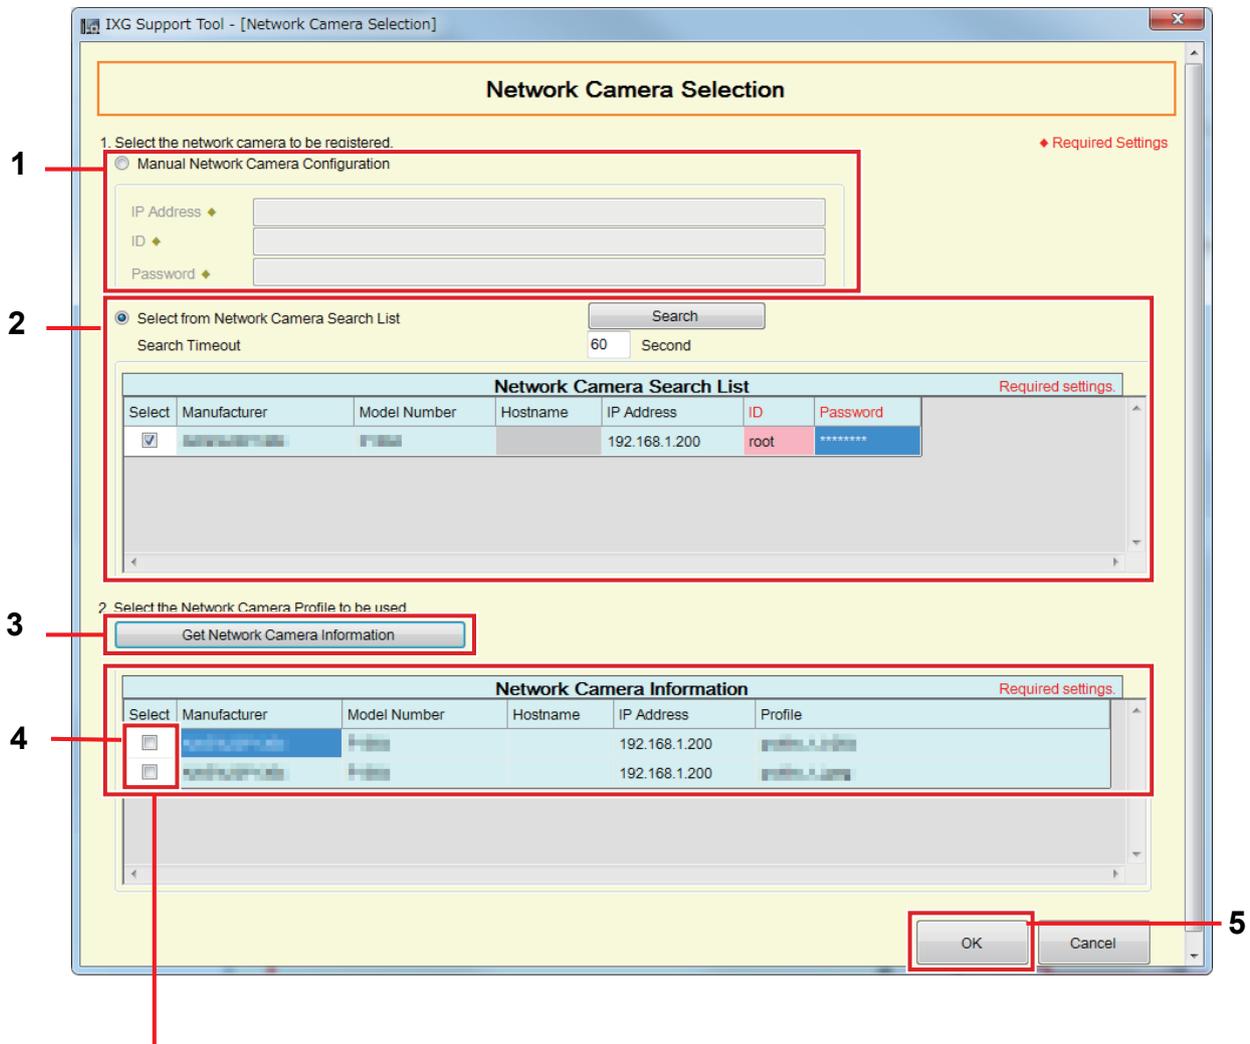

If the video profile cannot be obtained, nothing will be shown.

1. To register by specifying an IP address, select "Manual Network Camera Configuration," and then enter the "IP Address (Hostname)◆," "ID◆," and "Password◆" for the network camera.
2. To select from the Network Camera Search List, select "Select from Network Camera Search List." Select the network camera to register from the "Network Camera Search List" (multiple selections allowed), and then enter the "Hostname," "ID◆," and "Password◆." When entering the Hostname, configure ["DNS \(→page 169\)"](#). To search again, click **[Search]**. It is also possible change the search time.
3. Click **[Get Network Camera Information]**. (Obtaining the video profile may take several minutes.) When video profiles are successfully obtained, they will be shown in "Network Camera Information."
4. Choose the video profile to be registered from the list. (Multiple selections allowed.)
5. Click **[OK]** to register the network camera.

4.4 Group

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
-----------------	---

Configure the group for groups calls, group pages, and contact input calls.

Up to 50 stations can be added per group (when registering a Mobile App, 49 stations per group and a single unit containing the Mobile App), and up to 99 groups can be configured.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click

[Apply] to move the cursor to the row of the station number that was entered.

Move column

Up to 50 station number columns can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 columns.

[Next]: Display the next 50 columns.

[Apply]: Enter the station number and click **[Apply]** to move

the cursor to the column of the station number that was entered.

Row Previous Next

Enter Station Number Apply

Column Previous Next

Enter Station Number Apply

[Display settings]

Group Number

01 v

U = Unicast, M = Multicast
If designating "M", multicast IP addresses must be configured for the station(s).

Building Number	Unit Number	Station Name	System Information				System Information Required settings.	
			Group				Group	
			01				01	
			Number	Name	Type	Total	Station Number / Station Name / Station Type	
01	002	Master Station1	01	Commercial106	Audio Protocol	2		
					Video Protocol	1		
01	106	Master Station1	01	Inside Area 002	Audio Protocol	1		U
						Video Protocol	0	

! Important

- Always set "[Language \(→page 145\)](#)" before setting "Group."
- Enter using the language set in "[Language \(→page 145\)](#)". However, if the language (configured on the station main unit) displayed on the screen for IX-MV7-* is different from the language set with "[Language \(→page 145\)](#)", the characters displayed on the station screen may appear incorrectly. To avoid this, enter information using alphabetical characters only.
- Stations "[IP Address \(→page 164\)](#)" has not been configured and that have not been registered in "[Station List \(→page 187\)](#)", in addition, units (Mobile App) which are not registered on the "[Mobile App List \(→page 190\)](#)" cannot be registered to a group.
- Groups calls and contact input calls cannot be made to an Door Stations or Entrance Station.
- Results when searching by station will be listed in order of group number.

4.4.1 Configuring a Group

Configure the group to register in each station.

The screenshot shows a web-based configuration interface. At the top, there are 'Row' and 'Column' filters, both set to 'Enter Station Number'. A 'Group Number' dropdown menu is highlighted with a red box and labeled '1'. Below this is a 'System Information' section with a 'Group' field set to '01'. The 'Group Information' section is highlighted with a red box and labeled '2'. A search bar is highlighted with a red box and labeled '3'. A dropdown menu for selecting a station is highlighted with a red box and labeled '4'. A list of stations is highlighted with a red box and labeled '5'. A 'Select' button for a station is highlighted with a red box and labeled '6'. Below the screenshot, three labels are provided: 'List of IX-MV7-* in setting data', 'Group Information', and 'List of stations that can be registered to group'.

1. Select the group to configure from "Group Number." The Settings screen for the selected group will be shown on the screen.
2. Enter the following information in "Group Information."
 - Number: 01-99
Group numbers must be unique.
 - Name: 1-24 alphanumeric characters
3. Search for the station to be configured from "list of IX-MV7-* in setting data."
4. Search for the station to be registered from the "list of stations that can be registered to group."

5. Click the cells that correspond to Steps 3 and 4. Select an audio protocol and video protocol setting value for each, and register to a group.
 - The number of registered stations is displayed in the Audio Protocol "Total."
 - The number of stations with Video Protocol set to "U" is displayed in the Video Protocol "Total."

Audio Protocol

 - Blank: Select to not register to a group.
 - U: Register to group. Audio will be transmitted in unicast during group paging.
 - M: Register to group. Audio will be transmitted in multicast during group paging.

Video protocol (only when IX-MV7-*or IXG-2C7(-*) is the station to register)

 - Blank: Video will be transmitted as multicast.
 - U: Video will be transmitted in unicast during group calls. Unicast can reach up to 20 stations.
 - M: Video will be transmitted in multicast during group calls.

The video protocol pull-down menu is shown when the audio protocol setting is selected.
6. To register a Mobile App to a group, click "Mobile App" - **[Select]**.
7. Select the unit containing the Mobile App to register to the group.
8. Click **[OK]**.
 - Click **[Cancel]** to quit without registering a Mobile App.
9. After configuration is complete, click **[Update]**.
10. Click **[OK]**.

Important

- If "M" or "Blank" is selected, be sure to configure "[Multicast Address \(→page 171\)](#)".

Note

- When making a group call, the audio protocol will be set to "U" and cannot be changed.

4.5 Custom Sound Registry

Register the audio files to be used for ringback tones, etc.
 The numbers of audio files that can be registered to each station are as follows.

Station Type	Information that can be saved to the station
IX-DV, IX-DVF(-*)	Max. 100 files (total length of within 200 seconds and 8 Mbytes)
IX-SSA(-*)	Max. 100 files (total length of within 200 seconds and 8 Mbytes)
IX-MV7-*	Max. 100 files (with 200 seconds and 8 Mbytes per file)
IX-EA, IX-EAU	Max. 100 files (total length of within 200 seconds and 8 Mbytes)
IX-FA	Max. 100 files (total length of within 200 seconds and 8 Mbytes)
IX-DA	Max. 100 files (total length of within 200 seconds and 8 Mbytes)
IX-BA	Max. 100 files (total length of within 200 seconds and 8 Mbytes)

Sound file format

- File Type: .wav
- Sample Size: 16 bits
- Sample rate: 8 kHz
- Channel: 1 (monaural)
- Message file name: Within 41 characters (excluding extension)

 **Note**

- When using this as a ringback tone, add a period of silence after the audio.
- Sample files of custom tones are provided on our website (<https://www.aiphone.net/product/>). They can be downloaded for use as audio.

Move row


Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

["How to register multiple custom tones at once \(→page 201\)"](#)

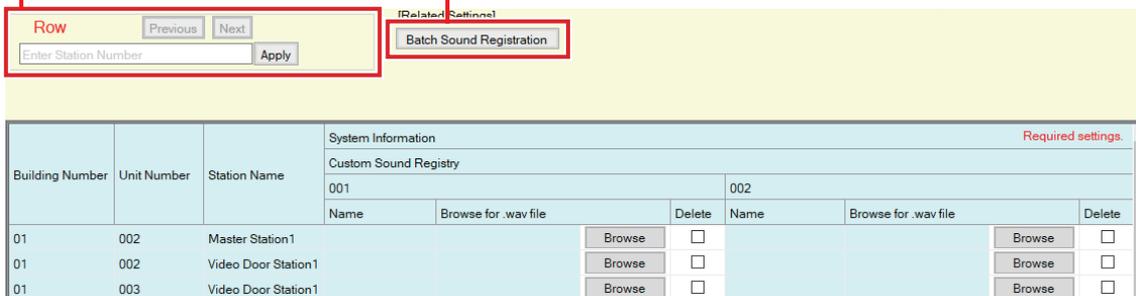

The screenshot shows the 'Custom Sound Registry' interface. At the top, there are navigation buttons: 'Previous', 'Next', 'Enter Station Number', and 'Apply'. A red box highlights these buttons. To the right, there is a 'Batch Sound Registration' button, also highlighted with a red box. Below this is a table with columns for 'Building Number', 'Unit Number', 'Station Name', and 'System Information'. The 'System Information' section is expanded to show 'Custom Sound Registry'. The table has two main sections, '001' and '002', each with columns for 'Name', 'Browse for .wav file', and 'Delete'. The first section contains three rows of data: '01 002 Master Station1', '01 002 Video Door Station1', and '01 003 Video Door Station1'. Each row has a 'Browse' button and a 'Delete' checkbox.

How to register custom tones

1. Click **[Browse]** on the row of the station with which to register the audio file.
2. Select the audio file to register and click **[Open]**.
3. Information on the selected audio file will be shown.
 - Name: The file name of the audio file is shown. Up to 127 bytes of alphanumeric characters will be displayed. The name will be shown as the setting value when configuring the ringback tone etc. If the file name of the audio file exceeds the character limit above, it cannot be registered.
 - Browse for .wav file: The audio file reference destination is shown.
4. After configuration is complete, click **[Update]**.
5. Click **[OK]**.

How to delete a custom tone

1. Check the **[Delete]** box of the audio file to delete.
2. Click **[Update]**.
3. Click **[OK]**.




Note

- "Name" is uploaded in "Sounds" in ["Upload Settings \(→page 119\)"](#), and can be deleted from the Settings screen by deleting the audio file from the station.

How to register multiple custom tones at once

Audio files can be registered to multiple stations at once.

Click **[Batch Sound Registration]**. The following screen will be shown.

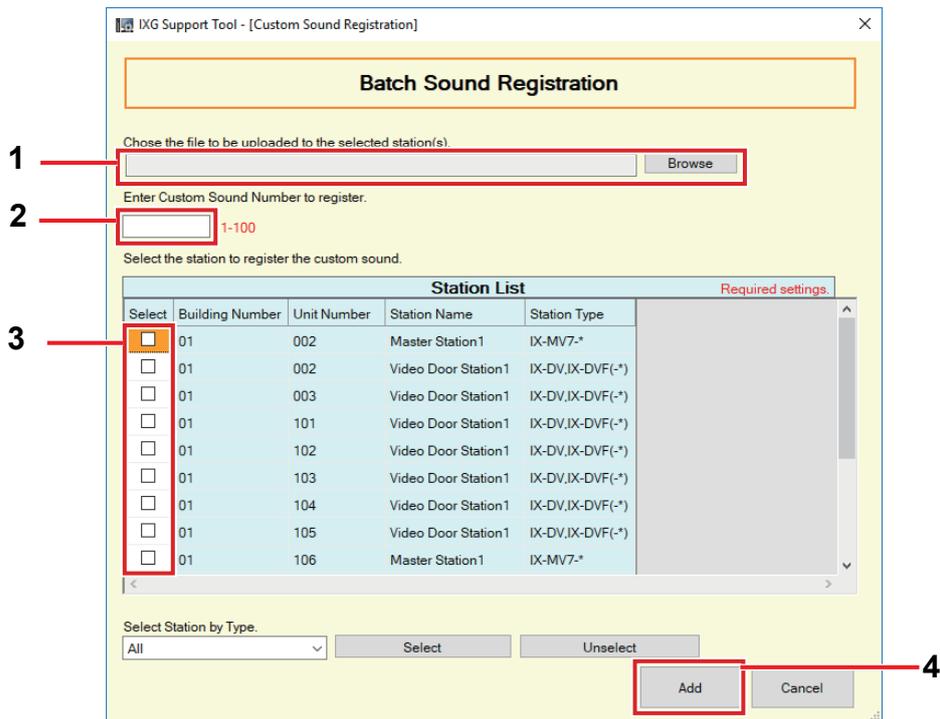

1. Click **[Browse]**, select the audio file to register, and then click **[Open]**.
2. Enter the number of the custom tone to register the audio file.
 - 1 - 100
3. Select the station for which to register the audio file "Station List." (Multiple selections allowed.)
 - To select or unselect stations in a batch, choose the station type and click **[Select]** or **[Unselect]**.
4. Click **[Add]**.
 - Click **[Cancel]** to quit without registering multiple files.
5. Information on the added audio file will be shown.
 - Name: The file name of the audio file is shown. Up to 127 bytes of alphanumeric characters will be displayed. The name will be shown when configuring the ringback tone, etc.
 - If the file name of the audio file exceeds the character limit above, it cannot be registered.
 - Browse for .wav file: The audio file reference destination is shown.
6. After configuration is complete, click **[Update]**.
7. Click **[OK]**.

5. Call Settings

5.1 Called Stations (Door/Sub Stations)

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
-----------------	---

Configure the group to call when a call is made using the call button or via contact input.

- Except for IX-DA, IX-BA: Up to 20 stations can be added per group (when registering a Mobile App, 19 stations per group and a single unit containing the Mobile App), and up to 10 groups can be configured.
- IX-DA and IX-BA: Up to 20 stations can be added per group (when registering a Mobile App, 19 stations per group and a single unit containing the Mobile App), and only a single group can be configured.
- IXG-2C7(-*) and IX-MV7-* stations can be registered as destinations.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.
[Previous]: Display the previous 50 rows.
[Next]: Display the next 50 rows.
[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Move column

Up to 50 station number columns can be displayed at a time. Switch the screen as follows.
[Previous]: Display the previous 50 columns.
[Next]: Display the next 50 columns.
[Apply]: Enter the station number and click **[Apply]** to move the cursor to the column of the station number that was entered.

Move to Related Settings

Moves to the selected item within the same Settings screen.

1

2

3

4

5

List of Door Stations in setting data

List of stations that can be registered to group

Building Number	Unit Number	Station Name	Total
01	002	Video Door Sta	2
01	003	Video Door Sta	1
01	101	Video Door Sta	1
01	102	Video Door Sta	3
01	104	Video Door Sta	1
01	106	Video Door Sta	1
01	106	Video Door Sta	2
01	201	Video Door Sta	1
01	202	Video Door Sta	1
01	203	Video Door Sta	1
01	204	Video Door Sta	1
01	205	Video Door Sta	1
01	206	Video Door Sta	1


Building Number	Unit Number	Unit Name	Select
01	206	Quart206	Select
01	101	Residential101	Select
01	102	Residential102	Select
01	106	Commercial106	Select
01	206	Quart206	Select

! Important

- Stations in which ["IP Address \(→page 164\)"](#) is not configured cannot be registered as destinations.

How to configure destinations (Door/Sub Stations)

1. Select the group to configure from "Display settings."
 - The Settings screen for the selected group will be displayed.
 - When configuring IX-DA and IX-BA destinations, use "Group 10."
2. Search for the station to be configured from "list of Door Stations in setting data."
3. Search for the station to be registered from the "list of stations that can be registered to group."
4. Click the cells that correspond to Steps 2 and 3. Select the setting value and register to the group.
 - The number of registered stations will be displayed in "Total."
 - Blank: Select to not register to a group.
 - U: Register to group. Video and audio will be transmitted in unicast when making an outgoing call.
 - M: Register to group. Video transmitted in multicast and audio will be transmitted in unicast when making an outgoing call.
 - This can only be configured if the station to configure is IX-DV, IX-DVF(-*), IX-DA, IX-EA, or IX-EAU, and the destination is IX-MV7-* or IXG-2C7(-*).
5. To register a Mobile App to a group, click "Mobile App" - **[Select]**.
6. Select the unit containing the Mobile App to register to the group.

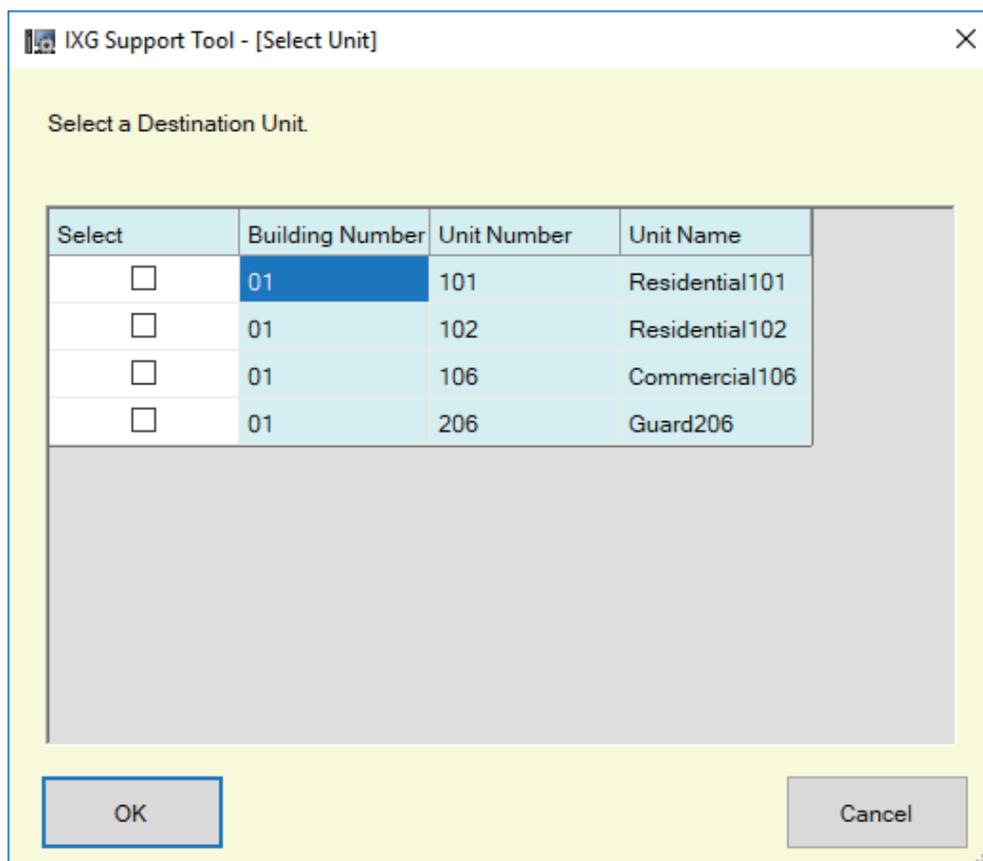

7. Click **[OK]**.
 - Click **[Cancel]** to quit without registering a Mobile App.
8. After configuration is complete, click **[Update]**.
9. Click **[OK]**.



Important

- If "M" is selected, be sure to configure ["Multicast Address \(→page 171\)"](#).

5.2 Call Origination

Configure outgoing call settings.
 Select the outgoing call method to configure in **[Display settings]**.

Move row

Up to 50 station number rows can be displayed at a time.
 Switch the screen as follows.
[Previous]: Display the previous 50 rows.
[Next]: Display the next 50 rows.
[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Display settings

Displays settings for the selected outgoing call method.
[Call Button]: Displays settings related to outgoing calls linked with operating the station main unit.
[Contact Input 1 - 6]: Displays settings related to outgoing calls when "Option Input" - ["Function \(→page 211\)"](#) - "Call" is selected.

Row

Display settings

Building Number	Unit Number	Station Name	Call Settings						Required settings. ^
			Call Origination						
			Call Button						
Ringback Tone		Call Timeout		Ringback Tone Count [time(s)]		Standard Mode Settings			
		Select	10-600 sec			Call Destination	Priority		
01	001	Entrance Station1	Call Pattern 1	15-90 sec	60	Infinite	01	Normal	
01	002	Master Station1	Call Pattern 4	10-600 sec	60	Infinite			
01	002	Video Door Station1	Call Pattern 1	10-600 sec	60	Infinite	01	Normal	
01	003	Video Door Station1	Call Pattern 1	10-600 sec	60	Infinite	01	Normal	
01	101	Tenant Station1	Call Pattern 4	15-90 sec	45	Infinite			
01	101	Video Door Station1	Call Pattern 1	10-600 sec	60	Infinite	01	Normal	

5.2.1 Call Origination Advanced Settings

■ Ringback Tone

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	<p>Select the sound to be played by the station when placing a call. For IX-MV7-* and IXG-2C7(-*), this will also sound when monitoring.</p>
Settings	<ul style="list-style-type: none"> • None (except for IXG-DM7(-*), IX-DA, IX-BA) • Call Pattern 2 (except for IXG-DM7(-*)) • Call Pattern 3 (except for IXG-DM7(-*)) • Call Pattern 4 • Call Pattern 5 (except for IXG-DM7(-*)) • Call Pattern 6 (except for IXG-DM7(-*)) • Tremolo Sound (except for IXG-DM7(-*)) • Busy Response Tone (IX-DA, IX-BA are Busy Tone) (except for IXG-DM7(-*)) • On Hold (except for IXG-DM7(-*)) • Operation Sound (except for IXG-DM7(-*)) • Error (IX-DA, IX-BA are Error Tone) (Except for IXG-DM7(-*)) • Pre Tone 1 (except for IX-DA, IX-BA, IXG-DM7(-*)) • Pre Tone 2 (except for IX-DA, IX-BA, IXG-DM7(-*)) • Pre Tone 3 (except for IX-DA, IX-BA, IXG-DM7(-*)) • Communication End Pretone (except for IX-DA, IX-BA, IXG-DM7(-*)) • Call Queue Notification (except for IX-DA, IX-BA, IXG-DM7(-*)) • Waiting Reply Tone (except for IX-DA, IX-BA, IXG-DM7(-*)) • Audio Guidance (IXG-DM7(-*) only) • Call Pattern 7 (IX-EA, IX-EAU, IX-FA only) • Select a sound that is registered in "Custom Sound Registry (→page 199)". • The ringback tone for IXG-2C7(-*) and IX-MV7-* is set to "Call Pattern 4" and cannot be changed.
Default value	<p>Call Button</p> <ul style="list-style-type: none"> • Call Pattern 1 • IX-MV7-* and IXG-2C7(-*) are set to "Call Pattern 4" and cannot be changed. <p>Option Input 1</p> <ul style="list-style-type: none"> • Call Pattern 2 • IX-MV7-* is set to "Call Pattern 4" and cannot be changed. <p>Option Input 2</p> <ul style="list-style-type: none"> • Call Pattern 3 • IX-MV7-* is set to "Call Pattern 4" and cannot be changed. <p>Option Input 3</p> <ul style="list-style-type: none"> • Call Pattern 4 • IX-MV7-* is set to "Call Pattern 4" and cannot be changed. <p>Option Input 4</p> <ul style="list-style-type: none"> • Call Pattern 5 • IX-MV7-* is set to "Call Pattern 4" and cannot be changed. <p>Option Input 5</p> <ul style="list-style-type: none"> • Call Pattern 6 <p>Option Input 6</p> <ul style="list-style-type: none"> • Tremolo Sound

■ Call Timeout◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the call timeout.
Settings	<ul style="list-style-type: none"> IXG-2C7(-*), IXG-DM7(-*): 15-90 seconds: Set a time between 15 and 90 seconds (by 1 second). Except for IXG-2C7(-*), IXG-DM7(-*): 10-600 seconds: Set a time between 10 and 600 seconds (by 1 second).
Default value	<p>Call Button</p> <ul style="list-style-type: none"> IXG-2C7(-*): 45 seconds Except for IXG-2C7(-*): 60 seconds <p>IX-MV7-* is set to "60 seconds" and cannot be changed.</p> <p>Contact input 1-4 call</p> <ul style="list-style-type: none"> 60 seconds <p>IX-MV7-*, IX-DA, IX-BA, IX-EA, IX-EAU, and IX-FA is set to "60 seconds" and cannot be changed.</p> <p>Contact input 5-6 call</p> <ul style="list-style-type: none"> 60 seconds

■ Ringback Tone Count [time(s)]

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the play count of ringback tone for outgoing call.
Settings	<ul style="list-style-type: none"> Infinite: The ringback tone continues to play for the amount of time configured in "Call Timeout◆ (→page 207)". 1 - 20 times
Default value	<p>Call Button</p> <ul style="list-style-type: none"> Infinite <p>IX-MV7-* is set to "Infinite" and cannot be changed.</p> <p>Contact input 1-4 call</p> <ul style="list-style-type: none"> Infinite <p>IX-MV7-*, IX-DA, IX-BA, IX-EA, IX-EAU, and IX-FA is set to "Infinite" and cannot be changed.</p> <p>Contact input 5-6 call</p> <ul style="list-style-type: none"> Infinite

■ Call Destination ([contact input 1 - 4 call] only)

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the call destination group and call priority. Enter the group number directly, or click [Open] to choose a group.
Settings	<ul style="list-style-type: none"> Number: 01-99. Select from groups registered in "Group (→page 196)". Priority: Normal/ Priority/ Urgent
Default value	<ul style="list-style-type: none"> Number: - Priority: Normal

■ Standard Mode Settings

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the call destination group and call priority.
Settings	<ul style="list-style-type: none"> • Call Destination: 01-10. Select from groups registered in "Called Stations (Door/Sub Stations) (→page 202)". The call destination for IX-DA and IX-BA is set to "10" and cannot be changed for [Call Button]. • Priority: Normal/ Priority/ Urgent
Default value	<p>Call Button</p> <ul style="list-style-type: none"> • Call Destination: 01 (10 for IX-DA and IX-BA) • Priority: Normal <p>Contact input 1 - 6 call</p> <ul style="list-style-type: none"> • Call Destination: - • Priority: Normal

5.3 Guard Button (IXG-2C7)

Configure the station to be called when the "Guard Call Button" is pressed on the Tenant Station. IX-MV7-* stations can be set as destinations.

			Call Settings Required settings.								
			Guard Button (IXG-2C7)								
Building Number	Unit Number	Unit Name	Select Station	Button Number1			Button Number2				
				Station Number	Building Number	Unit Number	Station Name	Station Number	Building Number	Unit Number	Station Name
01	101	Residential101	...								
01	102	Residential102	...								
01	103	Residential103	...								
01	104	Residential104	...								
01	105	Residential105	...								

Important

- "IP Address (→page 164)" must be set before configuring as a destination station.

■ Select Station

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the call destination station (the station number). Up to 8 call destination stations can be configured. Enter the station number or click [Select] to select one. The information (building number, unit number, station name) for the configured station will be displayed.
Settings	Multiple Building System: 3-24 digits Single Building System: 3-5 digits
Default value	-

■ Mobile App

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select the unit containing the Mobile App to configure as a destination. Up to 1 destination unit can be configured. Enter the building number and unit number of the unit containing the Mobile App, or click [Select] to select it. The information (building number, unit number, unit name) for the configured Mobile App is displayed.
Settings	Building Number: 01-99 Unit Number: 3-4 digits (Single Building System), 3-10 digits (Multiple Building System)
Default value	-

6. Option Input / Relay Output Settings

6.1 Option Input

Configure input terminal settings for each station. The number of input terminals varies by station. Select the contact input number to configure in **[Display settings]**.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Display settings

Displays settings for the selected contact input number.

The screenshot shows the configuration interface for Option Input / Relay Output Settings. At the top, there is a control panel with a 'Row' section containing 'Previous', 'Next', and 'Apply' buttons, and a 'Display settings' dropdown menu currently set to 'Option Input 1'. Below this is a table with the following data:

Building Number	Unit Number	Station Name	Option Input / Relay Output Settings			
			Option Input			
			Option Input 1			
		Function	Type	Door Release Output		
				Relay Output	Relay Output	
01	001	Entrance Station1	No Function	Make	<input type="checkbox"/>	<input type="checkbox"/>
01	002	Master Station1	No Function	Make	<input type="checkbox"/>	<input type="checkbox"/>
01	002	Video Door Station1	No Function	Make	<input type="checkbox"/>	<input type="checkbox"/>

6.1.1 Option Input Advanced Settings

6.1.1.1 Function

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the function of contact input. The functions that can be selected vary by station.
Settings	<ul style="list-style-type: none"> No Function Call (IX-MV7-*, IX-DV, IX-DVF(-*), IX-SSA(-*) only): Contact input originates an outgoing call. Be sure to configure "contact input 1 - 6 call" in "Call Origination (→page 205)". Answer Call / Page (IX-MV7-* only): Contact input during an incoming call answers the call. Doorbell (IXG-2C7(-*) only): Contact input causes the doorbell to ring. Door Release (IXG-DM7(-*) only): Contact input results in door release output. Be sure to configure the terminal on which to output door release in "Door Release Output (→page 211)", and then set "Relay Output" - "Function (→page 213)" to "Door Release."
Default value	No Function

6.1.1.2 Type

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the detection method of contact input.
Settings	<ul style="list-style-type: none"> Make Break
Default value	Make

6.1.1.3 Door Release Output

■ Relay Output 1

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	If "Door Release" was selected for "Function (→page 211)" , configure whether to output door release from output terminal 1. Be sure to set "Relay Output" - "Function (→page 213)" to "Door Release."
Settings	<ul style="list-style-type: none"> Checked: Output door release Unchecked: Do not output door release
Default value	Unchecked: Do not output door release

■ Relay Output 2

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	If "Door Release" was selected for "Function (→page 211)" , configure whether to output door release from output terminal 2. Be sure to set "Relay Output" - "Function (→page 213)" to "Door Release."
Settings	<ul style="list-style-type: none"> Checked: Output door release Unchecked: Do not output door release
Default value	Unchecked: Do not output door release

6.2 Relay Output

Configure output terminal settings for each station. The number of output terminals varies by station. Select the contact output number to configure in **[Display settings]**.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Display settings

Displays setting content for the selected contact output number.

Building Number	Unit Number	Station Name	Option Input / Relay Output Settings Required settings. ^													
			Relay Output													
			Relay Output 1													
Function	Outgoing Call			Incoming Call			Communication			Outgoing Page		Incoming Page				
	Normal	Priority	Urgent	Normal	Priority	Urgent	Normal	Priority	Urgent	Normal	Urgent	Normal	Urgent			
01	001	Entrance Station1	Door Release	<input type="checkbox"/>												
01	002	Master Station1	Door Release	<input type="checkbox"/>												
01	002	Video Door Station1	Door Release	<input type="checkbox"/>												
01	003	Video Door Station1	Door Release	<input type="checkbox"/>												

! Important

- The two contact output methods are shown below. Redundant configuration is possible for each output terminal. If multiple commands occur on a single output terminal, the last command will take priority.
 - Function selected in [“Function \(→page 213\)”](#)
 - [“Option Relay Control \(→page 213\)”](#)

6.2.1 Relay Output Advanced Settings

6.2.1.1 Function

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the contact output function. The functions that can be selected vary by station.
Settings	<ul style="list-style-type: none"> No Function Status Output (IXG-2C7(-*), IX-MV7-*): Contact output is performed based on the operation of the station. Contact continues to output during operation. Configure details in "How to configure Status Output (→page 213)". Door Release (except for IXG-2C7(-*)): Contact output is performed together with operating the Door Release button on the station or entering the door release key on the keypad. Configure the output time in "Output Time ♦ (→page 214)". IXGW-LC is set to "No Function" and cannot be changed.
Default value	Relay Output 1 <ul style="list-style-type: none"> Except for IXG-2C7(-*): Door Release IXG-2C7(-*): No Function Relay Output 2 <ul style="list-style-type: none"> No Function

How to configure Status Output

If "Status Output" is configured in ["Function \(→page 213\)"](#), select the operating state for when contact output occurs. This can be selected for each operation priority. (Multiple selections allowed.)

The operating states that can be selected vary by station type.

Building Number	Unit Number	Station Name	Option Input / Relay Output Settings Required settings. ^													
			Relay Output													
			Relay Output 1			Status Output 1										
			Function	Outgoing Call			Incoming Call			Communication			Outgoing Page		Incoming Page	
Normal	Priority	Urgent		Normal	Priority	Urgent	Normal	Priority	Urgent	Normal	Urgent	Normal	Urgent			
01	001	Entrance Station1	Door Release	<input type="checkbox"/>												
01	002	Master Station1	Door Release	<input type="checkbox"/>												
01	002	Video Door Station1	Door Release	<input type="checkbox"/>												
01	003	Video Door Station1	Door Release	<input type="checkbox"/>												
01	101	Tenant Station1	No Function	<input type="checkbox"/>												

6.2.1.2 Option Relay Control

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	If controlling the output terminals with the IX-MV7-* speed dials, configure whether to enable or disable control. If set to "Enable," contact will be output according to the "Speed Dials" - "How to configure option relays (→page 254)" setting. If "How to configure option relays" - "TLS (→page 255)" was set to "Enable" for the station to perform control, also configure "Option Relay Control Authentication Key (→page 215)" . IXG-DM7(-*), IXG-2C7(-*), and IXGW-LC are set to "Disable" and cannot be changed.
Settings	<ul style="list-style-type: none"> Enable Disable
Default value	Disable

6.2.1.3 Output Time

■ Output Time Range

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	If "Door Release" was selected in " Function (→page 213) ", configure the range for the output time of contact output. Also configure the range for the output time of contact output for IXGW-LC.
Settings	<ul style="list-style-type: none"> • 200-2000 [msec] • 3-300 sec (IX-DA, IX-BA) • 3-600 [sec] (except for IX-DA, IX-BA)
Default value	200-2000 [msec]

■ Output Time ◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the Output Time within the range selected in " Output Time Range (→page 214) ".
Settings	The setting value will be configured as follows according to the information set in "Output Time Range." <ul style="list-style-type: none"> • If set to 200-2000 [msec]: Configure from 200-2000 msec (by 200 msec). • If set to 3-300 sec: Configure from 3-300 sec (by 1 sec). • If set to 3-600 [sec]: Configure from 3-600 sec (by 1 sec).
Default value	400 [msec]

6.2.1.4 Door Release Key

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	If "Door Release" was selected for " Function (→page 211) ", configure the authentication key to authenticate release of the door connected to the station. If this matches the door release key of the station performing the door release operation, the door may be released. Be sure to also configure "Door Release" - " Door Release Key (→page 219) " or " Option Output Key (→page 219) ". This will also be the authentication key used to release the door using the keypad on IX-MV7-*.
Settings	<ul style="list-style-type: none"> • 1-20 digits
Default value	Relay Output 1 <ul style="list-style-type: none"> • Random value Relay Output 2 <ul style="list-style-type: none"> • -


! Important

- Configure a different authentication key for each output terminal. (The same key cannot be configured.)
- Configure a different authentication key than the authentication key configured in "[Option Relay Control Authentication Key \(→page 215\)](#)". If the setting value is the same, multiple functions might operate.
- To release the door using the keypad, enter "***authentication key*" on the IX-MV7-* keypad. (If the authentication key is "0000" enter "***0000*.")

6.2.1.5 Tone Settings

■ Door Release

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select the Door Release sounds to be played.
Settings	<ul style="list-style-type: none"> • None • Operation Sound • Audio Guidance Stations other than IXG-DM7(-*) are set to "Operation Sound" and cannot be changed.
Default value	Audio Guidance

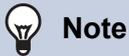


Note

- When unlocking the Door Release by placing the access control credential on the IXG-DM7-HID card reader, the Door Release sound configured for Relay Output 1 will play.

6.2.2 Authentication Key

■ Option Relay Control Authentication Key

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	<p>If "Option Relay Control (→page 213)" is set to "Enable" and "Speed Dials" - "TLS (→page 255)" is set to "Enable" for the station to perform control, configure the key used to decrypt encrypted communication.</p> <p>If this matches the "Option Relay Control Key" of the station performing the operation, the output terminal can be controlled.</p> <p>To use this, be sure to configure "Speed Dials" - "Option Relay Control Key (→page 255)".</p>
Settings	1-20 digits
Default value	-

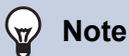

Note

- Only one option relay control authentication key can be set for each station. It will be shared among multiple output terminals.

7. Paging Settings

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
-----------------	--

7.1 All Page

When sending an all page, it is sent via multicast by default. Configure the setting to send via unicast.

Move row

Up to 50 station number rows can be displayed at a time.
 Switch the screen as follows.
[Previous]: Display the previous 50 rows.
[Next]: Display the next 50 rows.
[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Move column

Up to 50 station number columns can be displayed at a time.
 Switch the screen as follows.
[Previous]: Display the previous 50 columns.
[Next]: Display the next 50 columns.
[Apply]: Enter the station number and click **[Apply]** to move the cursor to the column of the station number that was entered.

Address book station list

Row Previous Next

Enter Station Number

Column Previous Next

Enter Station Number

Building Number	Unit Number	Station Name	Total		Paging Settings		Required settings.
			Total	Unicast	All Page	Unicast	
01	002	Master Station1	16	5	Select Station	0002	2 ⁰⁰⁰³
01	002	Master Station2	16	5	Select Station	001 / 0010 / Entrance Station1 / IXG-DM7(-*)	002 / 0020 / Master Station1 / IX-MV7-*
01	106	Master Station1	0	0	Select Station	-	-

List of IX-MV7-* in setting data

! Important

- Unicast can reach up to 50 stations. If more than 50 stations are to be paged at once, use multicast.
- When paging stations in multicast, configure "[Multicast Address \(→page 171\)](#)".
- Paging to Door Stations other than Door Stations in your room is not possible. However, paging to Outside Area Door Stations is possible.

How to configure all page

1. Search for the station to be configured from "list of IX-MV7-* in setting data."
2. Click "Select Station."

IXG Support Tool - [Transfer Destination Stations]

Transfer Destination Stations

Max. 500 stations can select.
 Select Station Number. (0/500)
 Select Unicast. (0/500)

Select		Station List					Required settings.
Select Station	Unicast	Building Number	Unit Number	Station Number	Station Name	Station Type	
<input checked="" type="checkbox"/>	-	01	001	0010	Entrance Station1	IXG-DM7(-*)	
<input type="checkbox"/>	-	01	002	0021	Video Door Station1	IX-DV,IX-DVF(-*)	
<input type="checkbox"/>	-	01	101	1010	Tenant Station1	IXG-2C7(-*)	
<input type="checkbox"/>	-	01	102	1020	Tenant Station1	IXG-2C7(-*)	
<input type="checkbox"/>	-	01	103	1030	Tenant Station1	IXG-2C7(-*)	
<input type="checkbox"/>	-	01	104	1040	Tenant Station1	IXG-2C7(-*)	
<input type="checkbox"/>	-	01	105	1050	Tenant Station1	IXG-2C7(-*)	

Select Station by Type.
 All

3. Check the "Select Station" cell of a station to use All Page.
 - To select or unselect all stations at once, click **[Select]** or **[Unselect]**. If all are selected, only the first 500 will be selected.
4. Check the "Unicast" box next to the station to which to send a unicast message.
 - Unchecked: Multicast transmission
 - Checked: Unicast transmission
 - All are set to "Unchecked" (multicast transmission) by default.
5. Click **[OK]**.
6. After configuration is complete, click **[Update]**.
7. Click **[OK]**.

8. Function Settings

8.1 Door Release

8.1.1 Door Release Assignment

Configure the connected station and the authentication key to release the door during a call. Select the Building Number / Building Name containing the door release station, select the station numbers (100 stations at once), and then click **[Apply]**. The following screen is displayed.

Display

Building Number / Building Name: Select the building containing door release station to display.
 Station Number: Select the station numbers of the door release stations to display (100 stations at a time), and then click **[Apply]**. The Settings screen of the selected station is displayed.

["How to configure door release batch settings \(→page 220\)"](#)

Building Number	Unit Number	Unit Name	Destination Station
01	002	Inside Area 002	Destination Station
01	101	Residential101	Destination Station
01	102	Residential102	Destination Station

Destination station list
(Unit Number/Station Number/Station Name/Station Type)

■ Contact Assignment

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select which relay output will be used for door release during call or monitoring.
Settings	<ul style="list-style-type: none"> • Origination Station: Release the door connected to the station in which the door release operation was performed. • Destination Station: Release the door connected to the destination station. Residential is set to "Destination Station" and cannot be changed.
Default value	Destination Station

■ Door Release Key

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the door release key used to release the door connected to the destination station when a door release operation is performed and " Contact Assignment (→page 218) " is set to "Destination Station." Door release is possible when it matches the authentication key of the destination station set in "Relay Output" - " Door Release Key (→page 214) ".
Settings	1-20 digits
Default value	Random value (same as the value set for the destination station in "Relay Output" - " Door Release Key (→page 214) ")

■ Option Output Key

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure option output key used to release the door connected to the destination station when a door release operation is performed and " Contact Assignment (→page 218) " is set to "Destination Station." Door release is possible when it matches the authentication key of the destination station set in "Relay Output" - " Door Release Key (→page 214) ".
Settings	1-20 digits
Default value	-

How to configure door release batch settings

If "[Contact Assignment \(→page 218\)](#)" is set to "Destination Station," the door release destination station and the door release key can be configured for multiple stations at the same time. Click **[Door Release Batch Configuration]**. The following screen will be displayed.

List of Entrance Stations and Door Stations in setting data

Only a Relay Output set to "Door Release" can be selected. Configure Relay Outputs in "Option Input / Relay Output Settings - Relay Output".
Door Release Batch Configuration will overwrite existing Access Codes.

Door Release / Option Output Settings

Building Number	Unit Number	Unit Type	Station Name	Relay Output	
				Relay Output 1 Door Release	Relay Output 2 Option Output
01	001	Entrance	Entrance Station1	<input checked="" type="checkbox"/>	<input type="checkbox"/>
01	002	Inside Area	Video Door Station1	<input checked="" type="checkbox"/>	<input type="checkbox"/>
01	003	Outside Area	Video Door Station1	<input checked="" type="checkbox"/>	<input type="checkbox"/>
01	101	Residential	Video Door Station1	<input checked="" type="checkbox"/>	<input type="checkbox"/>
01	102	Residential	Video Door Station1	<input checked="" type="checkbox"/>	<input type="checkbox"/>
01	103	Residential	Video Door Station1	<input checked="" type="checkbox"/>	<input type="checkbox"/>
01	104	Residential	Video Door Station1	<input checked="" type="checkbox"/>	<input type="checkbox"/>
01	105	Residential	Video Door Station1	<input checked="" type="checkbox"/>	<input type="checkbox"/>

Select Building and Unit Types

Unit Type: All | Relay Output: Relay Output 1 Door Release | Select | Unselect

Entrance Door Release partitioning by Unit Type

Select	Unit Type
<input checked="" type="checkbox"/>	Residential
<input checked="" type="checkbox"/>	Guard
<input type="checkbox"/>	Commercial
<input type="checkbox"/>	Common Inside Area
<input type="checkbox"/>	Other Building Guard (Multi Buildings only)

Common Outside Area Door Release partitioning by Unit Type

Select	Unit Type
<input checked="" type="checkbox"/>	Local Unit
<input checked="" type="checkbox"/>	Guard in the local building

Door Station of the Residential, Guard, or Commercial Unit will be released by the Master Station of the same unit.

Upload | Cancel

Note

- Contact output terminals for which "Relay Output" - "[Function \(→page 213\)](#)" is not set to "Door Release" cannot be selected.

1. Find a door release destination station from the list of Entrance Stations and Door Stations, select Relay Output. (Multiple selections allowed.)
 - To select or unselect Relay Output in a batch, select the building, unit type, or contact output terminal, and then click **[Select]** or **[Unselect]**.
2. Select the Unit Type of the station to release the entrance door. (Multiple selections allowed.)
3. Select the Unit Type of the station to release the door of the of the Common Outside Area and Common Inside Area. (Multiple selections allowed.)
4. Click **[Upload]**.
 - The Door Release Key will be displayed.
 - Click **[Cancel]** to exit.



Note

- If the destination station authentication key was configured in "Relay Output" - "[Door Release Key \(→page 214\)](#)", the same value will be displayed.
- If the destination station authentication key was not configured in "Relay Output" - "[Door Release Key \(→page 214\)](#)", the same value as the Door Release Key will be automatically set in "[Door Release Key \(→page 214\)](#)".
- To confirm the configured door release key, use "Display" to select the "Building Number / Building Name" and "Station Number" for the Entrance Station to confirm, and then click **[Apply]**.

8.2 Network Camera Integration

Configure network camera profile (video profile) and event related settings.

To configure, register beforehand the network camera in the Address Book of the IX-MV7-* or IXG-2C7(-*) which will receive the event in [“Network Camera List \(→page 192\)”](#).

! Important

- Network camera event registration can be configured only when [“Association Settings \(→page 115\)”](#) is performed on IX-MV7-* and IXG-2C7(-*) to which the event is registered, and the PC can communicate with the system and can use multicast. (This is because network camera events are obtained via multicast through IX-MV7-* or IXG-2C7(-*) when registering network camera events.)

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Move display column (network camera)

Up to 50 network camera number columns can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 columns.

[Next]: Display the next 50 columns.

[Apply]: Enter a network camera number and click **[Apply]** to move the cursor to the column for the entered network camera number.

[“How to configure network camera event setup \(→page 225\)”](#)

Row Previous Next

Enter Station Number

Column (Network Camera) Previous Next

Enter Network Camera Number

Related Settings

Building Nu	Unit Number	Station Name	Function Settings				Required settings
			Network Camera Integration		Event Registration		
			Profile Setting				
			001	001		002	
			Network Camera Name	Profile	Network Camera	Event	Function
			Network Camera	profile_1_1204			Event Tone
			Network Camera	profile_1_1204			
			Network Camera	profile_1_1204			
01	002	Master Station1					
01	002	Master Station2					
01	101	Tenant Station1					
01	101	Tenant Station2					
01	102	Tenant Station1					
01	102	Tenant Station2					
01	103	Tenant Station1					
01	104	Tenant Station1					
01	105	Tenant Station1					

Network camera number

Event number

If no network camera is registered, this will not be shown.

If no event is registered, this will not be shown.

8.2.1 Profile Setting

Configure when changing the profile selected when the network camera was registered in [“Network Camera List \(→page 192\)”](#).

■ Profile

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the profile of the network camera. On the first screen, the profile name that was selected when registering the network camera will be displayed. Refer to the manual of the network camera for details on profiles.
Settings	—
Default value	—

8.2.2 Event Registration

Configure the network camera event to register in IX-MV7-*.

When the registered event is received, network camera monitoring is performed and the notification tone is played.

■ Event

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Events registered in “How to configure network camera event setup (→page 225)” are displayed. Clear "Event" and click [Update] to delete the registered event. For details of the Event, refer to the manual of the network camera.
Settings	—
Default value	—

■ Function

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select the function when receive the topic from the network camera.
Settings	Monitor: Play the notification tone and begin network camera monitoring.
Default value	—

■ Event Tone

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure notification tone when an event is received from the network camera. This can be configured for each event.
Settings	<ul style="list-style-type: none"> • None • Call Pattern 1 • Call Pattern 2 • Call Pattern 3 • Call Pattern 4 • Call Pattern 5 • Call Pattern 6 • Tremolo Sound • Busy Response Tone • On Hold • Operation Sound • Error • Pre Tone 1 • Pre Tone 2 • Pre Tone 3 • Communication End Pretone • Call Queue Notification • Waiting Reply Tone • Select a sound that is registered in "Custom Sound Registry (→page 199)".
Default value	Call Pattern 3


■ Play Count of Event Tone

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the play count for the event notification tone when "Function (→page 223)" is set to "Monitor." This will be the play count for all network cameras and events registered in the station.
Settings	<ul style="list-style-type: none"> • Infinite: Continues to sound while the event generated by the network camera is received. • 1 - 20 times
Default value	1 time

How to configure network camera event setup

The network camera event must be registered.

Click **[Open Network Camera Event Registry]**. The "Open Network Camera Event Registry" screen will be shown.

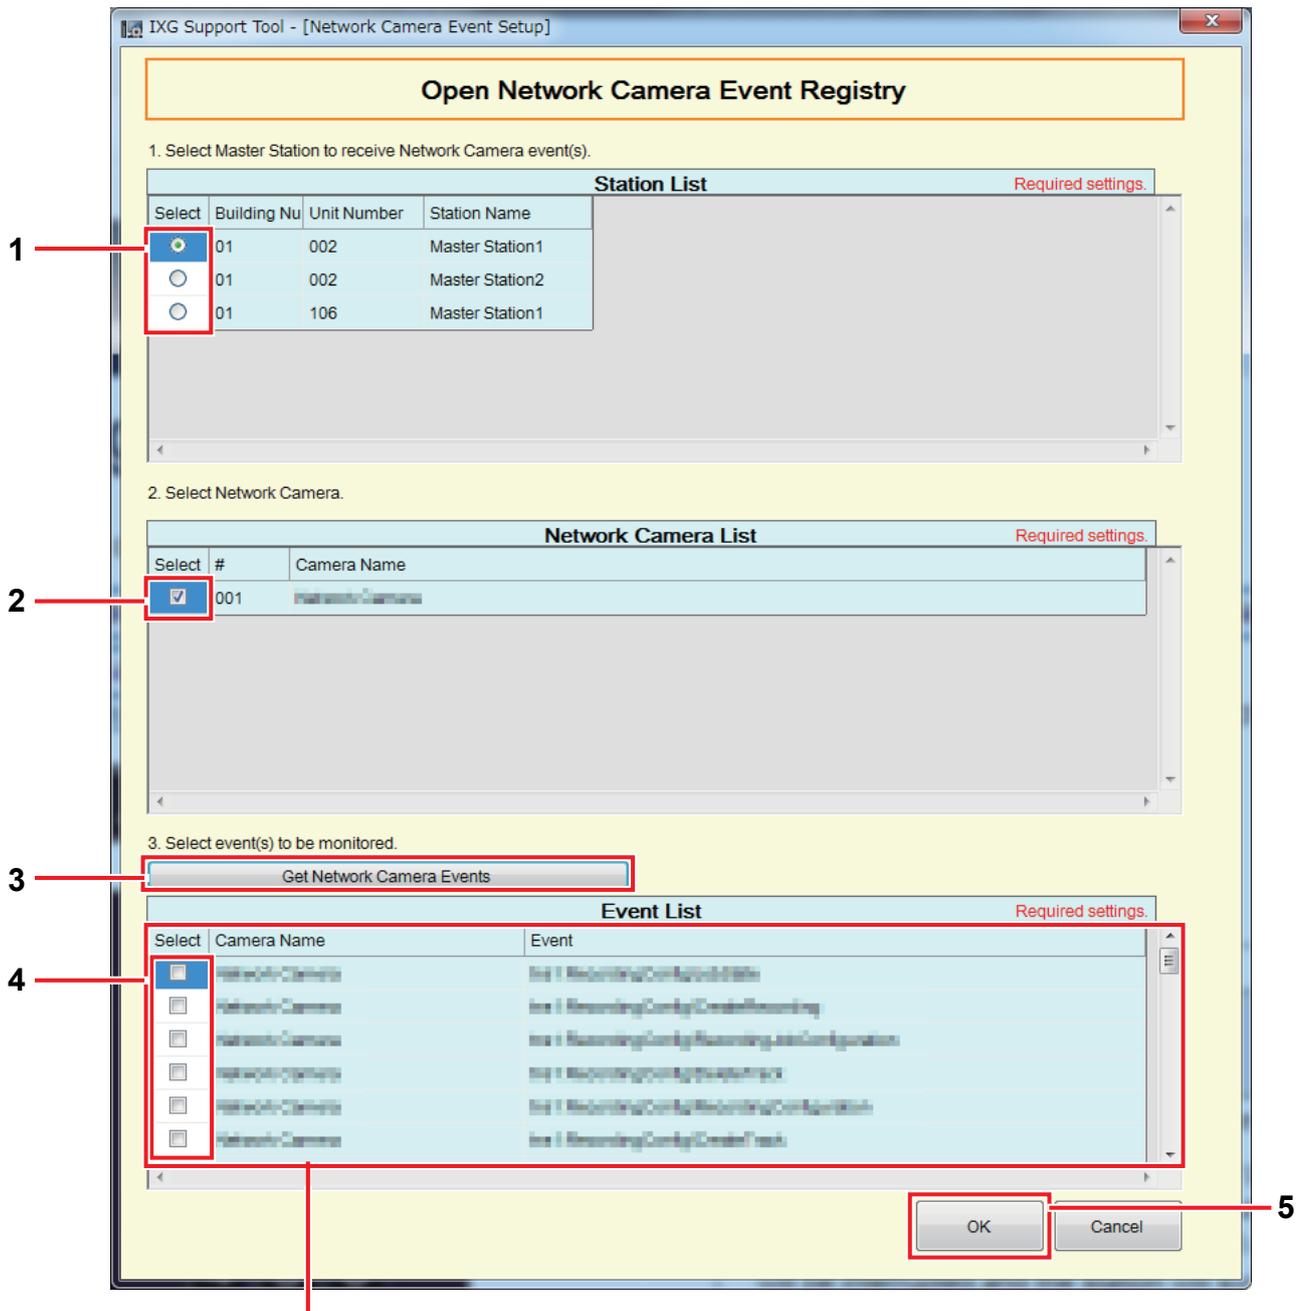

If no event is obtained, this will not be shown.

1. Select the station for which to register the network camera event from "Station List."
2. Select the network camera to monitor events from "Network Camera List." (Multiple selections allowed.)
 - Network cameras registered in the Address Book in "[Network Camera List \(→page 192\)](#)" will be shown.
3. Click **[Get Network Camera Events]**.
(Obtaining the events may take several minutes.)
 - Once events are successfully obtained, they will be shown in "Event List."

4. Select the event to monitor from "Event List." (Multiple selections allowed.)
 - For details on events, refer to the manual of the network camera.
5. Click **[OK]** to register the event.
 - The network cameras and events registered in event registry will be shown.
 - Click **[Cancel]** to return to the "Network Camera Integration" screen without registering.

8.3 Email

Configure this section when email notification of station operation is required.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Move to Related Settings

Moves to the selected item within the same Settings screen.

The screenshot shows a control panel with a 'Row' section containing 'Previous', 'Next', and 'Apply' buttons, and a dropdown menu labeled '[Move to Related Settings]' with 'Server Settings' selected. Below this is a table with columns for Building Number, Unit Number, Station Name, Function Settings, Authentication Settings, and Email Addresses. The table lists two rows: 'Entrance Station1' and 'Master Station1'.

Building Number	Unit Number	Station Name	Function Settings	Authentication Settings	Email Addresses								
01	001	Entrance Station1	SMTP Server	SMTP Port	SMTP Encryption	SMTP Authentication	Mode	ID	Password	Destination 1	Destination 2	Destination 3	Source
				25	Disable	Disable	LOGIN						
01	002	Master Station1		25	Disable	Disable	LOGIN						

8.3.1 Server Settings

SMTP Server

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the SMTP server. When choosing an IPv4 address, enter the IP address or the hostname. When choosing an IPv6 address, enter the IP address or the hostname. When setting the hostname, configure "DNS (→page 169)" .
Settings	1-255 alphanumeric characters
Default value	—

SMTP Port

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the port number used for SMTP.
Settings	1 - 65535
Default value	25

■ SMTP Encryption

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the encryption type for SMTP.
Settings	<ul style="list-style-type: none"> • Disable • TLS • STARTTLS
Default value	Disable

8.3.2 Authentication Settings

■ SMTP Authentication

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select Enable / Disable for SMTP Authentication.
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Disable

■ Mode

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the SMTP authentication mode.
Settings	<ul style="list-style-type: none"> • LOGIN • CRAM-MD5
Default value	LOGIN

■ ID

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the ID for SMTP authentication.
Settings	1-64 alphanumeric characters
Default value	-

■ Password

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the password for SMTP authentication.
Settings	1-64 alphanumeric characters
Default value	-



Note

- "Password" will be displayed as "*****" on the screen.

8.3.3 Email Addresses

Destination 1

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the destination email address.
Settings	1-64 alphanumeric characters
Default value	-

Destination 2

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the destination email address.
Settings	1-64 alphanumeric characters
Default value	-

Destination 3

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the destination email address.
Settings	1-64 alphanumeric characters
Default value	-

Source Address

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the source email address.
Settings	1-64 alphanumeric characters
Default value	-

8.3.4 Email Event Trigger

Configure the trigger used to send email. The email event trigger can be configured for each destination address.

■ SD Card Error

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Send an email when a microSD access error is detected. If the error is detected continuously, email will not be sent an additional time.
Settings	<ul style="list-style-type: none"> • Checked: Send • Unchecked: Do not send
Default value	Unchecked: Do not send

■ Recording Memory Full

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Send an email if the microSD card experiences any of the following. If detected continuously, email will not be sent an additional time. <ul style="list-style-type: none"> • Recorded recordings exceeds 999 • Storage capacity remaining 0%
Settings	<ul style="list-style-type: none"> • Checked: Send • Unchecked: Do not send
Default value	Unchecked: Do not send

■ Subject

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the subject when sending email for each trigger. This will be used for all recipient addresses.
Settings	1-64 alphanumeric characters
Default value	-

Important

- [UTF-8] used for "Subject" encoding, the subject may be incorrectly decoded depending on mail server. Characters may display incorrectly depending on the email client. To avoid this, set the encoding method to "UTF-8."

8.3.5 Send Test Email

Send a test email to the address specified in [“Email Addresses \(→page 230\)”](#). Click **[Send]** next to the station to which to send a test email. The following email will be sent to the configured address.

! Important

- To send a test email, [“Association Settings \(→page 115\)”](#) must have been configured, and the programming PC must be able to communicate with the system.

Example of sending an email message
 When sending a test email from the station (Station Number: 0001, Station Name: Master Station 1).

From	△△△△@△△△△△.com
Date and time	2020/11/20 15:22
To CC	xxxx@xxxxx.com
Subject	0001 Master Station 1 Test Email
Test Email sent at "20201120 15:22:46."	
Station Number: "0001"	
Station Name: "Master Station 1"	
Unit Type: "-"	

! Important

- [UTF-8] used for "Subject" encoding, the subject may be incorrectly decoded depending on mail server. Characters may display incorrectly depending on the email client. To avoid this, set the encoding method to "UTF-8."

8.4 Recording

Configure the recording settings. If there is no video, this will apply only to audio. When recording communication, any audio from the recording station will also be recorded.

The following SD standards are required to record video and audio.

Station Type	Standard	Supported storage capacity	Format	Speed class
IXG-DM7(-HID)	microSDHC memory cards	4 GB to 32 GB	FAT32	SD speed class 10 UHS speed class 1

Important

- Stations do not include microSD cards. A microSD card will need to be purchased.
- The device may not operate correctly depending on the microSD card.
- If the card contains data except video/audio files, it may not have enough space to record video/audio.
- The network camera may not be able to record video, depending on the size of the image.

Note

- A maximum of 999 recording files can be saved. However, this may vary depending on the size of the recording files and the capacity of the microSD card.
- Line Supervision and Device Check results are also saved to the microSD card.
- Iphone assumes no responsibility for microSD cards. Please keep this in mind.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Row Previous Next

Enter Station Number Apply

Building Number	Unit Number	Station Name	Function Settings					Required settings. ^	
			Recording				Recorded Device		Audio Recording
			Recording Mode	Recording Event					
Call Origination	Communication (Door)								
01	001	Entrance Station1	Disable	Disable	Disable		Enable		
01	002	Master Station1				IX Station	Enable		
01	002	Video Door Station1	Disable	Disable	Disable		Enable		
01	003	Video Door Station1	Disable	Disable	Disable		Enable		

8.4.1 Recording Mode

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the recording mode.
Settings	<ul style="list-style-type: none"> • Disable • Enable (IXG-2C7(-*) only) • Event Recording (IXG-DM7(-*), IX-DV, IX-DVF(-*), IX-SSA(-*), IX-EA, IX-EAU, IX-FA only): Begin recording when the trigger set by "Recording Event" occurs. • 24/7 Recording (IX-DV, IX-DVF(-*), IX-SSA(-*), IX-EA, IX-EAU, IX-FA on): Continuously record as long as the station is operating normally.
Default value	<ul style="list-style-type: none"> • IXG-2C7(-*):Enable • Except for IXG-2C7(-*): Disable

8.4.2 Recording Event

Configure the trigger in use to start recording video/audio automatically.
This is only when "Recording Mode" is set to "Event Recording."

■ Call Origination

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	IXG-DM7(-*), IX-DV, IX-DVF(-*), IX-EA, IX-EAU: Begin recording when an outgoing call is made. Audio recording will start once communication has started after making an outgoing call. IX-SSA(-*), IX-FA: Audio recording will start once the conversation has started after the outgoing call is made.
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Disable

■ Communication (Door)

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Recording starts when communication begins.
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Disable

8.4.3 Recorded Device

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure which video to record if the IX System station video and network camera video are displayed on two screens.
Settings	<ul style="list-style-type: none"> IX Station: Record video from the IX system station. Network Camera: Record video from the network camera.
Default value	IX Station

8.4.4 Audio Recording

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select Enable / Disable for audio recording with video.
Settings	<ul style="list-style-type: none"> Enable Disable <p>For IXG-2C7(-*), "Audio Recording" is set to "Enable" and cannot be changed.</p>
Default value	Enable

8.5 CSR

Generate the signature request (CSR) submitted when a request is made to the Server Certificate Authority (CA)


Building Number	Unit Number	Station Name	Function Settings						Required settings
			CSR						
			Country	State / County / Region	City / Locality	Organization	Organizational Unit	Common Name	Create
01	002	Master Station1						192.168.1.11	Create
01	002	Video Door Station1						192.168.1.12	Create
01	003	Video Door Station1						192.168.1.13	Create
01	101	Video Door Station1						192.168.1.15	Create
01	102	Video Door Station1						195.168.1.17	Create
01	103	Video Door Station1						195.168.1.19	Create
01	104	Video Door Station1						195.168.1.21	Create
01	105	Video Door Station1						195.168.1.23	Create
01	106	Master Station1						195.168.1.24	Create

! Important

- To generate a signature request, "[Association Settings \(→page 115\)](#)" must have been completed on the station to generate the request, and the PC must be able to communicate with the system.

How to generate a signature request

- Input each item.
- Click **[Create]**.
- Click **[OK]**.
 - Click **[Cancel]** to return to the Settings screen without generating.

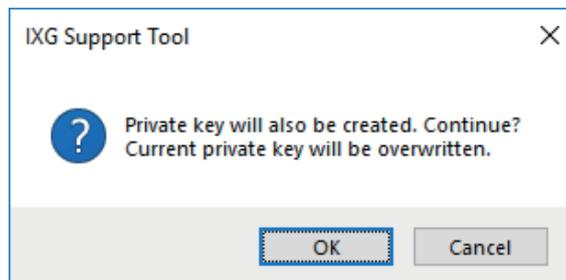

- Specify the save location and store your created file in it.
 - The file will be saved under the name "CSR." Change the file name and save it as necessary.
- Click **[OK]**.

Country

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the country name.
Settings	The two-letter code
Default value	-

■ State / County / Region◆

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the State/County/Region.
Settings	1-128 alphanumeric symbols and characters
Default value	-

■ City / Locality

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the City/Locality.
Settings	1-128 alphanumeric symbols and characters
Default value	-

■ Organization◆

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the organization name.
Settings	1-64 alphanumeric symbols and characters
Default value	-

■ Organizational Unit

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the department name.
Settings	1-64 alphanumeric symbols and characters
Default value	-

■ Common Name

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the common name.
Settings	1-64 alphanumeric characters
Default value	The station's IP address is listed.

8.6 SSL Certificate

Upload the Server Certificate received from the Certificate Authority (CA) as well as the CA certificate.

! Important

- To upload an SSL certificate, "[Association Settings \(→page 115\)](#)" must have been completed on the station, and the PC must be able to communicate with the system.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

["How to upload the SSL certificate to each station \(→page 240\)"](#)

The screenshot shows a control panel with a 'Row' section containing 'Previous', 'Next', and 'Apply' buttons, and an 'Enter Station Number' input field. To the right is a 'Function Settings' section with an 'Upload SSL Certificate' button. Below this is a table with columns for Building Number, Unit Number, Station Name, and Function Settings. The Function Settings section is expanded to show SSL Certificate details, including Server Certificate and CA Certificate, each with Name, Browse for .wav file, Browse, and Delete columns.

Building Number	Unit Number	Station Name	Function Settings Required settings. ^							
			SSL Certificate							
			Server Certificate				CA Certificate			
			Name	Browse for .wav file	Browse	Delete	Name	Browse for .wav file	Browse	Delete
01	002	Master Station1			Browse	<input type="checkbox"/>			Browse	<input type="checkbox"/>
01	002	Video Door Station1			Browse	<input type="checkbox"/>			Browse	<input type="checkbox"/>

How to register SSL certificates

1. Click **[Browse]** next to the station to upload the server certificate and then select a file.
2. If required, click **[Browse]** next to the station to upload the CA certificate and then select a file.
3. The reference destination of the file selected in "Browse for .wav file" is displayed.
4. Click **[Update]**.
 - The name of the file registered in "Name" is displayed.
 - Server certificate and CA certificate files are saved in each station, in "Local Disk (C)" - "users" - "public" - "Documents" - "Aiphone" - "IXG" - "SupportTool" - "SystemData" - "(Set Site Name)" - "Certificate (hidden folder)."
5. Click **[OK]**.
6. Click **[Upload SSL Certificate]** and upload the certificate to each station. Refer to "[How to upload the SSL certificate to each station \(→page 240\)](#)".

! Important


- The server certificate must be uploaded when uploading a CA certificate.

How to delete a registered SSL certificate

1. Check the **[Delete]** box of the server certificate or CA certificate to delete.
2. Click **[Update]**.
 - The server certificate or CA certificate file will be deleted from the PC folder in which the file was saved in step 4 of "How to register SSL certificates."
3. Click **[OK]**.

8.6.1 How to upload the SSL certificate to each station

Click **[Upload SSL Certificate]**. The following screen will be displayed.

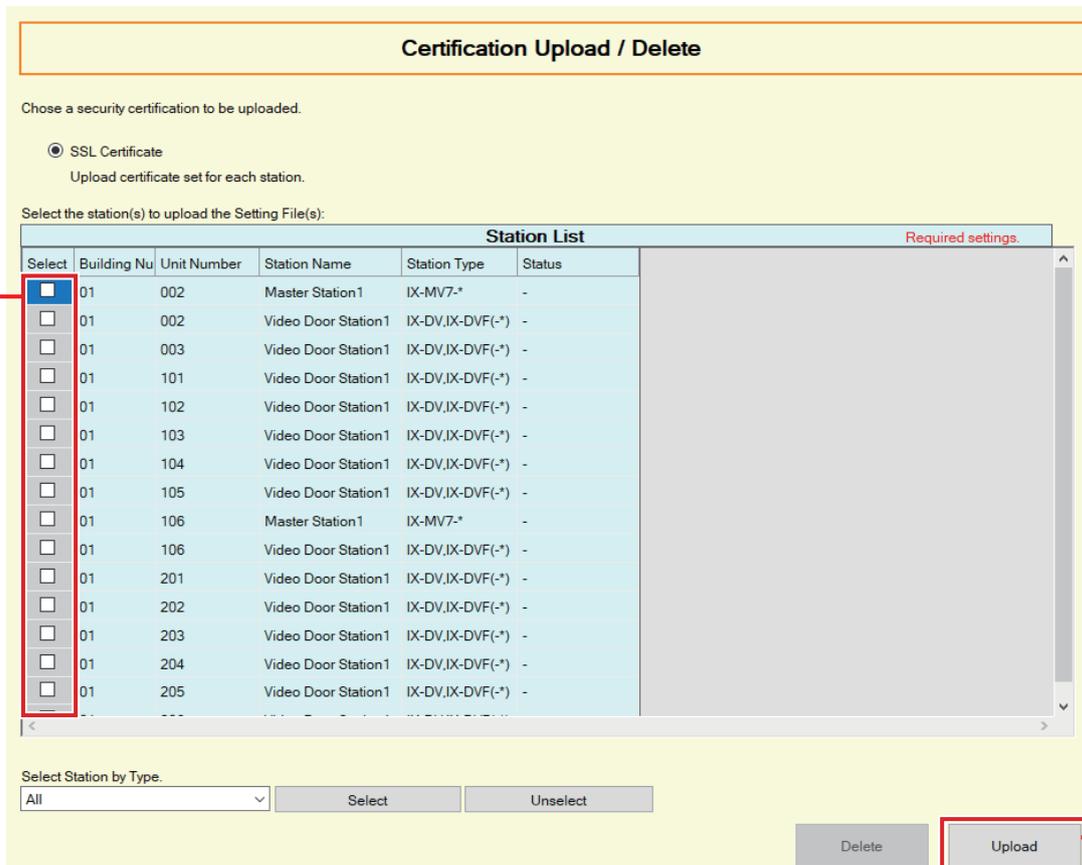

! Important

- The station will restart after uploading an SSL certificate. In some cases, it may take up to 10 minutes for the station to restart. The station will be inoperable until restarting is completed.

How to upload an SSL certificate

- Select the station for which to upload a certificate from "Station List." (Multiple selections allowed.)
 - To select or unselect stations in a batch, choose the station type and click **[Select]** or **[Unselect]**.
 - Stations in which ["Association Settings \(→page 115\)"](#) has not been performed cannot be selected.
- Click **[Upload]**.
- Click **[OK]**.
 - The server certificate or CA certificate file is uploaded to the station, and the station is restarted.
 - Click **[Cancel]** to return to the "Certification Upload / Delete" screen without uploading.
- Click **[OK]**.
 - The result is displayed in "Station List" - "Status."
 - In Process: Uploading the certificate.
 - Success: Upload is completed.
 - Failed: Upload failed. Try uploading again.

8.7 Display Mode

Configure the main screen for IX-MV7-.*.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Row

Building Number	Unit Number	Station Name	Function Settings
			Display Mode
			Standard Mode
			Home Screen
01	002	Master Station1	Option 1
01	106	Master Station1	Option 1

Required settings.

8.7.1 Standard Mode

■ Home Screen

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the main screen.
Settings	<ul style="list-style-type: none"> Option 1: <div data-bbox="715 512 1248 831" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> </div> Option 2: <div data-bbox="715 909 1248 1227" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> </div>
Default value	Option 1

9. Transfer Settings

9.1 Absent Transfer

Configure the settings for absent transfer.

Absent Transfer: If an incoming call is received during absent transfer, the incoming call can be automatically transferred to a transfer destination.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Building Number	Unit Number	Station Name	Transfer Settings								Required settings.		
			Absent Transfer	Absent Transfer									
				Transfer Destination List									
		Select Station	Station Number										Mobile App
			No.01	No.02	No.03	No.04	No.05	No.06	No.07	No.08	No.09	No.10	Building Number
01	002	Master Station1	Disable	Select Station									
01	106	Master Station1	Disable	Select Station									

! Important

- Stations in which ["IP Address \(→page 164\)"](#) has not been configured cannot be configured as transfer destinations.

■ Absent Transfer

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure whether to set absent transfer. The setting can also be changed using the button on the station main unit. If "Transfer Destination List" is not configured, this cannot be set to "Enable."
Settings	<ul style="list-style-type: none"> • Enable: Set absent transfer. • Disable: Do not set absent transfer.
Default value	Disable

Transfer Destination List

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the transfer destination station (station number) and Mobile App when performing absent transfer. Up to 10 stations can be configured as transfer destinations (when registering a Mobile App, 9 stations and a single unit containing the Mobile App). However, if the call originating station is IX-DA or IX-BA, calls will only be transferred to the station entered for "No.01." To configure a station, enter the station number or click [Select Station] to select one. To configure a Mobile App, click "Mobile App" - [Select] . Select the unit containing the Mobile App to register as a transfer destination, and then click [OK] .
Settings	Multiple building system: 3-24 digits Single building system: 3-5 digits
Default value	-



Note

- To register a "Mobile App," first register the "Mobile App" in "[Mobile App List \(→page 190\)](#)". A "Mobile App" registered in a "Mobile App List" can be registered as a transfer destination "Mobile App."

Re-Transfer Destination

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the transfer destination station (station number) and Mobile App when performing absent transfer again for a transferred call. Only a single station can be configured as a transfer destination. However, if the call originating station is IX-DA or IX-BA, the call will arrive without being retransferred. To configure a station, enter the station number or click [Select Station] to select one. To configure a Mobile App, click "Mobile App" - [Select] . Select the unit containing the Mobile App to register as a transfer destination, and then click [OK] .
Settings	Multiple building system: 3-24 digits Single building system: 3-5 digits
Default value	-



Note

- To register a "Mobile App," first register the "Mobile App" in "[Mobile App List \(→page 190\)](#)".
A "Mobile App" registered in a "Mobile App List" can be registered as a transfer destination "Mobile App."
- When configuring a Entrance Station or Door Station as a transfer destination, configure only a single Entrance Station or Door Station. If multiple stations are configured, calls will not be transferred to the Entrance Station or Door Station.

9.2 Delay Transfer

Configure the settings for delay transfer.

Delay Transfer: If an incoming call is received during delay transfer, the call can be automatically transferred to the transfer destination after a certain period of time (the set delay time) elapses with no response.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

! Important

- Stations in which ["IP Address \(→page 164\)"](#) has not been configured cannot be configured as transfer destinations.

■ Delay Transfer

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select Enable / Disable for Delay Transfer. If "Transfer Destination List" is not configured, this cannot be set to "Enable."
Settings	<ul style="list-style-type: none"> Enable: Delay transfer enabled. Disable: Delay transfer disabled.
Default value	Disable

■ Delay Time [sec]◆

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the delay time between receiving and transferring a call.
Settings	1-300 seconds (by 1 sec.)
Default value	30sec

Transfer Destination List

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the transfer destination station (station number) and Mobile App when performing delay transfer. Up to 10 stations can be configured as transfer destinations (when registering a Mobile App, 9 stations and a single unit containing the Mobile App). However, if the call originating station is IX-DA or IX-BA, calls will only be transferred to the station entered for "No.01." To configure a station, enter the station number or click [Select Station] to select one. To configure a Mobile App, click "Mobile App" - [Select] . Select the unit containing the Mobile App to register as a transfer destination, and then click [OK] .
Settings	Multiple building system: 3-24 digits Single building system: 3-5 digits
Default value	-



Note

- To register a "Mobile App," first register the "Mobile App" in "[Mobile App List \(→page 190\)](#)". A "Mobile App" registered in a "Mobile App List" can be registered as a transfer destination "Mobile App."

Re-Transfer Destination

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the transfer destination station (station number) and Mobile App when performing delay transfer again for a transferred call. Only a single station can be configured as a transfer destination. However, if the call originating station is IX-DA or IX-BA, the call will arrive without being retransferred. To configure a station, enter the station number or click [Select Station] to select one. To configure a Mobile App, click "Mobile App" - [Select] . Select the unit containing the Mobile App to register as a transfer destination, and then click [OK] .
Settings	Multiple building system: 3-24 digits Single building system: 3-5 digits
Default value	-



Note

- To register a "Mobile App," first register the "Mobile App" in "[Mobile App List \(→page 190\)](#)".
A "Mobile App" registered in a "Mobile App List" can be registered as a transfer destination "Mobile App."
- When configuring a Entrance Station or Door Station as a transfer destination, configure only a single Entrance Station or Door Station. If multiple stations are configured, calls will not be transferred to the Entrance Station or Door Station.

9.3 Schedule Transfer

Configure the settings for Schedule Transfer.

Schedule Transfer: A call can be automatically transferred to a transfer destination when an incoming call is received during the time period set in ["Weekly Schedule \(→page 248\)"](#) and ["Daily Schedule \(→page 251\)"](#).

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Weekly schedule

Select the day and schedule range to configure. The Settings screen will be shown.

["Weekly Schedule \(→page 248\)"](#)

["Daily Schedule \(→page 251\)"](#)

Move to Related Settings

Moves to the selected item within the same Settings screen.



Important

- Stations in which ["IP Address \(→page 164\)"](#) has not been configured cannot be configured as transfer destinations.
- Incoming calls will be transferred during the time period set in "Schedule Transfer," regardless of the settings in ["Absent Transfer \(→page 243\)"](#) and ["Delay Transfer \(→page 245\)"](#).

■ Schedule Transfer

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select Enable / Disable for Schedule Transfer. If "Weekly Schedule (→page 248)" or "Daily Schedule (→page 251)" is not configured, this cannot be set to "Enable."
Settings	Enable: Schedule transfer enabled. Disable: Schedule transfer disabled.
Default value	Disable

9.3.1 Weekly Schedule

Configure the transfer destination and transfer time for every day from Sunday through Saturday. 12 schedules can be set for each day.

Transfer Destination List

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the transfer destination station (station number) and Mobile App when performing schedule transfer. <ul style="list-style-type: none"> Up to 10 stations can be configured as transfer destinations for each of 12 day schedules (when registering a Mobile App, 9 stations and a single unit containing the Mobile App). However, if the call originating station is IX-DA or IX-BA, calls will only be transferred to the station entered for "No.01." To configure a station, enter the station number or click [Select Station] to select one. To configure a Mobile App, click "Mobile App" - [Select] . Select the unit containing the Mobile App to register as a transfer destination, and then click [OK] .
Settings	Multiple building system: 3-24 digits Single building system: 3-5 digits
Default value	-

Note

- To register a "Mobile App," first register the "Mobile App" in "[Mobile App List \(→page 190\)](#)". A "Mobile App" registered in a "Mobile App List" can be registered as a transfer destination "Mobile App."

Re-Transfer Destination

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the transfer destination station (station number) and Mobile App when performing schedule transfer again for a transferred call. Only a single station can be configured as a transfer destination for each of the 12 day schedules. However, if the call originating station is IX-DA or IX-BA, the call will arrive without being retransferred. To configure a station, enter the station number or click [Select Station] to select one. To configure a Mobile App, click "Mobile App" - [Select] . Select the unit containing the Mobile App to register as a transfer destination, and then click [OK] .
Settings	Multiple building system: 3-24 digits Single building system: 3-5 digits
Default value	-

Note

- To register a "Mobile App," first register the "Mobile App" in "[Mobile App List \(→page 190\)](#)". A "Mobile App" registered in a "Mobile App List" can be registered as a transfer destination "Mobile App."

■ Start Time

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the Start Time to enable schedule transfer.
Settings	00:00 - 23:59
Default value	-

■ End Time


Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the time at which to end schedule transfer. If set earlier than "Start Time," the end time will be the time the following day.
Settings	00:00 - 23:59
Default value	-

 **Note**

- When configuring a Entrance Station or Door Station as a transfer destination, configure only a single Entrance Station or Door Station. If multiple stations are configured, calls will not be transferred to the Entrance Station or Door Station.

How to configure schedule display

Configure the day and schedule range shown on the Settings screen for the weekly schedule. The display can be filtered to show only the day and schedule to configure. Click **[Schedule View Adjustment]**. The following screen will be shown.

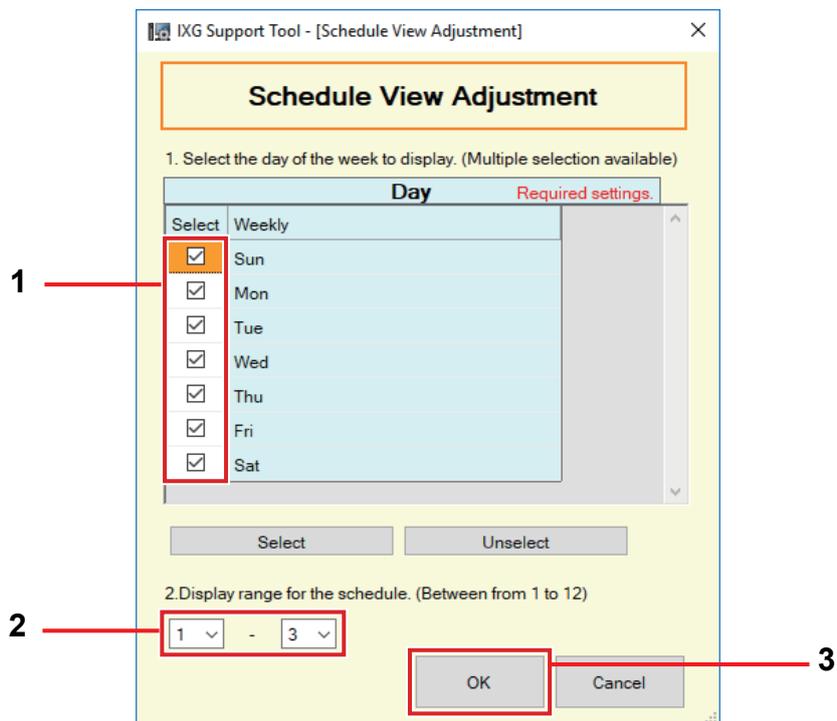

1. Select the day to display from "Day." (Multiple selections allowed.)
 - To select or unselect all days at once, click **[Select]** or **[Unselect]**.
 - By default, all days are shown.
2. Select the range of schedules to display (1 - 12) that can be configured for each day.
 - By default, the range of 1 - 3 is displayed.
3. Click **[OK]**.
 - Click **[Cancel]** to finish configuring the schedule display.

9.3.2 Daily Schedule

Configure the transfer destination and time for each individual day.

A schedule one year from the set day can be configured. 12 schedules can be set for each day.


Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.
[Previous]: Display the previous 50 rows.
[Next]: Display the next 50 rows.
[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Daily schedule


Select the date and schedule range to configure. The Settings screen is displayed.

1. Select the date from the drop down menu.
2. Select the range of schedules to display (1 - 12) that can be configured for each day.
 - By default, the range of 1 - 3 is displayed.
3. Click **[Change to Daily Schedule Display]**.

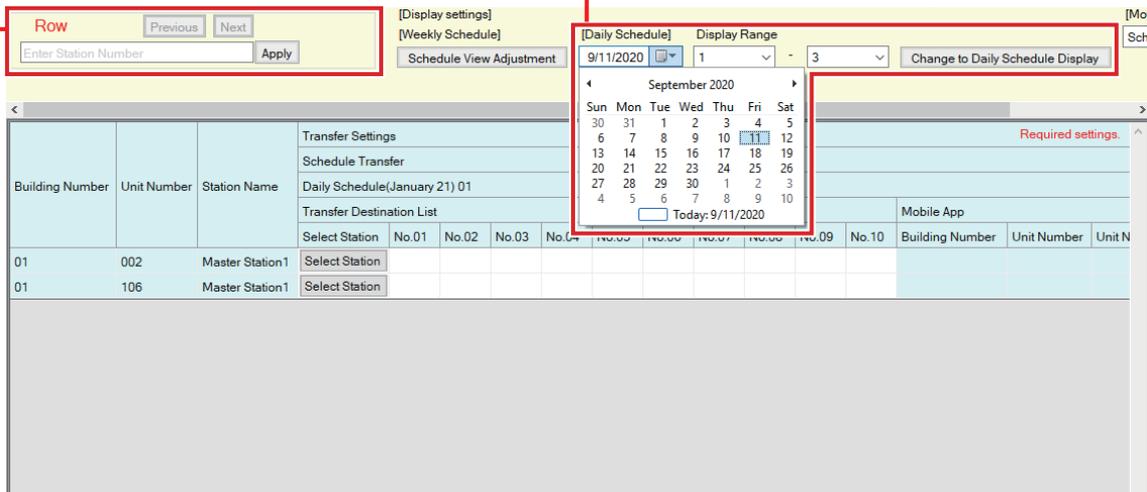

Transfer Destination List

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the transfer destination station (station number) and Mobile App when performing schedule transfer. Up to 10 stations can be configured as transfer destinations for each of 12 day schedules (when registering a Mobile App, 9 stations and a single unit containing the Mobile App). However, if the call originating station is IX-DA or IX-BA, calls will only be transferred to the station entered for "No.01." To configure a station, enter the station number or click [Select Station] to select one. To configure a Mobile App, click "Mobile App" - [Select] . Select the unit containing the Mobile App to register as a transfer destination, and then click [OK] .
Settings	Multiple building system: 3-24 digits Single building system: 3-5 digits
Default value	-

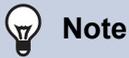**Note**

- To register a "Mobile App," first register the "Mobile App" in "[Mobile App List \(→page 190\)](#)". A "Mobile App" registered in a "Mobile App List" can be registered as a transfer destination "Mobile App."

■ Re-Transfer Destination


Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the transfer destination station (station number) when performing schedule transfer again for a transferred call. Only a single station can be configured as a transfer destination for each of the 12 day schedules. However, if the call originating station is IX-DA or IX-BA, the call will arrive without being retransferred. Enter the station number or click [Select Station] to select one. To configure a Mobile App, click "Mobile App" - [Select] . Select the unit containing the Mobile App to register as a transfer destination, and then click [OK] .
Settings	Multiple building system: 3-24 digits Single building system: 3-5 digits
Default value	-

■ Start Time

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the Start Time to enable schedule transfer.
Settings	00:00 - 23:59
Default value	-

■ End Time

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the time at which to end schedule transfer. If set earlier than "Start Time," the end time will be the time the following day.
Settings	00:00 - 23:59
Default value	-

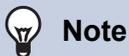**Note**

- When configuring a Entrance Station or Door Station as a transfer destination, configure only a single Entrance Station or Door Station. If multiple stations are configured, calls will not be transferred to the Entrance Station or Door Station.

10. Station Settings

10.1 Speed Dials

Configure the Speed Dials settings for IX-MV7-*.
 Select the Speed Dial number to configure in **[Display settings]**.

Move row
 Up to 50 station number rows can be displayed at a time. Switch the screen as follows.
[Previous]: Display the previous 50 rows.
[Next]: Display the next 50 rows.
[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Display settings
 Settings for the selected Speed Dial button number are displayed.

Building Number	Unit Number	Station Name	Station Settings Required settings. ^							
			Speed Dials							
Speed Dial 1										
Speed Dial Button Name			Function	Building Page	All Page	Option Relay Control				
			Priority	Priority	Total	Select Station	Output Time Range	Output Time	TLS	
01	002	Master Station1	No Function			0	Select Station	0 (Momentary)	0	Disable
01	106	Master Station1	No Function			0	Select Station	0 (Momentary)	0	Disable

10.1.1 Advanced Speed Dial Button Settings

Select the functions to assign to each Speed Dial button.
 Up to eight Speed Dials can be configured.

10.1.1.1 Speed Dial Button Name

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the Speed Dial Name.
Settings	1-24 alphanumeric characters The entire name may not be shown on the station screen, depending on the number of characters.
Default value	-

! Important

- Enter speed dial button names using the language set in "[Language \(→page 145\)](#)". However, if the language (configured on the station main unit) displayed on the screen for IX-MV7-* is different from the language set with "Language," the characters displayed on the station screen may appear incorrectly. To avoid this, enter information using alphabetical characters only.

10.1.1.2 Function

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure functions for Speed Dials. The functions that can be selected vary by station. Refer to " How to configure option relays (→page 254) " for information on how to configure advanced settings for each function.
Settings	<ul style="list-style-type: none"> • No Function • Option Relay Control: Control another station's contact output. Control of the contact output for IXG-DM7(-*), IXG-2C7(-*), IXGW-LC, IX-DA, and IX-BA cannot be implemented.
Default value	No Function

How to configure option relays

Configure this if "Option Relay Control" was selected in "[Function \(→page 254\)](#)".

💡 Note

- When controlling contact output for multiple stations, processing may take some time and control may be delayed.

■ Total

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure a station to control contact output. Cannot be configured for IXG-DM7(-*), IXG-2C7(-*), IXGW-LC, IXGW-GW, IX-DA, and IX-BA. Click [Select Station] to select. Multiple stations (infinite) can be selected.
Settings	The number of selected stations is displayed.
Default value	0

! Important

- Stations for which the "IP Address" has not been configured cannot be configured as stations to perform control.

■ Output Time Range

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select the Output Time Range for relay output.
Settings	<ul style="list-style-type: none"> • 0 (Momentary): Press the Speed Dials to continuously output contact. Press the Speed Dials again to stop contact output. • 200-2000 [msec] • 3-600 [sec]
Default value	0 (Momentary)

■ Output Time ◆

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the output time for contact output within the range set in "Output Time Range."
Settings	The setting value will be configured as follows according to the information set in "Output Time Range." <ul style="list-style-type: none"> • If set to 0 (Momentary): Configuration unnecessary. • If set to 200-2000 [msec]: Configure from 200-2000 msec (by 200 msec). • If set to 3-600 [sec]: Configure from 3-600 seconds (by 1 sec).
Default value	0

■ TLS

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure whether to use encryption for option relay communication. If set to "Enable," configure "Option Relay Control Key" and "Relay Output" - " Option Relay Control Authentication Key (→page 215) ".
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Disable



Important

- If "TLS" is set to "Enable," control may take some time if there are multiple stations to control.

■ Option Relay Control Key

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	If "TLS" is set to "Enable," configure the encryption key for option relay communication. Contact output can be controlled when it matches the authentication key of the destination station set in "Relay Output" - " Option Relay Control Authentication Key (→page 215) ".
Settings	1-20 digits
Default value	-

10.2 Volume

Configure the volume and other sound settings.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

The screenshot shows a control panel with a 'Row' label, 'Previous' and 'Next' buttons, an input field 'Enter Station Number', and an 'Apply' button. Below it is a table with columns: Building Number, Unit Number, Station Name, Station Settings (Volume / Tone), and Required settings. The Volume / Tone section is expanded to show Volume settings: Hands-free Transmit, Transmit, Receive, and Paging. The table contains three rows of data.

Building Number	Unit Number	Station Name	Station Settings				Headset Specification	Audio Output
			Volume / Tone					
			Volume					
			Hands-free Transmit	Transmit	Receive	Paging		
01	001	Entrance Station1		10	6	6		
01	002	Master Station1	10				Mic Device	External speaker output for Ringtone, built-in speaker for Communic
01	002	Video Door Station1		10	6	6		

10.2.1 Volume

■ Hands-free Transmit

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the hands-free transmit volume while communicating and paging.
Settings	1 (Low) - 10 (High) IX-MV7-* is set to "10" and cannot be changed.
Default value	10

■ Transmit

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the transmit volume while communicating and being monitored.
Settings	1 (Low) - 10 (High)
Default value	10

Receive

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input checked="" type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the receive volume during communication or paging (except for IXG-DM7(-*), IX-DV, IX-DVF(-*), IX-SSA(-*)). The ringback tone volume will also be changed. Use " Paging (→page 257)" to configure the receive volume during paging for IXG-DM7(-*), IX-DV, IX-DVF(-*), and IX-SSA(-*).
Settings	1 (Low) - 10 (High)
Default value	6

Paging

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the volume while receiving page.
Settings	0 (Off), 1 (Low) - 10 (High)
Default value	6

10.2.2 Headset Specification

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the device to be connected to the headset jack.
Settings	<ul style="list-style-type: none"> • Mic Device • Headset Device IXG-2C7(-*) is set to "Mic Device" and cannot be changed.
Default value	Mic Device

10.2.3 Audio Output

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set using External speaker for Ringtone, Paging Pretone and Paging.
Settings	<ul style="list-style-type: none"> • External speaker output for Ringtone, built-in speaker for Communication • External speaker output for Paging Pretone, built-in speaker for Paging • External speaker output for Ringtone, Paging Pretone and Paging, built-in speaker for Communication IXG-2C7(-*) is set to "External speaker output for Ringtone, built-in speaker for Communication" and cannot be changed.
Default value	External speaker output for Ringtone, built-in speaker for Communication



Note

- The tone will play from the speaker of the station even if audio is heard from the external speaker.

10.3 Communication

Configure the settings for a call.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

The screenshot shows a control panel at the top with a 'Row' label, 'Previous' and 'Next' buttons, an input field for 'Enter Station Number', and an 'Apply' button. Below this is a table with columns for Building Number, Unit Number, Station Name, and Station Settings. The Station Settings column is further divided into Communication and Communication Start Tone. The table lists three stations: Entrance Station 1, Video Door Station 1, and Video Door Station 1, all with 'None' for the Communication Start Tone. A red box highlights the 'Row' control panel. A red text label 'Required settings.' is visible in the top right corner of the table area.

Building Number	Unit Number	Station Name	Station Settings
			Communication
01	001	Entrance Station 1	None
01	002	Video Door Station 1	None
01	003	Video Door Station 1	None

■ Communication Start Tone

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select the tone to be played when communication starts.
Settings	<ul style="list-style-type: none"> • None • Call Pattern 1 (except for IXG-DM7(-*)) • Call Pattern 2 (except for IXG-DM7(-*)) • Call Pattern 3 (except for IXG-DM7(-*)) • Call Pattern 4 (except for IXG-DM7(-*)) • Call Pattern 5 (except for IXG-DM7(-*)) • Call Pattern 6 (except for IXG-DM7(-*)) • Call Pattern 7 (IX-EA (U), IX-FA only) • Tremolo Sound (except for IXG-DM7(-*)) • Busy Response Tone (except for IXG-DM7(-*)) • On Hold (except for IXG-DM7(-*)) • Operation Sound (except for IXG-DM7(-*)) • Error (except for IXG-DM7(-*)) • Pre Tone 1 (except for IXG-DM7(-*)) • Pre Tone 2 (except for IXG-DM7(-*)) • Pre Tone 3 (except for IXG-DM7(-*)) • Communication End Pretone (except for IXG-DM7(-*)) • Call Queue Notification (except for IXG-DM7(-*)) • Waiting Reply Tone (except for IXG-DM7(-*)) • Audio Guidance (IXG-DM7(-*) only) • Select a sound that is registered in "Custom Sound Registry (→page 199)".
Default value	None

10.4 Monitoring

Configure monitoring-related settings.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Building Number	Unit Number	Station Name	Station Settings	
			Monitoring	
			Prevent Being Monitored	Monitoring Notification Tone
01	001	Entrance Station1	Disable	None
01	002	Video Door Station1	Disable	None
01	003	Video Door Station1	Disable	None
01	101	Video Door Station1	Disable	None

10.4.1 Prevent Being Monitored

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select Enable / Disable to prevent being monitored.
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Disable

10.4.2 Monitoring Notification Tone

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select the tone to be played when monitored by another station.
Settings	<ul style="list-style-type: none"> • None • Call Pattern 1 • Call Pattern 2 • Call Pattern 3 • Call Pattern 4 • Call Pattern 5 • Call Pattern 6 • Call Pattern 7 (IX-EA (U), IX-FA only) • Tremolo Sound • Busy Response Tone • On Hold • Operation Sound • Error • Pre Tone 1 • Pre Tone 2 • Pre Tone 3 • Communication End Pretone • Call Queue Notification • Waiting Reply Tone • Select a sound that is registered in "Custom Sound Registry (→page 199)". IXG-DM7(-*) is set to "None" and cannot be changed.
Default value	None

10.5 Camera

Configure camera settings.

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

The screenshot shows a control panel with a 'Row' label, 'Previous' and 'Next' buttons, an input field 'Enter Station Number', and an 'Apply' button. Below this is a table titled 'Station Settings' with a 'Required settings.' indicator. The table has columns for Building Number, Unit Number, Station Name, and various camera adjustment settings.

Building Number	Unit Number	Station Name	Station Settings Required settings. ^						
			Adjustment		Night Illumination LED		PTZ Preset Position	Zoom / Wide Preset	Refresh Rate
			Backlight Compensation	Low Light Correction	Call / Communication	When Monitored			
01	001	Entrance Station1	Disable	Disable	Enable	Disable	Center	Wide	60Hz
01	002	Video Door Station1	Disable	Disable	Enable	Disable			
01	003	Video Door Station1	Disable	Disable	Enable	Disable			

10.5.1 Adjustment

■ Backlight Compensation

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	During an outgoing call or monitoring, video with backlight compensation adjustment will be sent to the destination station. The adjustment can be removed through operation by the destination station.
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Disable

■ Low Light Correction

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Send an video on which low light sensitivity has been performed to the destination station, when dark video is captured at night, etc. when a call is made or when being monitored. The adjustment can be removed through operation by the destination station.
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Disable

10.5.2 Night Illumination LED


■ Call / Communication

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select Enable / Disable for white LED while calling or communicating in low light situation.
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Enable

■ When Monitored

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input checked="" type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select Enable / Disable for white LED while being monitored in low light situation.
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Disable

10.5.3 PTZ Preset Position

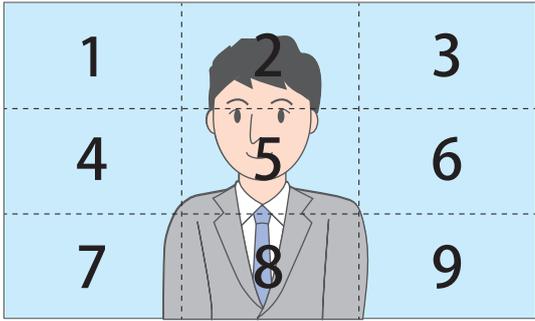Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	If " Zoom / Wide Preset (→page 263) " is set to "Zoom," configure the zoom position of the video sent to the destination station when an outgoing call is made.
Settings	<p>Top Left(1), Up(2), Top Right(3), Left(4), Center(5), Right(6), Bottom Left(7), Down(8), Bottom Right(9)</p> 
Default value	Center

10.5.4 Zoom / Wide Preset

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure whether to send zoomed video or wide video to the destination station when an outgoing call is made. If set to "Zoom," a video of the area set in "PTZ Preset Position (→page 262)" will be sent.
Settings	<ul style="list-style-type: none"> • Zoom • Wide
Default value	Wide

10.5.5 Refresh Rate

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Select the refresh rate of the selected Entrance Station.
Settings	<ul style="list-style-type: none"> • 50Hz • 60Hz
Default value	60Hz

11. Entrance Station Settings


11.1 Display

Building Number	Unit Number	Station Name	Entrance Station Settings Required settings.					
			Display					
			Call by Unit Number	Call by List	Search by Name	Default Display Screen	Building Selection Button	Hearing aid Icon
01	001	Entrance Station1	Enable	Enable	Disable	Call by Unit Number Screen	Disable	Disable


■ Call by Unit Number

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	<p>Configure whether to use Call by Unit Number function.</p> <p>Call by Unit Number: The person to visit can be called by entering the unit number.</p> <div style="text-align: center;"> <p>Call by Unit Number Screen</p> </div>
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Enable

■ Call by List

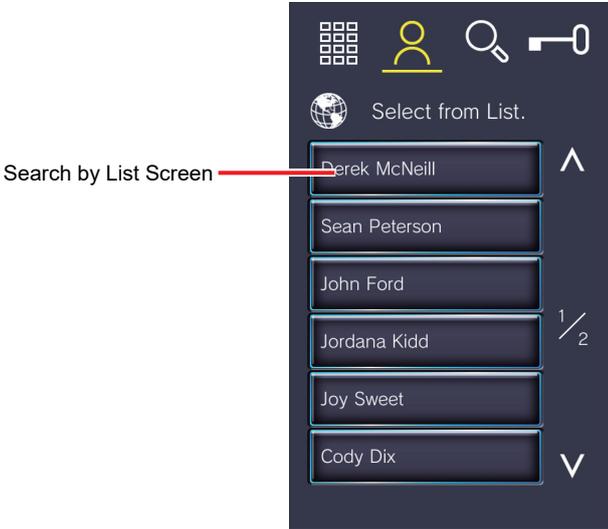Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	<p>Configure whether to use Call by List function.</p> <p>Call by List: The person to visit can be called by selecting them from the Direct Call List.</p> 
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Disable

■ Search by Name

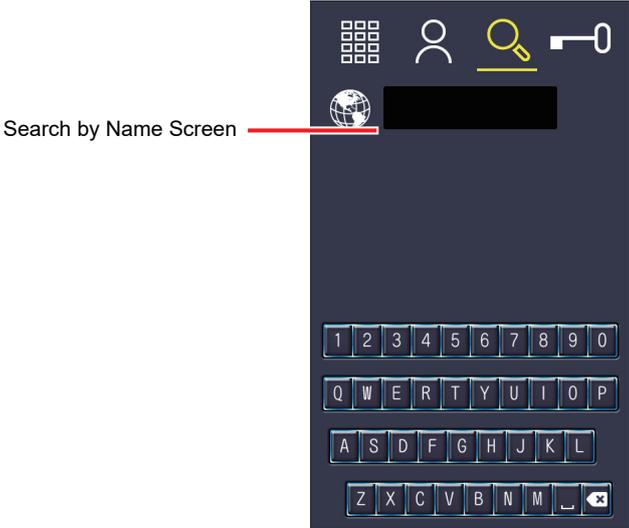Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	<p>Configure whether to use Search by Name function.</p> <p>Search by Name: The person to visit can be called by searching for them using the keyboard and selecting them from the search results.</p> 
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Disable


 **Note**

- If "[Language \(→page 145\)](#)" is set to "Japanese," " 繁體中文 ," or " 简体中文 ," this will be set to "Disable" and cannot be changed.

■ **Default Display Screen**

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the first operation screen displayed when calling a person to visit.
Settings	Select from the function screens for which " Call by Unit Number (→page 264) ", " Call by List (→page 265) ", or " Search by Name (→page 265) " has been set to "Enable." <ul style="list-style-type: none"> • Door Release Keypad • Call by Unit Number Screen • Search by List Screen • Search by Name Screen
Default value	Call by Unit Number Screen

■ **Building Selection Button**

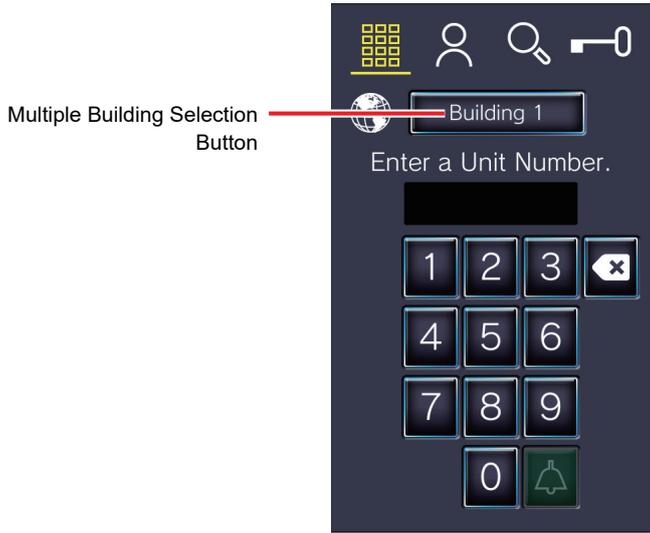Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure whether to use the Building Selection Button in a Multiple Building System. If set to "Enable," the Building Selection Button will be displayed on the Call by Unit Number Screen to allow a unit in another building to be called. <div style="text-align: center;">  <p>Multiple Building Selection Button</p> </div>
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Disable

■ Hearing aid icon

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	<p>Configure whether to display the Hearing aid Icon on the screen.</p> 
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Disable

11.2 Welcome Screen

An image may be set as a Welcome Screen to be displayed prior to seeing the operation screen.

Building Number	Unit Number	Station Name	Entrance Station Settings				Required settings.
			Welcome Screen Settings				
			Welcome Screen Wallpaper	Image1			
Display	File name	...		Delete			
01	001	Entrance Station1	<input checked="" type="checkbox"/>	<input type="checkbox"/>		...	<input type="checkbox"/>

11.2.1 Welcome Screen Wallpaper

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure whether to display the Welcome Screen.
Settings	<ul style="list-style-type: none"> • Checked: Enable • Unchecked: Disable
Default value	Checked: Enable

11.2.2 Image 1

Register the image to display if "Checked: Enable" was set in "Welcome Screen Wallpaper."
If no image is registered, the default Welcome Screen will be displayed.

■ Display

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure whether to display the registered image on the Welcome Screen. Only a single image file can be displayed. 
Settings	<ul style="list-style-type: none"> • Checked: Enable • Unchecked: Disable
Default value	Unchecked: Disable

■ File name

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Register an image to display on the Welcome Screen. <ul style="list-style-type: none"> • Message File Name: Up to 64 bytes of alphanumeric characters (including extension) • File format: PNG • Resolution: <ul style="list-style-type: none"> Width: 480 pixels Height: 800 pixels
Settings	OK: Click [Browse] to select a file. To delete, place a check next to the [Delete] box.
Default value	—

11.3 Direct Call List

If 'Display' - ["Call by List \(→page 265\)"](#) is set to "Enable," configure the units to display in the list.

Building Number	Unit Number	Station Name	Entrance Station Settings Required settings.							
			Direct Call List							
			Button Number1		Button Number2		Button Number3		Button Number4	
Building Number	Unit Number	Building Number	Unit Number	Building Number	Unit Number	Building Number	Unit Number	Building Number	Building Number	
01	001	Entrance Station1								

11.3.1 Button Number

Up to 100 units can be configured for Button Numbers.

■ Building Number

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Enter the building number of the unit to call on the Search by List Screen.
Settings	01-99
Default value	—

■ Unit Number

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Enter the unit number of the unit to call on the Search by List Screen.
Settings	3-10 digits
Default value	—

11.4 Access Code

Set the access code for each unit used at the Entrance Station to open the door.

Filter

Building Number / Building Name: Select the building to display.

Station Number / Station Name: Select the station to display and then click **[Apply]**. The access codes for each unit will be displayed.

["How to configure access codes \(→page 271\)"](#)

["Add Access Code \(→page 273\)"](#)

["Delete Access Code \(→page 274\)"](#)

Filter

Building Number / Building Name: Apply

Station Number / Station Name:

Length:

Add Access Code

Delete Access Code

Building Number	Unit Number	Unit Name	Entrance Station Settings			Required settings.
			Access Code	Access Code		
				Relay Output 1	Relay Output 2	
01	002	Inside Area 002				
01	003	Outside Area 003				
01	101	Residential101				
01	102	Residential102				
01	103	Residential103				
01	104	Residential104				
01	105	Residential105				
01	106	Commercial106				
01	201	Residential201				
01	202	Residential202				
01	203	Residential203				
01	204	Residential204				
01	205	Residential205				

How to configure access codes

1. Use "Filter" to select the Entrance Station for which to configure an access code, and then click **[Apply]**.
 - The Settings screen for the selected Entrance Station will be displayed.
2. Enter the "Length."
 - Length: 1-20 digits (default value: 4 digits)

3. Enter the access code for each unit.
 - Access Code: Configure using the number of digits set in Step 2.
 - If "Door Release" was set for Relay Output 1 for the Entrance Station in "Relay Output" - ["Function \(→page 213\)"](#), enter "A"+"Access Code" when releasing the door using the Entrance Station.
 - If "Door Release" was set for Relay Output 2 for the Entrance Station in "Relay Output" - ["Function \(→page 213\)"](#), enter "B"+"Access Code" when releasing the door using the Entrance Station.

Filter
Length

Building Number / Building Name Apply

Station Number / Station Name

Add Access Code Delete Access Code

Building Number	Unit Number	Unit Name	Entrance Station Settings			Required settings.
			Access Code	Access Code		
				Relay Output 1	Relay Output 2	
01	002	Inside Area 002	1111	A1111		
01	003	Outside Area 003				
01	101	Residential101				
01	102	Residential102				
01	103	Residential103				
01	104	Residential104				
01	105	Residential105				
01	106	Commercial106				
01	201	Residential201				
01	202	Residential202				
01	203	Residential203				

4. Click **[Update]**.
5. Click **[OK]**.

11.4.1 Add Access Code

Configure the access code for each unit.

Click **[Add Access Code]**. The "Add Access Code" screen will be displayed.

IXG Support Tool - [Add Access Code]

Access Code

Select a Unit to associate to this Access Code.

Building Number

Unit Number

Select Entrances to release the door by this Access Code.

Select	Building Number	Unit Number	Station Name	Length
<input type="checkbox"/>	01	001	Entrance Station1 4	

Required settings.

Add Cancel

■ How to add Access Codes

1. Enter the "Access Code."
 - Access Code: Configure using the number of digits set in Step 2 of ["How to configure access codes \(→page 271\)"](#).
2. Select the "Building Number" of the unit to assign the access code, and then enter the "Unit Number."
3. Select the Entrance Station where to add the access code. (Multiple selections allowed.)
4. Click **[Add]**.
 - Click **[Cancel]** to exit.
5. Click **[Update]**.
6. Click **[OK]**.


 **Note**

- To confirm the configured access codes, use "Filter" to select the "Building Number / Building Name" and "Station Number / Station Name" for the Entrance Station, and then click **[Apply]**.

11.4.2 Delete Access Code

Delete registered access codes.

Click **[Delete Access Code]**. The "Delete Access Code" screen will be displayed.

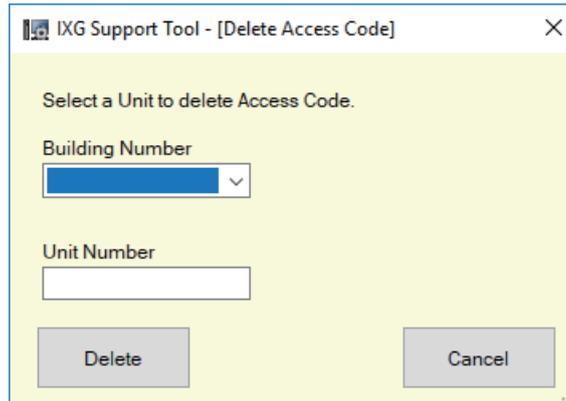

■ How to delete access codes

1. Select the "Building Number" of the unit to delete an access code, and then enter the "Unit Number."
2. Click **[Delete]**.
 - Click **[Cancel]** to exit.
3. Click **[Update]**.
4. Click **[OK]**.

 **Note**

- To confirm whether an access code was deleted, use "Filter" to select the "Building Number / Building Name" and "Station Number / Station Name" for the Entrance Station, and then click **[Apply]**.

11.5 Misc.

Building Number	Unit Number	Station Name	Entrance Station Settings		Required settings.
			Misc.		
			Motion Sensor	Communication after Door Release	
01	001	Entrance Station1	Enable	Continue Communication	

■ Motion Sensor

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure whether to enable the motion sensor function on the Entrance Station. If set to "Enable," it will detect the motion of guests and display them the screen.
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Enable

■ Communication after Door Release

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure whether to automatically end or continue communication when the door is released during a call or communication.
Settings	<ul style="list-style-type: none"> • End Communication • Continue Communication
Default value	Continue Communication

12. Lift Control Settings

12.1 Registration

Register a Lift Control Adaptor if integrated with an elevator. Up to 16 Lift Control Adaptors can be registered in each building.

Building Number	Adaptor Number	Lift Control Settings		Required settings.
		Registration		
		Enable	Station Name	
01	1	<input checked="" type="checkbox"/>	Lift Control Adaptor1	
01	2	<input type="checkbox"/>		
01	3	<input type="checkbox"/>		
01	4	<input type="checkbox"/>		
01	5	<input type="checkbox"/>		
01	6	<input type="checkbox"/>		
01	7	<input type="checkbox"/>		
01	8	<input type="checkbox"/>		
01	9	<input type="checkbox"/>		
01	10	<input type="checkbox"/>		
01	11	<input type="checkbox"/>		

■ Enable

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure whether to use the Lift Control Adaptor.
Settings	<ul style="list-style-type: none"> • Checked: Enable • Unchecked: Disable
Default value	Unchecked: Disable

! Important

- If data associated with a Lift Control Adaptor has already been set, setting this to "Unchecked: Disable" will delete all data associated with the Lift Control Adaptor.

■ Station Name ◆

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the name of the Lift Control Adaptor. The configured station name will be displayed in IXG Supervision Tool.
Settings	1-24 alphanumeric characters
Default value	If "Enable" is set to "Checked: Enable," this will be set in order starting from Lift Control Adaptor 1.

12.2 Pick Up Floor

Configure the relay output terminal for the Lift Control Adaptor that performs contact output when an outgoing call is made or a door release operation is performed on the Entrance Station.

Filter

Building Number / Building Name: Select the building to display.

Adaptor Number / Name: Select the station to display and then click **[Apply]**. The Settings screen for the selected station is displayed.

Filter

Building Number / Building Name:

Adaptor Number / Name:

Building Number	Unit Number	Station Name	Lift Control Settings Required settings.																			
			Pickup Floor																			
			01/Lift Control Adaptor1																			
			Relay Output Terminal																			
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
01	001	Entrance Station1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

■ Relay Output Terminal

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the terminal to perform contact output when the person to visit is called from the Entrance Station or when the door is released using the access code.
Settings	<ul style="list-style-type: none"> • Checked: Activate • Unchecked: No Action
Default value	Unchecked: Do not control

12.3 Arrival Floor

Set the relay output terminal of the Lift Control Adaptor upon door release activation performed by the destination station (IXG-2C7(-*), IX-MV7-*, Intercom App) communicating with the Entrance Station.

Filter

Building Number / Building Name: Select the building to display.

Adaptor Number / Name: Select the station to display and then click **[Apply]**. The Settings screen for the selected station will be displayed.

Filter

Building Number / Building Name:

Adaptor Number / Name:


Building Number	Unit Number	Unit Name	Lift Control Settings Required settings.																			
			Arrival Floor																			
			01/Lift Control Adaptor1																			
			Relay Output Terminal																			
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
01	002	Inside Area 002	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	003	Outside Area 003	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	101	Residential101	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	102	Residential102	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	103	Residential103	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	104	Residential104	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	105	Residential105	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	106	Commercial106	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	201	Residential201	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	202	Residential202	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	203	Residential203	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	204	Residential204	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	205	Residential205	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	206	Guard206	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Relay Output Terminal

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the terminal that performs contact output when an entrance door release operation is performed on the destination station (IXG-2C7(-*), IX-MV7-*, Intercom App) while calling or communicating with the Entrance Station.
Settings	<ul style="list-style-type: none"> • Checked: Activate • Unchecked: No Action
Default value	Unchecked: Do not control

12.4 Building Exit

Configure whether to use the Lift Control Button on the Tenant Station. Also, configure the relay output of the Lift Control Adaptor when using the "Lift Control Button".

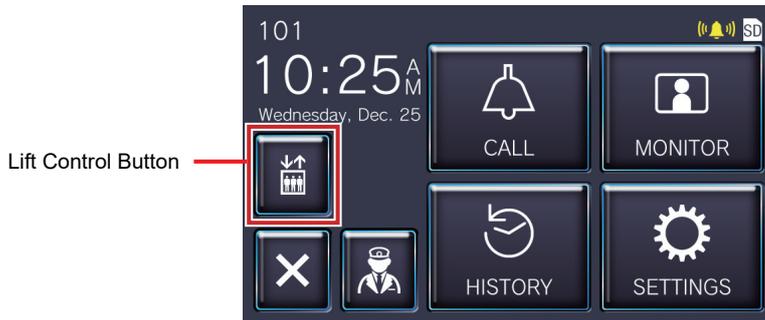

Filter

Building Number / Building Name: Select the building to display.

Adaptor Number / Name: Select the station to display and then click **[Apply]**. The Settings screen for the selected station will be displayed.

Filter

Building Number / Building Name:

Adaptor Number / Name:

Building Number	Unit Number	Unit Name	Lift Control Settings Required settings.																				
			Exit from the building																				
			Lift Control Button	01/Lift Control Adaptor1 Relay Output Terminal																			
				1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
01	101	Residential101	Disable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	102	Residential102	Disable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	103	Residential103	Disable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	104	Residential104	Disable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	105	Residential105	Disable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	201	Residential201	Disable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	202	Residential202	Disable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	203	Residential203	Disable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	204	Residential204	Disable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01	205	Residential205	Disable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

■ Lift Control Button

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure whether to use the Lift Control Adaptor control function on the Tenant Station. If this is set to "Enable," the "Lift Control Button" will be displayed on the Home Screen of the Tenant Station.
Settings	<ul style="list-style-type: none"> • Enable • Disable
Default value	Disable

■ Relay Output Terminal

Compatible type	<input type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input type="checkbox"/> IX-MV7-* <input type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input type="checkbox"/> IX-DV, IX-DVF(-*) <input type="checkbox"/> IX-SSA(-*) <input type="checkbox"/> IX-EA, IX-EAU <input type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Configure the terminal that performs contact output when the resident taps the "Lift Control Button" on the Tenant Station.
Settings	<ul style="list-style-type: none"> • Checked: Activate • Unchecked: No Action
Default value	Unchecked: Do not control

13. Maintenance

13.1 Firmware Update

Access our website at "<https://www.aiphone.net/>" to download the latest version of the firmware.

! Important

- To update the firmware, "[Association Settings \(→page 115\)](#)" must have been performed on the station to update, and the PC must be able to communicate with the system.
- If the firmware update is started while the station is operating (such as on a call), the operation will end and the firmware update will begin.
- If power is turned off while updating the firmware, the station may malfunction.
- The station will be inoperable while updating the firmware.
- When the firmware is updated, the station will be automatically restarted.
- The Gateway Adaptor firmware is automatically updated on the cloud server side at regular intervals.
- The Intercom App is not available for use while the Gateway Adaptor firmware is being updated.

Update Firmware

Select Firmware files:

IXG-2C7(-*)	<input type="text"/>	<input type="button" value="Browse"/>
IXG-DM7(-*)(Main)	<input type="text"/>	<input type="button" value="Browse"/>
IXG-DM7(-*)(Sub)	<input type="text"/>	<input type="button" value="Browse"/>
IXG-MK	<input type="text"/>	<input type="button" value="Browse"/>
IXGW-GW	<input type="text"/>	<input type="button" value="Browse"/>
IXGW-LC	<input type="text"/>	<input type="button" value="Browse"/>
IX-MV7-*	<input type="text"/>	<input type="button" value="Browse"/>
IX-DV,IX-DVF(-*)	<input type="text"/>	<input type="button" value="Browse"/>
IX-SSA(-*)	<input type="text"/>	<input type="button" value="Browse"/>
IX-EA,IX-EAU	<input type="text"/>	<input type="button" value="Browse"/>
IX-FA	<input type="text"/>	<input type="button" value="Browse"/>
IX-DA(-*)	<input type="text"/>	<input type="button" value="Browse"/>
IX-BA	<input type="text"/>	<input type="button" value="Browse"/>

1

Select Station(s) to update:
To check the current firmware version, go to "Tools -> Station Search".

Station List						Required settings.
Select	Building Number	Unit Number	Station Name	Station Type	Status	
<input checked="" type="checkbox"/>	01	001	Entrance Station1(Main)	IXG-DM7(-*)	-	
<input type="checkbox"/>	01	001	Entrance Station1(Sub)	IXG-DM7(-*)	-	
<input type="checkbox"/>	01	002	Master Station1	IX-MV7-*	-	
<input type="checkbox"/>	01	002	Master Station2	IX-MV7-*	-	
<input type="checkbox"/>	01	002	Video Door Station1	IX-DV,IX-DVF(-*)	-	
<input type="checkbox"/>	01	003	Video Door Station1	IX-DV,IX-DVF(-*)	-	
<input type="checkbox"/>	01	101	Tenant Station1	IXG-2C7(-*)	-	

2


Select Station by Type.

Update

3

How to update the firmware

1. Click **[Browse]** and select the firmware file for each station.
2. Select the station for which to update the firmware from "Station List." (Multiple selections allowed.)
 - To select or unselect stations in a batch, choose the station type and click **[Select]** or **[Unselect]**.
 - Stations in which ["Association Settings \(→page 115\)"](#) has not been performed cannot be selected.
3. Click **[Update]**.
 - The firmware update may take approximately ten minutes per station.
4. Click **[OK]**.
 - Click **[Cancel]** to return to the "Update Firmware" screen without updating.

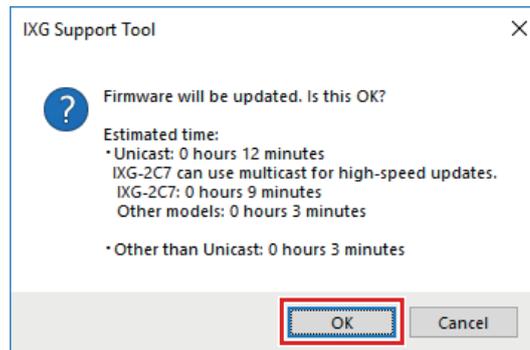

5. Click **[OK]**.
 - The result is displayed in "Station List" - "Status."
 - In Process: The firmware is being updated.
 - Success: Update successful.
 - Failed: Update failed. Try updating again.

13.2 Initialization

When initializing the station, all settings go back to the default values, and the system log and incoming/outgoing call history are erased.

Select	Building Number	Unit Number	Station Name	Station Type	Status	Required settings.
<input type="checkbox"/>	01	001	Entrance Station1	IXG-DM7(-*)	-	
<input type="checkbox"/>	01	002	Master Station1	IX-MV7-*	-	
<input type="checkbox"/>	01	002	Master Station2	IX-MV7-*	-	
<input type="checkbox"/>	01	002	Video Door Station1	IX-DV,IX-DVF(-*)	-	
<input type="checkbox"/>	01	003	Video Door Station1	IX-DV,IX-DVF(-*)	-	
<input type="checkbox"/>	01	101	Tenant Station1	IXG-2C7(-*)	-	
<input type="checkbox"/>	01	101	Tenant Station2	IXG-2C7(-*)	-	
<input type="checkbox"/>	01	101	Video Door Station1	IX-DV,IX-DVF(-*)	-	

How to initialize

- Select the station to initialize from "Station List." (Multiple selections allowed.)

 - To select or unselect stations in a batch, choose the station type and click **[Select]** or **[Unselect]**.
 - Stations in which ["Association Settings \(→page 115\)"](#) has not been performed cannot be selected.
- Click **[Initialization]** or **[Initialize User Settings]**.

 - Initialization: All of the settings return to the default values, and the system log is erased. The IXG-DM7(-*) also erases the recorded data on the microSD card. The IXG-2C7(-*) also erases the History and the recorded data on the microSD card. The IX-MV7-* also erase the Incoming Calls, Outgoing Calls, and the Missed Calls.
 - Initialize User Settings: Only the user settings are initialized. The IX-MV7-* also erase the Incoming Calls, Outgoing Calls, and the Missed Calls.

The IXG-2C7(-*) reverts all of the station settings to the default values and erases the system log, History, and the recorded data on the microSD card.

The IXG-DM7(-*), IXGW-LC, IXGW-GW, IX-DA, and IX-BA are not supported.
- Click **[OK]**.

 - Click **[Cancel]** to cancel initialization.
- Click **[OK]**.

 - The result is displayed in "Station List" - "Status."
 - In Process: Initializing station.
 - Success: Initialization successful.
 - Failed: Initialization failed. Try initializing again.
 - Unavailable: This is displayed when a station that cannot be initialized was selected in Step 1.

 **Important**

- The station will restart after initialization. In some cases, it may take up to 10 minutes for the station to restart. The station will be inoperable until restarting is completed.
- If initialization fails, the "Initialization failed." message will be displayed. If this happens, try initializing again.

13.3 syslog

Move row

Up to 50 station number rows can be displayed at a time. Switch the screen as follows.

[Previous]: Display the previous 50 rows.

[Next]: Display the next 50 rows.

[Apply]: Enter the station number and click **[Apply]** to move the cursor to the row of the station number that was entered.

Building Number	Unit Number	Station Name	Maintenance		Port
			syslog	IP Address	
			IPv4 Address	IPv6 Address	
01	001	Entrance Station1			514
01	002	Master Station1			514
01	002	Video Door Station1			514

■ IPv4 Address

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the IPv4 address for syslog server.
Settings	1.0.0.1-223.255.255.254 or hostname (1-64 alphanumeric characters)
Default value	-

■ IPv6 Address

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the IPv6 address for syslog server.
Settings	::FF:0-FE:FF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF or hostname (1-64 alphanumeric characters)
Default value	-

■ Port◆

Compatible type	<input checked="" type="checkbox"/> IXG-2C7(-*) <input type="checkbox"/> IXG-MK <input checked="" type="checkbox"/> IX-MV7-* <input checked="" type="checkbox"/> IXG-DM7(-*) <input type="checkbox"/> IX-DA <input type="checkbox"/> IX-BA <input checked="" type="checkbox"/> IX-DV, IX-DVF(-*) <input checked="" type="checkbox"/> IX-SSA(-*) <input checked="" type="checkbox"/> IX-EA, IX-EAU <input checked="" type="checkbox"/> IX-FA <input checked="" type="checkbox"/> IXGW-LC <input type="checkbox"/> IXGW-GW <input type="checkbox"/> Intercom App
Description	Set the port number of syslog server.
Settings	1-65535
Default value	514



Additional Settings




1. Confirming Station Information

1.1 Confirming Station Information on the Entrance Station

Confirm the following information on the Entrance Station.

- Main: The firmware version for the main CPU
- Sub: The firmware version for the sub CPU (IXG-DM7-HID only)
- Station Number
- IP Address
- Subnet Mask
- Default Gateway
- Mac Address

1. Enter "ABAB1234" using the keypad.

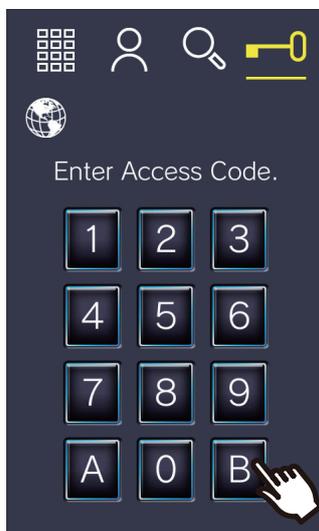

2. Confirm station information.



- Tap  to return to the previous screen.



Note

- If "Error" is displayed.
 - The access controller is turned off
 - The sub CPU is disconnected



<https://www.aiphone.net/>

AIPHONE CO., LTD., NAGOYA, JAPAN

Issue Date: Mar. 2020 © 0320 RQ 62129